

FOPETT V2020

FOPETT V2020 Wireless Keyboard and Mouse Set Instruction Manual

Model: V2020 | Brand: FOPETT

1. PRODUCT OVERVIEW

The FOPETT V2020 Wireless Keyboard and Mouse Set provides reliable 2.4 GHz connectivity for various devices. This full-size keyboard features comfortable round keys and multimedia hotkeys, while the silent mouse offers adjustable DPI for precise control. Both devices are designed for ergonomic comfort and ease of use.



Figure 1: FOPETT V2020 Pink Wireless Keyboard and Mouse Set

2. SETUP INSTRUCTIONS

2.1. Battery Installation

The keyboard and mouse require AA alkaline batteries (not included). Please follow the steps below for installation:

1. Open the battery compartment on the bottom of the keyboard and mouse.
2. Insert one AA alkaline battery into the keyboard, ensuring correct polarity.
3. Insert one AA alkaline battery into the mouse, ensuring correct polarity.
4. Replace the battery compartment covers securely.

Install Instructions

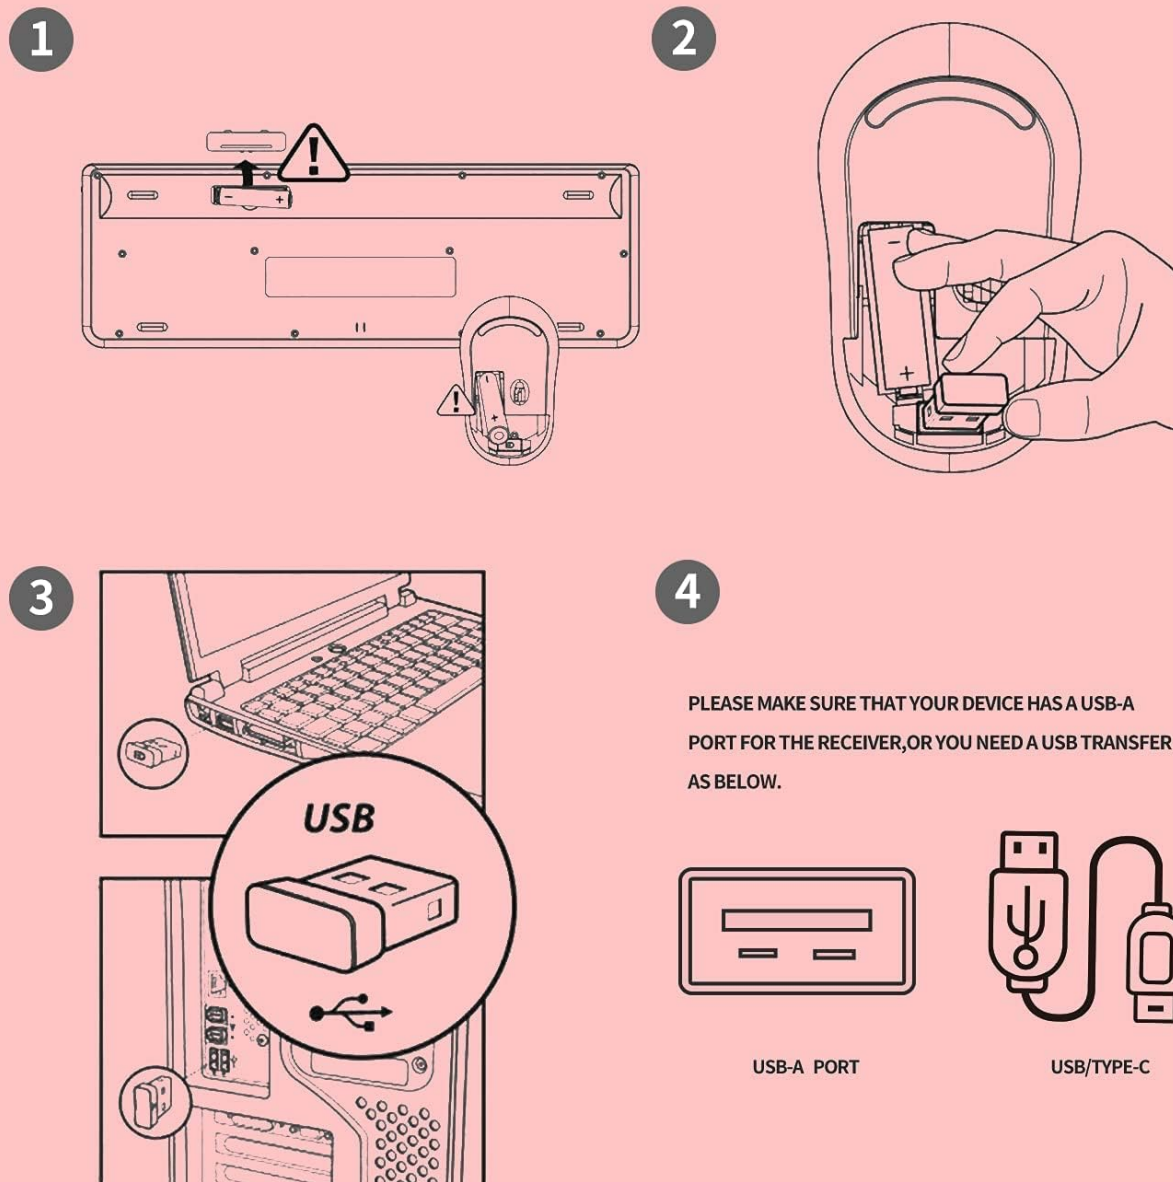


Figure 2: Battery installation and USB receiver location in the mouse.

2.2. Connecting the Receiver

The FOPETT V2020 set uses a single Nano receiver for both the keyboard and mouse. The receiver is conveniently stored at the bottom of the mouse.

1. Remove the Nano receiver from its storage slot at the bottom of the mouse.
2. Plug the USB Nano receiver into an available USB-A port on your computer, laptop, Smart TV, or other compatible device.
3. The keyboard and mouse should connect automatically. No additional software installation is required.

3. OPERATING INSTRUCTIONS

3.1. Keyboard Functions

The full-size keyboard features 104 keys and 12 multimedia hotkeys for quick access to various functions. Note that hotkey compatibility may vary with Mac systems.

12Multimedia Hotkeys



FN+ESC	music player	FN + F7	web
FN + F1	play/pause	FN + F8	search
FN + F2	previous one	FN + F9	Favorites
FN + F3	next one	FN + F10	Email
FN + F4	voloume+	FN + F11	Lock
FN + F5	voloume-	FN + F12	windows
FN + F6	mute		

Figure 3: Keyboard layout with multimedia hotkeys and their functions.

Multimedia Hotkey Functions

Key Combination	Function	Key Combination	Function
FN + ESC	Music Player	FN + F7	Web Browser
FN + F1	Play/Pause	FN + F8	Search
FN + F2	Previous Track	FN + F9	Favorites
FN + F3	Next Track	FN + F10	Email
FN + F4	Volume Up	FN + F11	Lock Screen
FN + F5	Volume Down	FN + F12	Windows Key
FN + F6	Mute		

3.2. Mouse Functions

The silent mouse features multiple DPI levels (up to 1600) for precise cursor control. Its contoured shape and sweat-resistant finish provide comfort during extended use.

Your browser does not support the video tag. This video demonstrates the FOPETT Wireless Keyboard and Mouse Set, highlighting its cute design and reliable performance.

Video: Cute & Reliable Wireless Keyboard and Mouse Set. This video demonstrates the FOPETT Wireless Keyboard and Mouse Set, highlighting its cute design and reliable performance.

3.3. Power-Save Function

To conserve battery life, both the keyboard and mouse are equipped with power-save features:

- The keyboard enters sleep mode after 90 seconds of inactivity. Press any key to wake it up.
- The mouse enters sleep mode after 5 minutes of inactivity. Scroll the wheel or click any button to wake it up. In sleep mode, the optical LED will turn off.

4. MAINTENANCE

No specific cleaning instructions are provided. For optimal performance, ensure batteries are replaced when needed.

5. TROUBLESHOOTING

5.1. Restoring Factory Default Settings

If the keyboard or mouse is not functioning correctly, you can try restoring factory default settings:

- **For Mouse:** Press the right button and middle button (under the scroll wheel) simultaneously, then wait five seconds. Insert the Nano receiver into the USB port of your PC or notebook.
- **For Keyboard:** Press the "Esc" and "K" keys simultaneously, then wait five seconds. Insert the Nano receiver into the USB port of your PC or notebook.

5.2. Connection Exception / Delay when typing/keys do not work correctly

- Ensure the keyboard and mouse batteries have sufficient power. Replace with new batteries if necessary.
- Check if any Windows updates are running in the background, as this can cause delays.
- Try plugging the Nano receiver into a different USB port on your computer to verify the issue.
- If the above solutions do not resolve the issue, please repeat the procedure to pair the devices again (refer to "Restoring Factory Default Settings").

6. SPECIFICATIONS

- **Product Dimensions:** 17.72 x 5.51 x 1.54 inches
- **Item Weight:** 2.25 pounds
- **Item Model Number:** V2020
- **Batteries:** 2 AA batteries required (1 for keyboard, 1 for mouse)
- **Connectivity Technology:** 2.4 GHz Radio Frequency
- **Special Feature:** Round Keycaps
- **Compatible Devices:** Laptop, Personal Computer, Projector, Television
- **Mouse DPI:** 1600



Figure 4: Dimensions of the FOPETT V2020 Keyboard and Mouse.

7. WARRANTY AND SUPPORT

FOPETT offers a three-year worry-free warranty and a 60-day money-back guarantee. If you have any inquiries or concerns regarding your wireless keyboard and mouse set, please do not hesitate to contact us via Amazon email. Your satisfaction is our top priority.

© 2024 FOPETT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question