

Akko 3061S

Akko World Tour Tokyo 3061S 60% Wired Mechanical Gaming Keyboard User Manual

INTRODUCTION

This manual provides instructions for the Akko World Tour Tokyo 3061S 60% Wired Mechanical Gaming Keyboard. This compact keyboard features a 61-key layout, RGB backlighting, hot-swappable switches, and durable PBT dye-sublimation keycaps with an OSA profile. It is designed for users seeking a high-performance and customizable typing experience.



World Tour Tokyo 3061S RGB

60% Layout Mechanical Keyboard



RGB



Hot-Swap



Macro



N-Key Rollover

Image: The Akko World Tour Tokyo 3061S mechanical keyboard, featuring its distinctive Tokyo-themed keycaps and vibrant RGB backlighting.

SETUP

Package Contents

Before you begin, ensure all items are present in the package:

- Akko World Tour Tokyo 3061S Mechanical Keyboard
- USB-A to USB-C Cable (Pink)
- Keycap Puller
- Plastic Dust Cover
- User Manual



Image: Contents of the Akko 3061S package, including the keyboard, cable, keycap puller, and manual.

Connecting the Keyboard

1. Locate the USB-C port on the back of the keyboard.
2. Connect the pink USB-C cable to the keyboard's USB-C port.
3. Connect the USB-A end of the cable to an available USB port on your computer.
4. The keyboard should be automatically recognized by your operating system.



Image: Close-up view of the USB-C port on the Akko 3061S keyboard with the cable connected.

OPERATING THE KEYBOARD

60% Layout and Function Layer

The Akko 3061S features a compact 60% layout, which means some keys share functions. Secondary functions are typically accessed by holding down the **Fn** key (usually located near the right Alt key) and pressing the desired key. Refer to the keycap legends for specific Fn combinations.



Image: Top-down view of the Akko 3061S keyboard, illustrating its compact 60% layout.

RGB Backlighting

The keyboard features customizable RGB backlighting. You can cycle through various lighting effects such as Steady, Breathe, One-key light up, One-key light off, Wave, Ripple, and Raindrop. Specific key combinations (usually involving the **Fn** key) are used to change modes, brightness, and speed. Consult the included user manual for detailed key combinations.

Programmable Keys

All keys on the Akko 3061S, except those used for controlling Macro mode (Esc/Win), can be re-mapped. This allows you to customize key functions and create action sequences to suit your preferences. Software may be required for advanced programming.

N-Key Rollover (NKRO)

The keyboard supports N-Key Rollover (NKRO), which means it can register all simultaneous key presses without conflicts. This feature is particularly beneficial for gaming, ensuring every command is registered accurately.

Hot-Swappable Switches

The Akko 3061S is equipped with premium TTC gaming 5-pin hot-swappable sockets and plate noise reduction foam. This allows users to easily change mechanical switches without soldering. If a switch becomes faulty or if you wish to try a different switch type, you can simply pull out the existing switch and insert a new one.



Image: Keycaps removed from the Akko 3061S, showing the hot-swappable Jelly Pink switches and stabilizers.



Image: A single Akko Jelly Pink mechanical switch, demonstrating its design.

PBT Dye-Sublimation OSA Profile Keycaps

The keyboard features PBT dye-sublimation keycaps with an OSA profile. PBT keycaps are known for their durability and resistance to wear, ensuring legends do not fade over time. The material is also oil-proof and fingerprint-proof, maintaining a consistent typing feel.



Image: Close-up of the Akko 3061S keycaps, showcasing the PBT material and dye-sublimated designs.



Image: Diagram illustrating the OSA keycap profile, which provides a comfortable and ergonomic typing experience.

MAINTENANCE

Cleaning the Keyboard

- **General Cleaning:** Use a soft, dry cloth to wipe down the keyboard surface regularly.
- **Keycap Cleaning:** For deeper cleaning, use the included keycap puller to carefully remove keycaps. Clean them with a mild soap solution and a soft brush, then rinse thoroughly and ensure they are completely dry before reattaching.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keycaps and switches.

Switch Replacement

To replace a switch:

1. Carefully remove the keycap using the keycap puller.
2. Use a switch puller (not included, but often comes with replacement switches) to gently grip the top and bottom clips of the switch.
3. Pull the switch straight up to remove it from the socket.
4. Align the pins of the new switch with the holes in the PCB and press it firmly into place until it clicks. Ensure the pins are not bent.
5. Reattach the keycap.

TROUBLESHOOTING

Keyboard Not Responding

- Ensure the USB-C cable is securely connected to both the keyboard and the computer.
- Try connecting the keyboard to a different USB port on your computer.

- Test the keyboard on another computer to rule out system-specific issues.
- Restart your computer.

RGB Backlighting Not Working

- Check if the RGB lighting is turned off or set to a very low brightness level using the keyboard's function keys.
- Ensure any keyboard software or drivers are up to date.

Specific Keys Not Working

- Due to the hot-swappable design, a switch might be improperly seated. Carefully remove the keycap and then the switch, and re-insert it firmly.
- If the issue persists, try replacing the faulty switch with a known working switch from another key (if available) to determine if the switch itself is defective.
- Clean any debris around the switch socket.

SPECIFICATIONS

Feature	Detail
Brand	Akko
Model	3061S
Layout	60% (61-Key)
Connectivity	Wired (USB-C)
Switch Type	Jelly Pink (Linear, Hot-swappable)
Keycaps	PBT Dye-Sublimation, OSA Profile
Backlighting	RGB
N-Key Rollover (NKRO)	Supported
Dimensions (L x W x H)	11.5" x 4" x 1.46" (292mm x 101mm x 37mm)
Weight	2.1 pounds
Compatible OS	Windows

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Akko website or contact Akko customer service directly. Details regarding warranty periods and support procedures are typically provided with your purchase documentation or on the manufacturer's website.

You can visit the Akko store on Amazon for more information:[Akko Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question