

N2QAJB000132, SA-PM31, SC-PM31, SA-PM313-P

User Manual

GENERIC REPLACEMENT REMOTE CONTROL FOR PANASONIC N2QAJB000132, SA-PM31, SC-PM31, SA-PM313-P

Introduction

This manual provides instructions for the Generic replacement remote control, designed to function as a direct substitute for the original Panasonic N2QAJB000132, SA-PM31, SC-PM31, and SA-PM313-P remote controls. It offers full functionality without requiring any setup codes. Simply insert batteries, and the remote is ready for use.

Setup

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

The remote control is pre-programmed and does not require any additional setup codes. It is ready for immediate use after battery installation.



Image: Back view of the remote control, highlighting the battery compartment for easy access.

Operating Instructions

This remote control replicates the functions of your original Panasonic remote. Below is a general guide to its buttons and their common uses.







Image: Front view of the remote control, displaying all buttons and their labels.

Button Functions

- **Power ()**: Turns the device on or off.
- **SHIFT**: Activates secondary functions for certain buttons.
- **AV**: Switches between video input sources.
- **Mute**: Mutes or unmutes the audio.
- **MINI TV**: Likely for picture-in-picture or miniature TV display.
- **V+ / V-**: Adjusts volume up or down.
- **OK**: Confirms selections in menus.
- **Directional Arrows (▲ ▼ ◀ ▶)**: Navigates through menus and options.
- **Number Pad (0-9)**: Direct channel entry or inputting numbers.
- **GUIDE**: Displays the electronic program guide.
- **EXIT**: Exits current menu or function.
- **RETURN**: Returns to the previous screen or menu.
- **MENU**: Accesses the main menu of the device.
- **TOP MENU**: Accesses the top level of a menu structure.
- **TITLE**: Displays disc title menu (for DVD/CD players).
- **PICT**: Adjusts picture settings.
- **REPEAT**: Repeats playback (for media players).
- **TEXT**: Activates teletext or text services.
- **DISP (i+)**: Displays information about the current program or media.
- **VOL+ / VOL-**: Adjusts volume up or down.
- **CH/PAGE+ / CH/PAGE-**: Changes channels or pages up or down.
- **TV**: Switches to TV mode.
- **Record (●)**: Initiates recording.
- **Rewind (◀◀)**: Rewinds media playback.
- **Play (▶)**: Starts or resumes media playback.
- **Fast Forward (▶▶)**: Fast forwards media playback.
- **Stop (■)**: Stops media playback.
- **Pause ()**: Pauses media playback.
- **Epg**: Electronic Program Guide.
- **EX**: Extra functions or extended menu.
- **AUTO/TRK**: Automatic tracking (for VCRs) or audio track selection.
- **SUBT**: Subtitle control.
- **ZOOM**: Zooms in on the picture.
- **BACK**: Goes back to the previous item or screen.
- **DEVICES (TV, DTT, SAT, AUX)**: Selects the device to control.

Note: Not all functions may be applicable to every Panasonic model. Refer to your device's original manual

for specific function details.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, high humidity, or dust.

Troubleshooting

Remote is not responding:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the device's infrared sensor.
- Make sure you are within the effective range (up to 5 meters) and pointing the remote directly at the device.

Some buttons are not working:

- Verify that the remote is compatible with your specific Panasonic model (N2QAJB000132, SA-PM31, SC-PM31, SA-PM313-P).
- Some functions may be specific to the original device and might not be fully supported by a universal replacement remote, though this remote is designed for direct replacement.
- Clean the remote's surface and buttons to ensure no debris is interfering with button presses.

Specifications

Brand	Generic
Compatible Models	PANASONIC N2QAJB000132, SA-PM31, SC-PM31, SA-PM313-P
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	5 Meters
Number of Batteries Required	2 AAA batteries
Special Feature	Ergonomic design

Warranty Information

This replacement remote control comes with a **12-month guarantee** from the date of purchase. This

warranty covers manufacturing defects and ensures the remote functions as described. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accidental damage, unauthorized repairs, or normal wear and tear.

Support

For technical assistance or warranty claims, please contact the seller or retailer from whom you purchased this product. Provide your purchase details and a description of the issue for prompt support.

For general inquiries, you may refer to the product listing on the retailer's website for additional information.