

## ECOWELL WCVP03

# Ecowell Cordless Wet Dry Vacuum Cleaner and Mop User Manual

Model: WCVP03

Brand: ECOWELL

## 1. INTRODUCTION

Thank you for choosing the Ecowell Cordless Wet Dry Vacuum Cleaner and Mop. This all-in-one cleaning solution is designed to simplify your floor care routine by combining vacuuming, mopping, and washing in a single, convenient device. It is suitable for various sealed hard floors and area rugs, offering efficient cleaning with its dual-tank system and self-cleaning capabilities. Please read this manual thoroughly before operation to ensure safe and optimal performance.



*The Ecowell Cordless Wet Dry Vacuum Cleaner and Mop, Model WCV03.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. This product is intended for indoor use only.

- Do not use outdoors or on wet surfaces that are not intended for wet cleaning.

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without filter in place.
- Always turn off this appliance before connecting or disconnecting hose.
- Store the appliance indoors.

### 3. WHAT'S INCLUDED

---

Your Ecowell Wet Dry Vacuum Cleaner package includes the following components:

- Main Unit (Cordless Wet Dry Vacuum Cleaner)
- Filter
- Storage Dock
- Power Adaptor
- Brush Roller
- Warranty Card
- User Manual (this document)

# WHAT'S INCLUDED



 
Filter



Storage Dock



Adaptor



Brush Roller



Warranty



User Manual

*All components included in the Ecowell WCV03 package.*

## 4. SETUP AND INITIAL PREPARATION

### 4.1 Assembly

1. Carefully remove all components from the packaging.
2. Insert the handle into the main body of the vacuum cleaner until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are properly seated in their respective compartments.

### 4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner. Place the unit on the storage dock and connect the power adaptor to a wall outlet. The indicator lights on the handle will show the charging status.

### 4.3 Filling the Clean Water Tank

For wet cleaning, fill the clean water tank with tap water. You may add a small amount of floor cleaning fluid for enhanced results, as recommended by the manufacturer.



*The dual-tank system separates clean and dirty water for effective cleaning.*

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

Press the power button on the handle to turn the unit on or off. The display will illuminate, indicating the current mode and battery level.

### 5.2 Cleaning Modes

The Ecowell vacuum cleaner offers three distinct cleaning methods:

- **Dry Suction:** Operates as a traditional vacuum cleaner, ideal for picking up dry debris without water spray.
- **Vacuuming + Small Water Spray Mopping:** Combines vacuuming with a light water spray for damp mopping.
- **Vacuuming + Large Water Spray Mopping:** Provides a more generous water spray for deeper wet cleaning.

Select the appropriate mode using the controls on the handle based on your cleaning needs.



# VACUUM & WASH & MOP

All in One



*The Ecowell cleaner handles both wet and dry messes in one pass.*

# EFFECTIVE CLEAN

Multi Surface Cleaning on  
Hard Floors & Area Rugs



Filter



Powerful Clean

*Effective cleaning on multiple surfaces, including hard floors and area rugs.*

## 5.3 Edge Cleaning

The design of the cleaning head allows for close proximity to baseboards and edges, ensuring thorough cleaning even in hard-to-reach areas.





*The cleaner is designed to glide closely against baseboards for enhanced edge cleaning.*

## 5.4 Maneuverability and Runtime

Weighing only 8.2 lbs, this cordless vacuum cleaner is lightweight and easy to maneuver around your home and up stairs. It provides up to 30 minutes of effective running time on a full charge, allowing you to clean up to 1,722 square feet.





*Enjoy up to 30 minutes of runtime for extensive cleaning.*

## 5.5 Official Product Videos

*This video demonstrates the lightweight, cordless design and swivel steering of the Ecowell vacuum cleaner, showcasing its ease of use and maneuverability for cleaning various floor types.*

*This video illustrates the wet dry vacuum cleaner and mop in action, highlighting its self-water spray feature for effective wet cleaning and simultaneous debris pickup.*

## 6. MAINTENANCE

### 6.1 Automated Self-Cleaning Function

The Ecowell vacuum cleaner features an automated self-cleaning function to maintain the roller brush. After cleaning, place the unit on its storage dock. Activate the self-cleaning cycle, which typically runs for about 2 minutes and 5 seconds, to thoroughly clean the roller brush without manual effort.



# SELF-CLEANING

No Mess, Hands Free



One Press  
Self-Cleaning



Brush  
Self-Cleaning



No Dirty  
Storage



*The self-cleaning function ensures a clean roller brush for the next use.*

## 6.2 Cleaning Tanks and Filter

- **Dirty Water Tank:** After each use, empty and rinse the dirty water tank. This prevents odors and maintains hygiene.
- **Clean Water Tank:** Empty any remaining clean water if the unit will not be used for an extended period.
- **Filter:** The filter is washable. Remove it from the unit and rinse under running water. Allow it to air dry completely before reinserting.

## 6.3 Drying the Roller Brush

After the self-cleaning cycle, ensure the roller brush is placed on the dry tray of the storage dock to air dry completely. This helps prevent mildew and maintains brush performance.

## 6.4 Official Product Video for Maintenance

*This video demonstrates the one-step cleaning process for sticky messes and pet hair, including the automated self-cleaning feature that simplifies post-cleaning maintenance.*

## 7. TROUBLESHOOTING

If you encounter any issues with your Ecowell vacuum cleaner, please refer to the following common problems and solutions. For more detailed troubleshooting, consult the comprehensive PDF user manual available online.

Problem	Possible Cause	Solution
Unit does not turn on	Battery is low or depleted.	Charge the unit fully.
Poor suction	Dirty water tank full, filter clogged, or brush roller obstructed.	Empty dirty water tank, clean filter, remove obstructions from brush roller.
Leaves streaks on floor	Dirty roller brush or dirty water tank.	Run self-cleaning cycle, clean dirty water tank thoroughly.
Water not spraying	Clean water tank empty or spray nozzle clogged.	Refill clean water tank, check and clear spray nozzle.

## 8. PRODUCT SPECIFICATIONS

Feature	Specification
Model	WCVP03
Working Voltage	DC29.6V
Rated Power	180W
Adapter Input	100-240V~50/60Hz 0.8A
Battery Capacity	2600mAh
Clean Water Tank	550ml
Dirty Water Tank	600ml
Endurance (Runtime)	ECO mode: 28min, Max mode: 31 min
Net Weight	8.2 lbs
Product Dimensions (L*W*H)	26.38 x 12.8 x 10.83 inches
Noise Level	70 dB
Filter Type	Cartridge
Recommended Use	Indoor

## 9. WARRANTY AND SUPPORT

ECOWELL provides a 2-year warranty period for this product. If you have any questions, concerns, or require





technical assistance, please contact the manufacturer or seller directly. Refer to your warranty card for specific terms and conditions.

For additional support and resources, you may also refer to the official user manual PDF [Ecowell WCV03 User Manual \(PDF\)](#)

© 2023 ECOWELL. All rights reserved.

Related Documents - WCV03

	<p><a href="#">Ecowell LULU QUICK CLEAN Wet/Dry Vacuum &amp; Wash User Manual</a></p> <p>Comprehensive user manual for the Ecowell LULU QUICK CLEAN Wet/Dry Vacuum &amp; Wash (Model SC91, SKU P05), covering safety instructions, product features, assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><a href="#">Ecowell LULU Quick Clean P03 Wet/Dry Vacuum &amp; Wash Quick Start Guide</a></p> <p>A quick start guide for the Ecowell LULU Quick Clean P03, a 4-in-1 wet/dry vacuum and wash cleaner. This guide covers operation, digital light indicators, self-cleaning, charging, storage, and maintenance tips.</p>