

Hikenture US 1054-C2

Hikenture Collapsible Wagon Cart Instruction Manual

Model: US 1054-C2

Brand: Hikenture

PRODUCT OVERVIEW

The Hikenture Collapsible Wagon Cart, Model US 1054-C2, is a heavy-duty, portable utility cart designed for various outdoor activities. It features a large capacity, all-terrain wheels, and a convenient foldable design for easy storage and transport. This manual provides essential information for the safe and effective use of your wagon cart.

KEY FEATURES

- **Large Capacity:** Offers an enlarged storage space of 200L / 7 cubic feet, capable of holding up to 330 lbs.
- **Upgraded All-Terrain Wheels:** Features super large 4-inch wheels with a unique anti-slip pattern, suitable for sand, grass, and rough terrains. Dual front wheels are 360-degree rotatable for easy maneuvering.
- **Compact Folding Design:** Patented collapsible construction folds down to just 13"x8.8"x24.4", saving significant storage space. A practical storage cover is included.
- **Flexible Handle:** Equipped with a telescoping handle that is length adjustable and 360-degree rotatable for comfortable pulling and steering.
- **Durable Construction:** Built with a sturdy stainless steel frame and thickened tear-resistant 600D Oxford fabric, ensuring longevity and easy cleaning.
- **Easy Assembly:** Designed for quick setup and folding in seconds, requiring no assembly.

SETUP INSTRUCTIONS

1. **Unpack the Wagon:** Remove the wagon from its packaging. It comes in a compact, folded state with a storage cover.
2. **Remove Storage Cover:** Unbuckle and remove the included storage cover.

3. **Unfold the Wagon:** Gently pull the sides of the wagon outwards until it fully extends. The frame will lock into place.
4. **Insert Bottom Panel:** Place the hard bottom panel (often stored within the folded wagon or cover pocket) firmly into the base of the wagon to create a stable floor.
5. **Adjust Handle:** Pull the telescoping handle upwards to your desired length. Ensure it locks securely into position.



1-Second Folding : Fold it up, save **80%** space



Image: The Hikeature Collapsible Wagon Cart demonstrating its 1-second folding and unfolding process, showing its compact storage size in a car trunk.

OPERATING INSTRUCTIONS

Loading the Wagon

- Distribute weight evenly across the wagon's base to maintain stability.
- Do not exceed the maximum load capacity of 330 lbs.

Maneuvering

- Use the adjustable, 360-degree rotatable handle to pull and steer the wagon. Adjust the handle length for comfortable use.

- The large all-terrain wheels are designed for smooth movement over various surfaces, including sand, grass, and uneven ground.

Using the Brakes

- The wagon is equipped with built-in brakes on the wheels. Engage the brakes by pressing down on the red levers located near the wheels to secure the wagon in place, especially on slopes.
- Disengage the brakes by lifting the levers before moving the wagon.



Image: Close-up view of the wagon's large 4-inch wheels with double bearing system and the built-in red brake levers for secure stopping.

MAINTENANCE

- **Cleaning:** The thickened tear-resistant 600D Oxford fabric can be easily removed and washed. Wipe the metal frame with a damp cloth as needed.
- **Storage:** After use, fold the wagon into its compact size and secure it with the provided storage cover. Store in a dry place away from direct sunlight.
- **Wheel Care:** Periodically check wheels for debris and ensure smooth rotation.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	36"D x 22"W x 15"H
Folded Dimensions	13"x8.8"x24.4"
Brand	Hikenture
Model Number	US 1054-C2
Material	Sturdy Stainless Steel, 600D Oxford Fabric
Color	Black&grey
Weight Limit	330 Pounds
Item Weight	26.5 Pounds
Capacity	7 Cubic Feet / 200 Liters
Number of Wheels	4
Wheel Type	4-inch All-Terrain, Double Bearing System, 360-degree Rotatable Front Wheels
Assembly Required	No

TROUBLESHOOTING

- **Wagon not unfolding/folding smoothly:** Ensure all fabric is clear of the frame mechanism. Check that the bottom panel is removed before folding.
- **Difficulty steering:** Verify that the front wheels are free to rotate 360 degrees and are not obstructed. Ensure the handle is securely locked at the desired height.
- **Wheels not rolling:** Check for debris or obstructions in the wheels or axles. Ensure brakes are disengaged.
- **Wagon unstable:** Ensure weight is distributed evenly and not exceeding the maximum capacity. Confirm the bottom panel is properly seated.

WARRANTY AND SUPPORT

Hikenture offers a **one-year warranty** for this product. If you encounter any issues or require support, please contact Hikenture customer service. They are available to assist with any questions or concerns regarding your wagon cart.