



Manuals.plus /

› VENTY /

› VENTY Portable Fan User Manual

VENTY 2022

VENTY Portable Fan User Manual

Model: 2022 | Brand: VENTY

INTRODUCTION

Thank you for choosing the VENTY Portable Fan. This user manual provides essential information for the safe and efficient operation of your new fan. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Do not operate any fan with a damaged cord or plug.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan before cleaning or performing any maintenance.
- Do not immerse the fan in water or other liquids.
- Keep out of reach of children.
- Use only as described in this manual.

PACKAGE CONTENTS

- VENTY Portable Fan (Black)
- Remote Control
- Carry Case
- USB-C Charging Cable (2 included)
- User Manual (this document)

PRODUCT OVERVIEW

The VENTY Portable Fan is a versatile, rechargeable fan designed for convenience and powerful airflow. It features a foldable, durable, and extendable design, making it ideal for various settings.



Figure 1: VENTY Portable Fan, showing the fan, remote control, and carry case.

Key Features:

- Foldable and Extendable Design: Extends to over 3 feet and folds to 3 inches for easy portability.
- 120° Oscillation and 180° Rotation: Provides wide-area cooling and flexible airflow direction.
- 4 Speed Settings: Adjustable airflow from gentle breeze to powerful cooling.
- LED Lighting: Integrated ambient light with 3 brightness levels.
- Remote Control: Conveniently adjust settings from a distance.
- USB-C Rechargeable: Built-in 16,000 mAh battery for extended use, doubles as a power bank.
- Lightweight: Weighs only 2.6 lbs.

CHILL OUT WITH VENTY FAN



2.6 LBS WEIGHT



120° OSCILLATION



48 HR BATTERY LIFE

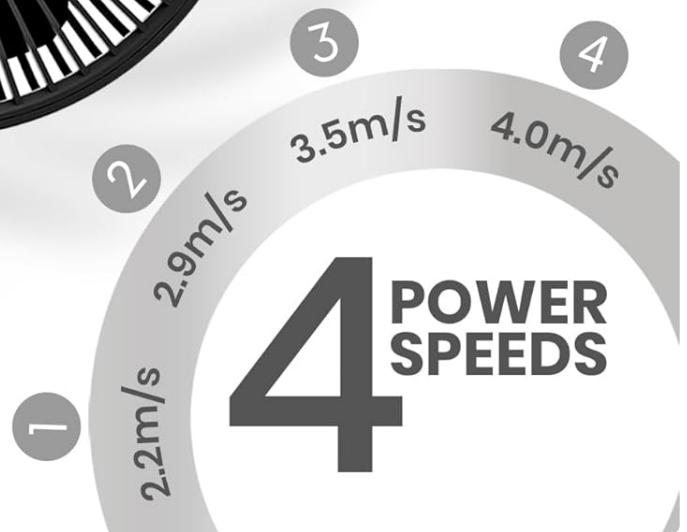 


Figure 2: Illustration of key features: 2.6 lbs weight, 120° oscillation, 48-hour battery life, and 4 power speeds.

EXTENDS TO OVER 3 FEET FOLDS TO 3 INCHES



Figure 3: The fan's compact folded size and its ability to extend to over 3 feet.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Extend the Fan:**
 - Place the fan base on a stable, flat surface.
 - Gently pull the fan head upwards from the base to extend the telescopic pole to your desired height. The fan can extend up to 42 inches (over 3 feet).
 - Adjust the angle of the fan head by tilting it up or down.
3. **Remote Control:** The remote control is pre-paired with the fan. Ensure the remote has a working battery.



Figure 4: The fan's control panel and remote, highlighting power, speed, oscillation, and light controls.

OPERATING INSTRUCTIONS

The VENTY Portable Fan can be operated using the touch controls on the base or the included remote control.

Fan Operation:

- **Power ON/OFF:** Press the **Power** button () on the base or remote to turn the fan on or



off.

- **Adjust Fan Speed:** Press the + or - buttons (or corresponding fan speed icons on remote) to cycle through the 4 speed settings.

- **Oscillation:** Press the **Oscillation** button () to activate or deactivate the 120° oscillation



feature.



Figure 5: The fan's 120° oscillation feature for wider air distribution.

LED Light Operation:

- **Turn Light ON/OFF:** Press the **Light** button () to turn the ambient LED light on or off.



- **Adjust Brightness:** Press the Light button repeatedly to cycle through the 3 brightness levels.



Figure 6: The fan's integrated LED light providing ambient illumination.

CHARGING AND POWER BANK FUNCTION

The VENTY Portable Fan is equipped with a high-capacity 16,000 mAh battery, providing up to 48 hours of operation on a

 
single charge (depending on speed setting). It also functions as a power bank to charge your devices.

Charging the Fan:

1. Connect one end of the provided USB-C charging cable to the fan's USB-C port (Charging Input & Output).
2. Connect the other end of the cable to a compatible USB wall adapter (not included) and plug it into a wall socket.
3. Avoid using USB outlets, multi-port chargers, or extension cords for optimal charging performance.
4. The charging indicator lights on the base will show the charging status.

CHARGING YOUR VENTY

MOST COMPLAINTS FAILED TO READ THIS

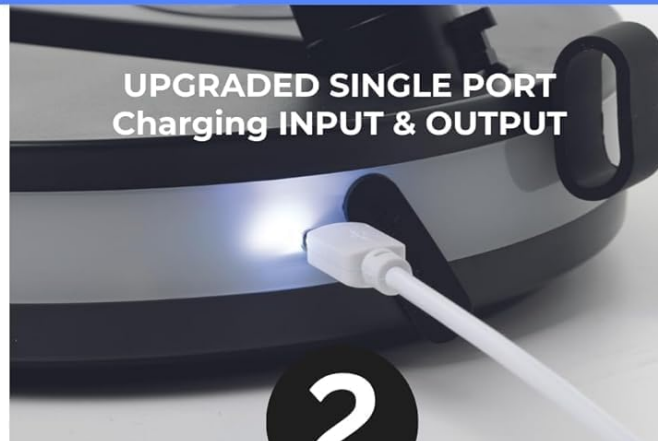


1

INCLUDED CABLES



2

 PLUG CABLE INTO YOUR APPLE OR ANDROID PHONE CHARGING BLOCK

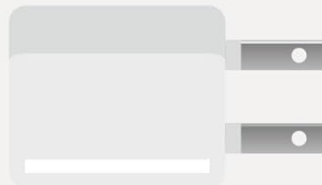

3

PLUG INTO WALL SOCKET



AVOID USING THESE!



USB Outlets



Multi Ports



Extension Cords

Figure 7: Detailed steps for charging the fan, emphasizing direct wall socket connection.

Using as a Power Bank:

- Connect your device's charging cable to the fan's USB-C port.
- The fan's internal battery will begin charging your device.



Figure 8: The fan's USB-C port also functions as a power bank for charging external devices.

MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your VENTY Portable Fan.

- **Cleaning the Fan Blades:**
 - Ensure the fan is turned off and unplugged before cleaning.
 - Gently wipe the fan blades and grille with a soft, damp cloth.
 - Do not use abrasive cleaners or solvents.
 - Allow the fan to dry completely before plugging it back in or operating.
- **Storage:** When not in use, fold the fan to its compact size and store it in the included carry case in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB-C cable and a wall adapter.
Fan airflow is weak.	Fan speed is too low; Blades are dirty.	Increase the fan speed. Clean the fan blades as per maintenance instructions.
Oscillation not working.	Oscillation feature is turned off.	Press the oscillation button to activate.
LED light not working.	Light feature is turned off.	Press the light button to turn on or adjust brightness.

SPECIFICATIONS

Feature	Detail
Brand	VENTY
Model Name	Ventyfan (Model 2022)
Color	Black
Power Source	Battery Powered (16,000 mAh Lithium Polymer)
Product Dimensions	8"D x 8"W x 42"H (Extended)
Item Weight	2.6 Pounds
Noise Level	30 dB
Number of Speed Levels	4
Oscillation	120°
Rotation	180°
Light Type	LED (3 levels)
Connector Type	USB Type C (Input/Output)
Included Components	Remote, Carry Case

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official VENTY website or contact their customer service directly. A detailed user manual in PDF format is also available for download:

[Download Full User Manual \(PDF\)](#)



