

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nyeekey](#) /

› [Nyeekey 5-in-1 Toddler Slide and Swing Playset Instruction Manual](#)

Nyeekey 0858

Nyeekey 5-in-1 Toddler Slide and Swing Playset Instruction Manual

Model: 0858

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Nyeekey 5-in-1 Toddler Slide and Swing Playset. Please read this manual thoroughly before assembly and retain it for future reference. Ensure all users understand the safety guidelines.

The Nyeekey 5-in-1 Playset is designed for toddlers and combines a slide, swing, basketball hoop, soccer goal, and ring toss game, suitable for both indoor and outdoor use.

2. IMPORTANT SAFETY INFORMATION

- Adult supervision is required at all times.
- Ensure the playset is assembled on a flat, level surface.
- For outdoor use, place the playset on a soft surface like grass or rubber mulch, away from fences, trees, or other obstacles.
- For indoor use, ensure adequate clear space around the playset.
- Regularly inspect all components for wear, damage, or loose connections.
- Do not exceed the weight limits: Swing up to 88 lbs (40 kg), Slide up to 132 lbs (60 kg).
- Secure the swing base with water or sand for enhanced stability.
- Keep small children away from the assembly area during setup.
- Do not allow children to climb on parts not intended for climbing.
- Remove any loose clothing or jewelry that could get caught during play.

3. PARTS LIST

Before assembly, verify that all components are present and undamaged. Refer to the diagram below for identification.



Image: Exploded view of the Nyeekoy 5-in-1 Toddler Slide and Swing Playset, showing all individual components and their labels for assembly.

- Slide sections
- Swing frame components
- Swing seat with T-shaped protection
- Basketball hoop stand and backboard
- Soccer goal frame and net
- Ring toss rings
- Climber steps
- Connecting rods and fasteners (screws, nuts, washers)
- Base stabilizers (for filling with water/sand)
- Assembly tools (e.g., wrench, screwdriver - usually included)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two adults for assembly.

1. **Prepare the Area:** Choose a flat, stable surface for assembly. Ensure sufficient space around the playset.
2. **Assemble the Main Frame:** Connect the primary support pillars for the slide and swing using the provided fasteners. Ensure all connections are tight.
3. **Attach the Slide:** Secure the slide sections to the main frame. Verify that the slide is firmly attached and stable.



Image: A child enjoying the slide component of the playset, demonstrating its length and gentle slope.

4. **Install the Swing:** Attach the swing frame to the main structure. Secure the swing seat with its T-shaped protection. Ensure the swing hangs freely and securely.



Image: A toddler seated securely in the swing, highlighting the T-shaped safety bar and sturdy construction.

- 5. Set up the Basketball Hoop:** Assemble the adjustable basketball stand and attach it to the playset. Ensure the height is appropriate for the child.

Height-adjustable Basketball stand



Image: A child attempting to shoot a basketball into the playset's hoop, demonstrating the basketball feature.

6. **Install the Soccer Goal and Ring Toss:** Attach the soccer goal frame and net. Position the ring toss pegs.
7. **Stabilize the Base:** Fill the designated base compartments with water or sand to increase stability, especially for the swing component.
8. **Final Check:** Double-check all connections, bolts, and screws to ensure they are securely tightened. Confirm there are no sharp edges or protruding parts.



Image: The fully assembled Nyeekoy 5-in-1 playset with multiple children engaging in various activities like sliding, swinging, and playing basketball.

5. OPERATING INSTRUCTIONS

The Nyeekoy 5-in-1 Playset offers multiple activities for toddlers. Ensure children use each component as intended and under adult supervision.

- **Slide:** Children should slide down feet first, one at a time. Ensure the landing area is clear.
- **Swing:** Only one child should use the swing at a time. Ensure the T-shaped safety bar is properly secured. Do not allow children to stand on the swing.
- **Basketball Hoop:** The height of the basketball hoop can be adjusted. Use the provided mini basketball or a similar soft ball.
- **Soccer Goal:** Use a soft, lightweight ball for the soccer goal.
- **Ring Toss:** Use the provided rings for the ring toss game.



Image: The Nyeekoy 5-in-1 playset set up indoors, demonstrating its suitability for indoor play areas.



Image: The Nyeekoy 5-in-1 playset set up outdoors on a grassy lawn, illustrating its use in an outdoor environment.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safety of the playset.

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap as needed. Rinse thoroughly and dry. Avoid abrasive cleaners.
- **Inspection:** Periodically check all bolts, screws, and connections for tightness. Tighten any loose fasteners.
- **Wear and Tear:** Inspect plastic components for cracks, breaks, or excessive wear. Replace damaged parts immediately.
- **Stability:** Ensure the base remains filled with water or sand for optimal stability. Refill as necessary.
- **Storage:** If used outdoors, consider covering the playset during harsh weather or storing it indoors during winter months to prevent material degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Playset feels unstable or wobbly.	Loose fasteners; insufficient weight in base; uneven surface.	Tighten all bolts and screws. Fill base with water or sand. Move playset to a level surface.
Swing does not move smoothly.	Improper installation; worn swing ropes/hangers.	Re-check swing assembly. Inspect ropes/hangers for damage and replace if necessary.

Problem	Possible Cause	Solution
Basketball hoop does not stay at desired height.	Adjustment mechanism not tightened.	Ensure the height adjustment knob/lock is fully engaged and tightened.
Plastic components show signs of fading or cracking.	Prolonged exposure to direct sunlight or extreme weather.	Consider covering the playset when not in use or moving it to a shaded area. Replace severely damaged parts.

8. PRODUCT SPECIFICATIONS

Brand: Nyeekoy

Model: 0858

Product Dimensions (L x W x H): 70.5" x 55.12" x 45.67"

Material: High-Density Polyethylene (HDPE) Plastic

Item Weight: 28.7 pounds

Maximum Slide Capacity: 132 lbs (60 kg)

Maximum Swing Capacity: 88 lbs (40 kg)

Assembly Required: Yes

UPC: 747781781246



Image: A detailed diagram showing the overall dimensions of the Nyeekoy 5-in-1 Toddler Slide and Swing Playset, including length, width, and height measurements.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Nyeekoy customer service. Details are typically provided with your purchase documentation or on the official Nyeekoy website.

Please retain your proof of purchase for warranty claims.