

Dell KB500-BK-R-US

Dell KB500-BK-R-US Wireless Keyboard User Manual

Brand: Dell | **Model:** KB500-BK-R-US

INTRODUCTION

This manual provides instructions for the Dell KB500-BK-R-US Wireless Keyboard. This keyboard offers wireless connectivity and features plunger key switch technology for a comfortable and efficient typing experience.

Key Features:

- Efficient data entry with maximum efficiency.
- Plunger key switch technology for comfortable, silent typing, durability, and extended lifespan.
- Wireless connectivity for a clutter-free workspace.



Image: A top-down view of the black Dell KB500-BK-R-US Wireless Keyboard, showcasing its full QWERTY layout with a numeric keypad on the right.

WHAT'S IN THE Box

The Dell KB500-BK-R-US Wireless Keyboard package typically includes:

- Dell KB500-BK-R-US Wireless Keyboard
- USB Wireless Receiver (often stored in the battery compartment)
- 1 AAA battery (included)

SETUP INSTRUCTIONS

1. Install Batteries

Locate the battery compartment on the underside of the keyboard. Insert the included AAA battery, ensuring correct polarity. Close the battery compartment cover securely.

2. Connect the Wireless Receiver

Plug the USB wireless receiver (a small USB dongle, often found inside the battery compartment or

packaged separately) into an available USB port on your computer.

3. Power On the Keyboard

Locate the power switch on the keyboard (usually on the top edge or underside) and slide it to the 'On' position. The keyboard should automatically connect to your computer.

4. Adjust Keyboard Angle (Optional)

For ergonomic comfort, you can extend the kickstands located on the underside of the keyboard to adjust its typing angle.

Your browser does not support the video tag.

Video: A demonstration showing the underside of the Dell Wireless Keyboard, including the battery compartment and adjustable kickstands, relevant for initial setup.

OPERATING INSTRUCTIONS

Basic Typing

The Dell KB500-BK-R-US keyboard functions like a standard QWERTY keyboard. Once connected, simply begin typing to input text into your applications.

Function Keys (F1-F12)

The function keys (F1-F12) located at the top of the keyboard may have secondary functions (e.g., volume control, media playback, screen brightness). These are typically accessed by pressing the 'Fn' key (usually located near the Ctrl key) simultaneously with the desired function key.

Numeric Keypad

Use the dedicated numeric keypad on the right side for efficient data entry. Ensure 'Num Lock' is activated if numbers are not registering. The 'Num Lock' indicator light (if present) will confirm its status.

Your browser does not support the video tag.

Video: A user demonstrating typing on the Dell Wireless Keyboard, highlighting its quiet operation and suitability for office environments, a key benefit of its plunger key switch technology.

MAINTENANCE

Cleaning

To clean your keyboard, gently wipe the keys and surface with a soft, slightly damp cloth. Avoid using harsh chemicals, abrasive materials, or excessive moisture. For debris between keys, use compressed air to dislodge particles.

Battery Replacement

When the keyboard's performance degrades, keys become unresponsive, or the connection is intermittent, it may be time to replace the AAA battery. Refer to the "Setup Instructions" section for guidance on battery installation.

TROUBLESHOOTING

Keyboard Not Responding

- Ensure the keyboard's power switch is in the 'On' position.
- Check if the USB wireless receiver is securely plugged into an active USB port on your computer.
- Replace the AAA battery with a fresh one.
- Try plugging the wireless receiver into a different USB port on your computer.
- Restart your computer to refresh the connection.

Keys Not Functioning Correctly

- Clean the keyboard thoroughly to remove any debris or foreign objects that might be obstructing key presses.
- If specific keys remain unresponsive after cleaning, contact Dell Support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Dell
Model Number	KB500-BK-R-US
Connectivity Technology	Wireless
Key Switch Technology	Plunger
Power Source	Battery Powered
Batteries Required	1 AAA battery (included)
Item Weight	1.42 pounds
Product Dimensions (LxWxH)	4.8 x 17 x 1.3 inches
Material	Plastic
Compatible Devices	PC

WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the documentation provided with your product at the time of purchase. It is recommended to keep your purchase receipt for any warranty claims.

You can also visit the official Dell support website for drivers, manuals, and troubleshooting resources:

Dell Support Website: www.dell.com/support

