

Manuals.plus /
› Armitron /
› Armitron Sport Digital Chronograph Watch User Manual

Armitron 40/8482GBK

Armitron Sport Digital Chronograph Watch User Manual

Model: 40/8482GBK | Brand: Armitron Sport

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Armitron Sport Digital Chronograph Watch, model 40/8482GBK. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW

Watch Components

The Armitron Sport Digital Chronograph Watch features a metallic grey resin case with a black top ring, an LCD display, and a black silicone strap. It is equipped with four control buttons for various functions.





Figure 1: Front view of the Armitron Sport Digital Chronograph Watch, showing the digital display and overall design.

Button Functions

Familiarize yourself with the watch's buttons and their primary functions:

- **SET Button (Top Left):** Used to enter and exit setting modes, and to confirm selections.
- **MODE Button (Bottom Left):** Cycles through different watch modes (Time, Chronograph, Dual Time, Alarm, Countdown Timer).
- **ADJ Button (Top Right):** Adjusts values when in setting mode, or starts/stops functions in other modes.
- **EL Button (Bottom Right):** Activates the backlight for the display.





Figure 2: Left side of the watch showing SET and MODE buttons (left), and right side showing ADJ and EL buttons (right).

SETUP

Initial Time Setting

1. From the normal time display, press and hold the **SET** button until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **MODE** button to cycle through the settings: Seconds → Hours → Minutes → Year → Month → Day.
3. Use the **ADJ** button to increase the flashing value. Hold **ADJ** to rapidly advance the value.
4. Once all settings are correct, press the **SET** button again to exit the setting mode and save your changes.

OPERATING INSTRUCTIONS

Chronograph Function

The chronograph measures elapsed time.

1. From the normal time display, press the **MODE** button until "CH" (Chronograph) appears on the display.
2. Press the **ADJ** button to start the chronograph.
3. Press the **ADJ** button again to pause the chronograph.
4. To resume, press **ADJ**. To reset to zero, press the **SET** button while the chronograph is paused.

Dual Time

Set and view a second time zone.

1. Press the **MODE** button until "DT" (Dual Time) appears.
2. Press and hold the **SET** button until the hours flash.
3. Use the **ADJ** button to adjust the hours. Press **MODE** to switch to minutes, then use **ADJ** to adjust.
4. Press **SET** to confirm and exit.

Alarm Settings

The watch features three independent alarms.

1. Press the **MODE** button until "AL" (Alarm) appears. Continue pressing **MODE** to cycle through AL1, AL2, AL3.
2. Press and hold the **SET** button until the alarm hours flash.
3. Use the **ADJ** button to set the hours. Press **MODE** to switch to minutes, then use **ADJ** to set.
4. Press **SET** to confirm. Press **ADJ** to toggle the alarm ON/OFF.

Military Time (24-Hour Format)

The watch can display time in either 12-hour (AM/PM) or 24-hour (military) format.

- From the normal time display, press the **ADJ** button to toggle between 12-hour and 24-hour formats.

Countdown Timer

Set a timer to count down from a specified duration.

1. Press the **MODE** button until "TMR" (Timer) appears.
2. Press and hold the **SET** button until the hours flash.
3. Use the **ADJ** button to set the desired hours, minutes, and seconds, cycling with the **MODE** button.
4. Press **SET** to confirm the countdown time.
5. Press **ADJ** to start or pause the countdown. When the timer reaches zero, an alarm will sound.

Backlight

Illuminate the display for visibility in low light conditions.

- Press the **EL** button (bottom right) to activate the backlight. The backlight will remain on for approximately three seconds.

MAINTENANCE

General Care

- Clean your watch regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- If the display becomes dim or unresponsive, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.

Water Resistance

This watch is water resistant to 330 feet (100 meters). This rating means it is suitable for swimming and snorkeling, but not for scuba diving. Do not operate buttons underwater.



Figure 3: Water Resistance Chart. This watch is rated for 100M (330FT), suitable for swimming and snorkeling.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery. Consult a professional watch technician.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if any response. If unresponsive, a reset may be needed (consult professional).
Time is inaccurate.	Incorrect time setting or low battery.	Re-set the time following the "Initial Time Setting" instructions. If problem persists, replace battery.
Water inside the watch.	Water resistance compromised or buttons pressed underwater.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	40/8482GBK
Display Type	Digital LCD
Case Material	Metallic Grey Resin
Strap Material	Black Silicone
Water Resistance	100 meters (330 feet)
Functions	Chronograph, Dual Time, Three Alarms, Military Time, Countdown Timer, Backlight
Battery	1 Product Specific battery (included)
Dimensions (Parcel)	10.39 x 9.8 x 7.7 cm
Weight (Parcel)	141 g
First Available	Jan. 5 2022

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Armitron Sport website. Keep your proof of purchase for any warranty claims.

© 2024 Armitron Sport. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09PNSWWZW>

More documents and user manuals: <https://manuals.plus/>