

Hukën MK-K-20F

Hukën x Masterchef Fuse+ Electric Kettle User Manual

Model: **MK-K-20F** | Brand: **Hukën**

INTRODUCTION

Thank you for choosing the Hukën x Masterchef Fuse+ Electric Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

This electric kettle features a durable borosilicate glass body, a stainless steel base, a removable infuser, and a 360° swivel base for convenience. Its automatic shut-off function and LED indicator ensure safe and easy use for boiling water or preparing various infusions.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is only to be used with the stand provided.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Hukën x Masterchef Fuse+ Electric Kettle.



Image: Hukën x Masterchef Fuse+ Electric Kettle. This image highlights the main features of the kettle, including the ON/OFF switch, LED indicator light, automatic shut-off, borosilicate glass jar, stainless steel accents, and 360° swivel base.

- **Borosilicate Glass Jar:** 1.7-liter capacity, resistant to high temperatures.
- **Stainless Steel Base:** Durable and stylish finish.
- **Ergonomic Handle:** Cool-touch design with integrated ON/OFF switch.
- **Removable Infuser:** For brewing teas, infusions, and tisanes. Can be removed for plain water boiling.
- **360° Swivel Power Base:** Allows for cordless pouring and easy placement from any angle.
- **LED Indicator Light:** Illuminates when the kettle is in operation.
- **Automatic Shut-off:** Activates when water reaches boiling point.



Image: Side view of the Hukën x Masterchef Fuse+ Electric Kettle, showcasing the clear borosilicate glass body and the removable stainless steel infuser inside.

SETUP

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power cord into a grounded 120V AC electrical outlet.

OPERATING INSTRUCTIONS

Boiling Water

1. **Fill Kettle:** Open the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark (1.7 liters).
2. **Close Lid:** Ensure the lid is securely closed.
3. **Place on Base:** Place the kettle firmly onto the 360° swivel power base.
4. **Start Boiling:** Press the ON/OFF switch located on the handle downwards. The LED indicator light will illuminate, indicating that the kettle is heating.
5. **Automatic Shut-off:** The kettle will automatically turn off once the water has reached a rolling boil, and the LED light will extinguish.
6. **Pour:** Carefully lift the kettle from the base and pour the hot water.



Image: The Hukēn x Masterchef Fuse+ Electric Kettle with water actively boiling inside, showing the bubbles and the illuminated LED ring at the base.

Preparing Infusions (Tea, Tisanes, etc.)

1. **Insert Infuser:** Ensure the removable stainless steel infuser is properly placed inside the kettle.
2. **Add Ingredients:** Place your desired tea leaves, herbs, or other infusion ingredients into the infuser.
3. **Fill Kettle:** Fill the kettle with fresh, cold water up to the desired level, ensuring it covers the infuser contents. Do not exceed the MAX line.
4. **Close Lid:** Securely close the lid.
5. **Place on Base:** Place the kettle firmly onto the 360° swivel power base.
6. **Start Heating:** Press the ON/OFF switch downwards. The LED indicator light will illuminate.
7. **Automatic Shut-off:** The kettle will automatically turn off once the water has reached a rolling boil.
8. **Steep:** Allow the infusion to steep for the recommended time according to your recipe or preference.
9. **Remove Infuser & Pour:** Carefully remove the infuser (use caution as it will be hot) and then pour your prepared infusion.



Image: A diagram showing the Hukën x Masterchef Fuse+ Electric Kettle with its removable infuser, illustrating how it can be used for brewing or removed for simple water boiling. The text indicates "Removable Infuser".

MAINTENANCE

Cleaning

1. **Unplug and Cool:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior:** The interior of the kettle can be rinsed with water. For stubborn stains, use a soft brush or sponge. Do not immerse the kettle base in water.
4. **Infuser:** The removable infuser can be washed with warm soapy water and rinsed thoroughly.
5. **Drying:** Ensure all parts are thoroughly dry before storing or next use.

Descaling

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descale your kettle regularly to maintain performance.

- Vinegar Method:** Fill the kettle with 1 part white vinegar and 2 parts water. Let it stand for at least 30 minutes, or boil the mixture. Discard the solution and rinse the kettle thoroughly several times with fresh water.
- Citric Acid Method:** Dissolve 1 tablespoon of citric acid in 1 liter of water. Pour into the kettle and boil. Discard the solution and rinse thoroughly.
- Commercial Descaler:** Follow the instructions provided with a commercial descaling product suitable for electric kettles.

Note: Ensure all descaling solution is completely rinsed out before using the kettle for beverages.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Kettle not properly seated on base. Power cord not plugged in. No power at outlet. ON/OFF switch not engaged.	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance or check your circuit breaker. Press the ON/OFF switch firmly downwards.
Kettle turns off before boiling.	Limescale buildup. Kettle was lifted from base during operation.	Descalate the kettle as per the "Descaling" instructions. Ensure the kettle remains on the base until boiling is complete.
Water has an unusual taste.	Initial use residues. Kettle needs cleaning/descaling.	Perform initial cleaning steps again (boil and discard water 2-3 times). Clean and descale the kettle thoroughly.

SPECIFICATIONS

Brand	Hukën
Model Number	MK-K-2OF
Capacity	1.7 Liters
Power	1200 Watts
Voltage	120 Volts
Material	Borosilicate Glass, Stainless Steel

Color	Stainless Steel
Product Dimensions (L x W x H)	21.49 x 15.29 x 22.99 cm
Product Weight	998 g
Special Features	Ergonomic Handle, Removable Infuser, 360° Swivel Base, Automatic Shut-off, LED Indicator



Image: The Hukën x Masterchef Fuse+ Electric Kettle with its approximate dimensions (length, width, height) indicated in centimeters.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Hukën customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Please have your model number (MK-K-2OF) and purchase date available when contacting support.

