

Hamilton Beach 62601N

Hamilton Beach Vintage-Style 5-Speed Electric Hand Mixer

Model: 62601N

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. SETUP

1.1 Unpacking and Components

Carefully remove all components from the packaging. Ensure all parts are present before initial use. The Hamilton Beach Hand Mixer includes the main mixer unit, two traditional stainless steel beaters, one wire whisk, and a snap-on storage case.



Powerful mixer

Maintains constant speed with SmartBoost™ technology and DC motor

Figure 1: The Hamilton Beach Hand Mixer with its snap-on storage case, including two traditional stainless steel beaters and a whisk.

1.2 Attaching and Detaching Beaters

1. Ensure the mixer is unplugged from the power outlet.
2. Insert the beaters or whisk into the openings on the underside of the mixer. Push firmly until they click into place. The beaters are designed to fit into either opening.
3. To remove, press the EJECT button located on the top of the mixer. The beaters or whisk will release.

Video 1: A demonstration of attaching and detaching the beaters from the Hamilton Beach Hand Mixer, showcasing the ease of use and the EJECT button functionality.

2. OPERATING THE HAND MIXER

2.1 Powering On and Speed Control

The hand mixer features 5 speeds and a QuickBurst button for versatile mixing. To operate:

1. Plug the mixer into a standard electrical outlet.

2. Select the desired speed using the speed dial. The mixer features a**Slow Start Technology** that gradually increases mixing speed to prevent splatters, especially when starting with dry ingredients.
3. For an extra burst of power at any speed, press and hold the**QuickBurst** button.
4. To turn off the mixer, return the speed dial to the '0' position.

Hamilton Beach®



5 Speed Hand Mixer with SmartBoost™ Technology

Figure 2: Illustration of the 5-speed settings and the QuickBurst button, indicating recommended uses for each speed (e.g., Speeds 1 & 2 for folding ingredients and creaming butter, Speeds 3 & 4 for mixing, Speed 5 for whipping and kneading).

2.2 Mixing Tips

- Use lower speeds for folding ingredients, creaming butter, or incorporating dry ingredients to minimize splattering.
- Medium speeds are suitable for general mixing tasks.
- Higher speeds are ideal for whipping cream, egg whites, or kneading dough.



No more lost beaters

Includes storage case, whisk
and 2 traditional stainless steel beaters

Figure 3: The hand mixer in action, illustrating how the Slow Start Technology helps reduce messy splatters by gradually increasing speed.

2.3 Cord Management

The mixer features a **lockable swivel cord** that stays out of your way during mixing. This design is convenient for both left- and right-handed users.



Reduces messy splatters

Slow Start™ technology lets you start mixing at a slower speed to prevent splatters

Figure 4: Detail of the lockable swivel cord, designed to enhance user comfort and prevent interference during operation.

2.4 Upright Standing Feature

The mixer is designed to stand upright on your counter, allowing any drips from the beaters to fall directly into your mixing bowl, keeping your workspace clean.



Lockable swivel cord

Stays out of your way while mixing and is perfect for both the left- & right-handed users

Figure 5: The hand mixer positioned upright, demonstrating its ability to keep drips contained within the mixing bowl.

3. MAINTENANCE

3.1 Cleaning

- Always unplug the mixer before cleaning.
- The traditional stainless steel beaters and whisk are **dishwasher safe** for easy cleaning.
- Wipe the main mixer unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.

3.2 Storage

The hand mixer comes with a convenient snap-on storage case. This case allows you to neatly store the beaters, whisk, and cord in one place, preventing lost attachments.

4. TROUBLESHOOTING

- **Mixer does not turn on:** Ensure the mixer is securely plugged into a working electrical outlet. Check if the speed dial is set to a speed other than '0'.
- **Beaters are difficult to insert/remove:** Ensure the mixer is unplugged. Press the EJECT button firmly to release beaters. If inserting, ensure they are aligned correctly and push firmly.
- **Excessive splattering:** Begin mixing at the lowest speed (Speed 1) and gradually increase as ingredients combine. Ensure your mixing bowl is adequately sized for the ingredients.

5. SPECIFICATIONS

Feature	Detail
Brand	Hamilton Beach
Model Number	62601N
Color	Green
Product Dimensions	3.6"D x 8.5"W x 11.8"H
Item Weight	3.22 Pounds
Material	Plastic (Housing), Stainless Steel (Blades)
Voltage	110V
Wattage	120 watts
Number of Speeds	5
Special Features	Slow Start Technology, Snap-on Storage Case
Included Components	Hand Mixer, 2 Traditional Beaters, 1 Whisk
Dishwasher Safe	Yes (Beaters and Whisk)

6. WARRANTY

This Hamilton Beach Hand Mixer (Model 62601N) comes with a **One (1) Year Limited Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. For full warranty details and terms, refer to the documentation included with your product or visit the official Hamilton Beach website.

7. SUPPORT

For customer service, product registration, or to order replacement parts, please visit the Hamilton Beach official website or contact their customer support line. Contact information can typically be found in the product packaging or on the manufacturer's website.

