

ALLIMITY EN218A8H

Allimity EN218A8H Replacement Remote Control User Manual

Model: EN218A8H | Brand: ALLIMITY

1. PRODUCT OVERVIEW

The Allimity EN218A8H is a dedicated replacement remote control designed for seamless operation with Hisense HS312 and HS218 2.1 CH soundbars. This remote provides direct access to all essential functions without requiring any complex programming or setup procedures. It operates using infrared technology.



Figure 1: Angled view of the Allimity EN218A8H replacement remote control.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible Hisense soundbars.



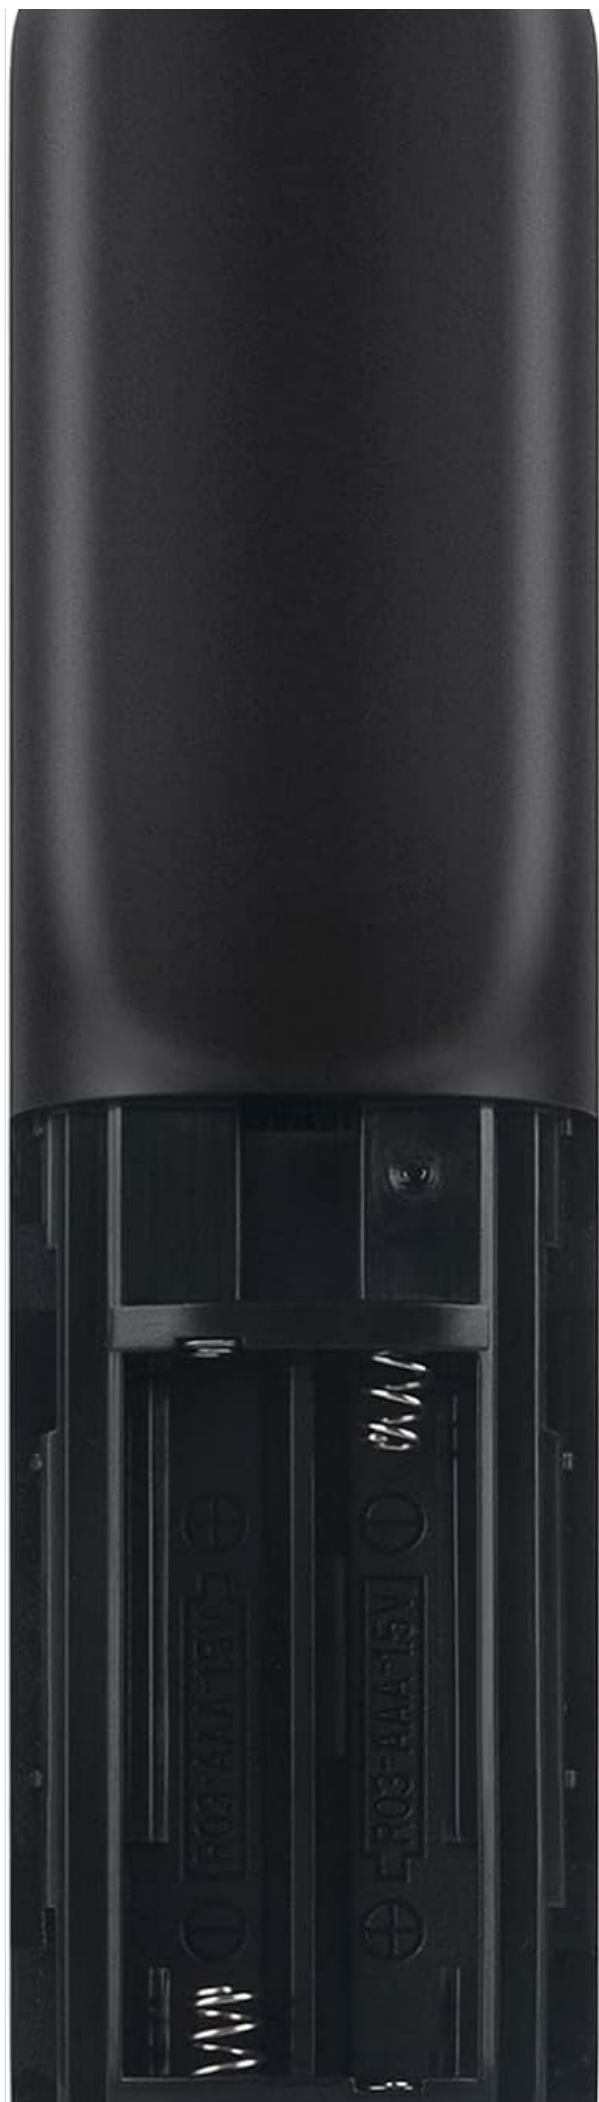




Figure 2: Rear view showing the battery compartment of the remote control.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Hisense soundbar to ensure proper signal transmission. The remote provides intuitive control over various soundbar functions.



Figure 3: Front view of the remote control, highlighting button layout.

3.1 Key Functions

- **Power Button (⏻):** Turns the soundbar on or off.
- **Source Button:** Cycles through available input sources (e.g., HDMI, Optical, Bluetooth).

- **Volume Up/Down (VOL+/-):** Adjusts the soundbar's master volume.
- **Play/Pause/Pair (▶II/PAIR):** Controls media playback and initiates Bluetooth pairing.
- **Previous/Next Track (/):** Skips to the previous or next track during media playback.
- **Mute Button ():** Mutes or unmutes the soundbar audio.
- **EQ Button:** Cycles through preset equalizer modes.
- **Dimmer Button:** Adjusts the brightness of the soundbar's display.
- **Bass +/-:** Adjusts the bass level.
- **Treble +/-:** Adjusts the treble level.
- **Surround (SURR) Button:** Activates or deactivates surround sound mode.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA alkaline batteries are correctly installed.
 - Check for any obstructions between the remote and the soundbar.
 - Ensure you are within the maximum operating range (approximately 10 meters).
 - Verify that the soundbar is powered on.
- **Intermittent response:**
 - Replace batteries with new ones.
 - Ensure the remote's infrared emitter is clean and unobstructed.

6. SPECIFICATIONS

Brand	ALLIMITY
Model Name	EN218A8H
Compatible Devices	Hisense HS312, Hisense HS218 2.1 CH Soundbars
Connectivity Technology	Infrared

Special Feature	No programming required
Maximum Range	10 Meters
Number of Buttons	20
Batteries Required	2 x AAA Alkaline (not included)
Dimensions (L x W x H)	15.2 cm x 5.1 cm x 1.3 cm

7. SUPPORT

For any questions or assistance regarding your Allimity EN218A8H replacement remote control, please do not hesitate to contact us via email. We are committed to helping you resolve any issues you may encounter.

© 2026 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question