

ALLIMITY AKB75855501 MR20GA

Allimity AKB75855501 MR20GA Remote Control User Manual

For LG Smart TV Models

1. INTRODUCTION

This manual provides comprehensive instructions for the Allimity AKB75855501 MR20GA replacement remote control. It is designed to be compatible with a wide range of LG Smart TV models. Please read this manual carefully to ensure proper setup, operation, and to understand the full capabilities of your new remote control.

2. PRODUCT OVERVIEW

2.1 Remote Control Layout

The Allimity AKB75855501 MR20GA remote control features a user-friendly layout for intuitive navigation and control of your LG Smart TV.





Image: Front view of the remote control, showing all buttons including power, number pad, volume, channel, navigation, home, settings, and dedicated app buttons.

2.2 Key Features

- **No Programming Required:** Ready to use directly after battery installation.
- **Voice Control Functionality:** Access smart features and search with voice commands.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix and Prime Video.
- **Full Functionality:** Controls all essential TV functions including power, volume, channels, and smart TV navigation.



Image: The remote control with an arrow pointing to the microphone button, indicating its voice control feature.

3. SETUP

3.1 Installing Batteries

The remote control requires two (2) AA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the 'PUSH' tab and slide the battery cover downwards to open.
3. Insert two new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Back view of the remote control, showing the open battery compartment and the 'PUSH' tab for removal.

3.2 Initial Use

This remote control is designed for immediate use with compatible LG Smart TVs. No additional setup or programming is required. Once batteries are installed, the remote should function directly with your television.

4. OPERATING INSTRUCTIONS

4.1 Basic TV Functions

- **Power ():** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **Volume (+/-):** Adjusts the TV volume.
- **Channel (▲/▼):** Changes TV channels.
- **Mute ():** Mutes or unmutes the TV audio.
- **Navigation (Up, Down, Left, Right, OK):** Used to navigate menus and select items.

4.2 Smart TV and Advanced Functions

- **Home ():** Accesses the Smart TV home screen.
- **Settings (⚙):** Opens the TV settings menu.
- **Quick Access:** Provides shortcuts to frequently used apps or functions.
- **Voice Control ():** Press and hold this button, then speak clearly into the remote to use voice commands for searching content, controlling the TV, and more.
- **Netflix, Prime Video, Movies:** Dedicated buttons for direct access to these streaming services.
- **Guide:** Displays the electronic program guide.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA alkaline batteries.

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's sensor.
- **Voice control not working:**
 - Ensure the remote is within range of the TV.
 - Speak clearly and directly into the microphone.
 - Check your TV's settings to ensure voice control is enabled and configured correctly.
- **Specific buttons not working:**
 - Clean the remote control to remove any dirt or debris that might be obstructing button presses.
 - If only certain buttons fail, the remote may be damaged and require replacement.

7. SPECIFICATIONS

Feature	Detail
Model Number	AKB75855501 MR20GA (YKLI-VOICE-AKB75855501-MR20GA-YA)
Product Dimensions	6 x 1 x 0.5 inches
Item Weight	2 ounces
Batteries Required	2 AA batteries
Connectivity Technology	Bluetooth
Compatible Devices	Television
Special Feature	No Programming Required

7.1 Compatible LG Smart TV Models

This remote control is compatible with a wide range of LG Smart TV models, including but not limited to:


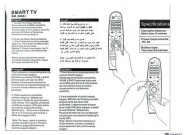




49UN7300PUC, 49UN7300PUF, 49UN7300AUD, 49UN7300PUB, 86UN8570PUB, 86UN8570AUD, 86UN9070AUD, 49UN7100PUA, 49UN7000PUB, 50UN8050PUD, 50UN8000PUB, 50UN7300PUF, 50UN7300PUC, 50UN7300AUD, 50UN7300PUB, 50UN7000PUC, 50UN6950ZUF, 50UN6951ZUF, 50UN6955ZUF, 55UN8050PUD, 55UN8000PUB, 55UN7300PUF, 55UN7300PUC, 55UN7300AUD, 55UN7300PUB, 55UN7310PUC, 55UN7100PUA, 55UN7000PUB, 55UN6950ZUA, 55UN6951ZUA, 55UN6955ZUF, 60UN7300PUA, 60UN7310PUA, 60UN7000PUB, 60UN6950ZUA, 60UN6951ZUA, 65UN8500PUI, 65UN8500AUJ, 65UN8050PUD, 65UN8000PUB, 65UN7300PUF, 65UN7300PUC, 65UN7300AUD, 65UN7300PUB, 65UN7310PUC, 65UN7100PUA, 65UN6950ZUA, 65UN6951ZUA, 65UN6955ZUF, 65UN9000AUJ, 70UN6950ZUA, 70UN6955ZUC, 70UN7370PUC, 70UN7370AUD, 70UN7370PUB, 70UN7100PUA, 70UN7070PUA, 82UN8570PUC, 82UN8570PUB, 82UN8570AUD, 82UN8070PUD, 86UN8570PUC, 43UN7300PUF, 43UN7300PUC, 43UN7300AUD, 43UN7300PUD, 43UN7100PUA, 43UN7000PUB, 43UN6950ZUA, 43UN6951ZUA, 43UN6955ZUF, 75UN8570PUC, 75UN7370PUE, 75UN8000PUB, 75UN8570AUD, 75UN7370AUH, 75UN7370PUB,

75UN7100PUD, 75UN7070PUC, 75UN6950ZUD, 75UN6951ZUD, 75UN6955ZUD, 75UN6970PUD, 75UN9070AUD.

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contacts for the Allimity AKB75855501 MR20GA remote control is not provided in the product details. For any warranty claims or technical assistance, please refer to the seller or manufacturer directly.

Related Documents - AKB75855501 MR20GA

	<p>LG Magic Remote Control User Guide</p> <p>A guide to using the LG Magic Remote Control for Smart TVs, including pairing, cancelling pairing, and battery installation. Features voice control, pointer functionality, and hotkeys for popular streaming services.</p>
	<p>LG SMART TV RM-20GA+ Magic Remote Pairing and Unpairing Guide</p> <p>Comprehensive guide for pairing and unpairing the LG RM-20GA+ Magic Remote with your Smart TV. Includes detailed instructions, specifications, and multilingual summaries.</p>
	<p>LG LED TV Owner's Manual: Safety and Reference</p> <p>Comprehensive owner's manual for LG LED TVs, providing essential safety instructions, operating guidelines, and reference information for optimal use and maintenance.</p>
	<p>LG Magic Remote MR20GA Quick Start Guide</p> <p>A quick start guide for the LG Magic Remote MR20GA, detailing its features, setup, and usage for LG televisions. Includes instructions for battery installation, pairing, unpairing, and basic operation.</p>
	<p>Guida al Telecomando Sostitutivo LG AKB75855501</p> <p>Confronto dettagliato dei pulsanti tra il telecomando originale LG e il modello sostitutivo AKB75855501, fornendo una guida chiara alle funzionalità e alle corrispondenze dei comandi.</p>
	<p>LG OLED TV Owner's Manual: Safety and Reference</p> <p>Comprehensive owner's manual for LG OLED TVs, covering safety instructions, preparation, mounting, connections, troubleshooting, specifications, and important information on preventing image retention.</p>

