Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Smart Tech /
- > Smart Tech 40FA10V3 40-inch Full HD Android Smart TV User Manual

Smart Tech 40FA10V3

Smart Tech 40FA10V3 40-inch Full HD Android Smart TV User Manual

Model: 40FA10V3 | Brand: Smart Tech

1. Introduction

This manual provides essential information for the safe and efficient operation of your Smart Tech 40FA10V3 40-inch Full HD Android Smart TV. Please read these instructions thoroughly before using the television and retain them for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, fire, or injury:

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Avoid placing the TV on unstable surfaces.
- Unplug the TV during lightning storms or when unused for long periods.
- · Keep batteries out of reach of children.


3. PRODUCT OVERVIEW

3.1 TV Front View and Android TV Interface



This image shows the Smart Tech 40-inch Full HD Android Smart TV powered on, displaying its intuitive home screen. The interface features quick access to popular streaming applications such as Netflix, YouTube, Prime Video, and Google Play Store, along with a 'Play Next' section and an 'Apps' menu. The top right corner shows the time and settings icon.

3.2 Rear Panel Connections

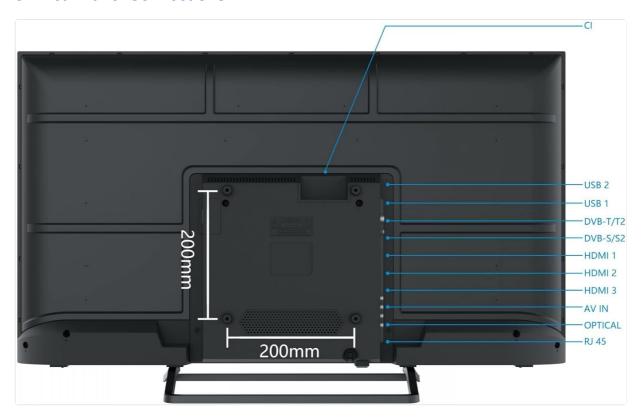

This image illustrates the rear panel of the Smart Tech 40-inch TV, highlighting its connectivity options. Labeled ports include USB 1, USB 2, DVB-T/T2, DVB-S/S2, HDMI 1, HDMI 2, HDMI 3, AV IN, OPTICAL, and RJ 45 (Ethernet). A CI (Common Interface) slot is also visible. The VESA mounting points are indicated with a 200mm x 200mm spacing.

3.3 TV Dimensions



This diagram provides the physical dimensions of the Smart Tech 40-inch TV. The total width is 892mm, total height with stand is 550mm, height without stand is 507mm, and depth with stand is 222mm. These measurements are crucial for placement and mounting considerations.

3.4 Remote Control



This image displays the remote control for the Smart Tech 40-inch TV. It features standard navigation buttons, number pad, volume and channel controls, dedicated buttons for popular streaming services like Netflix and YouTube, and a microphone button for voice commands, indicating its smart TV capabilities.

4. SETUP GUIDE

4.1 Unpacking and Stand Installation

- 1. Carefully remove the TV from its packaging.
- 2. Place the TV screen-down on a soft, flat surface to prevent damage.
- 3. Attach the included stand feet to the designated slots at the bottom of the TV using the provided screws. Ensure they are securely fastened.

4.2 Wall Mounting (Optional)

If you choose to wall mount your TV, use a VESA-compatible wall mount kit (not included). Refer to the 'Rear Panel Connections' section for VESA mounting point dimensions (200mm x 200mm). Follow the wall mount kit's instructions carefully.

4.3 Connecting External Devices

Use the ports on the rear panel (refer to section 3.2) to connect your devices:

- HDMI: Connect Blu-ray players, game consoles, or set-top boxes to HDMI 1, HDMI 2, or HDMI 3.
- USB: Insert USB drives for media playback into USB 1 or USB 2.
- Antenna/Cable: Connect your antenna or cable TV signal to the DVB-T/T2 or DVB-S/S2 input.
- Ethernet: For a wired internet connection, plug an Ethernet cable into the RJ 45 port.
- Optical: For digital audio output to a soundbar or home theater system.

4.4 Power Connection and Initial Setup

- 1. Plug the power cord into the TV's power input, then into a wall outlet.
- 2. Press the power button on the remote control or TV.
- 3. Follow the on-screen instructions for the initial Android TV setup, including language selection, network connection (Wi-Fi or Ethernet), Google account login, and channel scanning.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- Power On/Off: Press the power button on the remote.
- Navigation: Use the arrow buttons on the remote to navigate menus and select items with the OK button.
- Volume: Use the VOL +/- buttons.
- Input Source: Press the 'Source' button to switch between HDMI, TV, USB, and other inputs.

5.2 Android TV Features

- Home Screen: Access apps, live TV, and recommended content.
- Apps: Download and manage applications from the Google Play Store. Supported services include Disney Plus, Netflix, Prime Video, and YouTube.
- Chromecast Built-in: Cast content from your compatible smartphone, tablet, or computer directly to the TV.
- **Voice Control:** Use the microphone button on your remote to issue voice commands (e.g., "Open Netflix," "Search for movies").

• Bluetooth: Connect Bluetooth devices such as headphones or game controllers.

6. MAINTENANCE

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.

6.2 General Care

- Avoid exposing the TV to direct sunlight or extreme temperatures.
- Do not block ventilation openings.
- Replace remote control batteries (2 AAA) when needed.

7. TROUBLESHOOTING

If you encounter issues, try the following solutions before contacting support:

| Problem | Possible Solution |
|----------------------------------|--|
| No power | Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet. |
| No picture, but sound is present | Ensure the correct input source is selected. Check cable connections to external devices. |
| No sound | Check volume levels. Ensure mute is not activated. Verify audio output settings. |
| Remote control not working | Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor. |
| Cannot connect to Wi-Fi | Check your router and modem. Re-enter Wi-Fi password. Try restarting the TV and router. |


8. SPECIFICATIONS

| Feature | Detail |
|--------------------|--------------------|
| Brand | Smart Tech |
| Model Number | 40FA10V3 |
| Screen Size | 40 Inches (101 cm) |
| Display Technology | LED |
| Resolution | 1080p (Full HD) |
| Refresh Rate | 60 Hz |

| Feature | Detail |
|---------|--------|
| | |

| Operating System | Android 9.0 |
|-----------------------------|--|
| Connectivity | Bluetooth, Wi-Fi, Ethernet |
| Special Features | Chromecast Built-in |
| Internet Services Supported | Disney Plus, Netflix, Prime Video, YouTube |
| HDMI Ports | 3 |
| USB Ports | 2 |
| Aspect Ratio | 16:9 |
| Batteries Included | 2 AAA |

8.1 Energy Efficiency

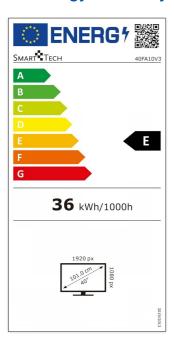

This image shows the EU Energy Label for the Smart Tech 40FA10V3 television. It indicates an energy efficiency class of E and an energy consumption of 36 kWh per 1000 hours. The label also displays the screen size as 40 inches (101 cm) with a resolution of 1920x1080 pixels. For more details, visit the official EPREL database: https://eprel.ec.europa.eu/qr/964843

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Smart Tech website. Keep your proof of purchase for warranty claims.

