

## Smart Tech 32HA10V3

# Smart Tech 32HA10V3 HD LED Android TV User Manual

Model: 32HA10V3

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Smart Tech 32HA10V3 HD LED Android TV. Please read this manual thoroughly before using the television and retain it for future reference.

The Smart Tech 32HA10V3 is a 32-inch (80 cm) HD LED television featuring Android 9.0, a Quad Core processor, 1.5GB RAM, and 8GB storage. It supports DVB-T2/C/S2 tuners, H.265 decoding, Dolby Audio, 2T2R WLAN, Bluetooth, and integrates Google Assistant, Netflix, YouTube, Prime Video, and HbbTV functionalities.



Image 1.1: Front view of the Smart Tech 32HA10V3 TV displaying the Android TV home screen with various streaming applications.

## 2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage and ensure safe operation:

- **Power Supply:** Connect the TV only to an AC 220-240V, 50/60Hz power outlet.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Heat Sources:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Mounting:** Use only wall mounts or stands recommended by the manufacturer. Ensure the TV is securely mounted to prevent falling.
- **Batteries:** Dispose of used batteries responsibly. Do not mix old and new batteries or different types of batteries.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Smart Tech 32HA10V3 TV Unit
- Remote Control (with 2 AAA batteries included)
- TV Stand (Base and Screws)
- User Manual (this document)

## 4. SETUP

---

### 4.1 Attaching the Stand

1. Carefully place the TV face-down on a soft, flat surface to prevent screen damage.
2. Align the stand base with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure the stand is firmly attached.
4. Carefully lift the TV to an upright position on a stable surface.

### 4.2 Wall Mounting (Optional)

If you choose to wall mount your TV, remove the stand first. The TV supports VESA mounting with a 100x100mm pattern. Use M4 screws of appropriate length. Consult a professional for wall mounting to ensure safety.

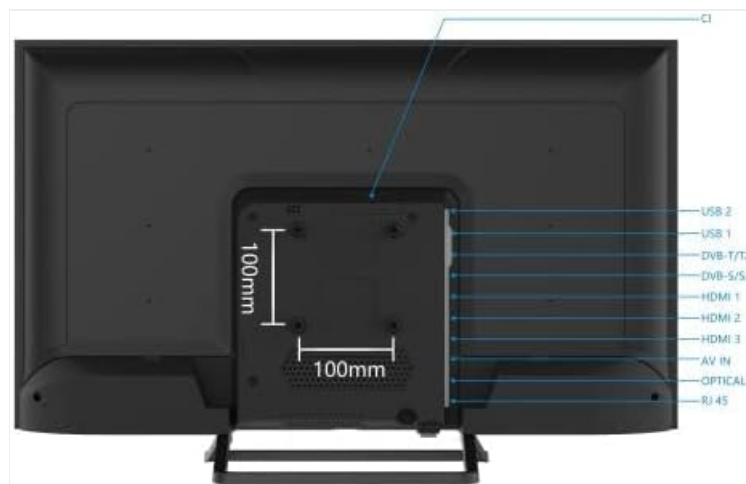


Image 4.1: Rear view of the TV indicating VESA 100x100mm mounting points and various input/output ports.

### 4.3 Connecting Peripherals

Refer to the rear panel diagram for port locations:

- **HDMI (x3):** Connect Blu-ray players, game consoles, or set-top boxes.
- **USB (x2):** Connect USB storage devices for media playback.
- **DVB-T2/C/S2:** Connect an antenna for terrestrial/cable TV or a satellite dish for satellite TV.
- **AV IN:** Connect older devices using composite video and stereo audio cables.
- **OPTICAL:** Digital audio output for soundbars or home theater systems.
- **RJ45 (Ethernet):** Connect to a wired network for internet access.

### 4.4 Initial Power On and Setup Wizard

1. Plug the power cord into the TV and then into a wall outlet.
2. Press the Power button on the remote control or TV.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), Google account sign-in, and channel scanning.

## 5. OPERATING YOUR TV

---

### 5.1 Remote Control Overview

The remote control allows you to access all TV functions. Insert the two AAA batteries (included) into the remote control, ensuring correct polarity.



Image 5.1: TV dimensions and an illustration of the remote control.

- **Power:** Turns the TV on or off.
- **Source:** Selects input source (HDMI, AV, Tuner).
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Navigation Buttons:** Up, Down, Left, Right, and OK for menu navigation.
- **Back:** Returns to the previous screen.
- **Home:** Accesses the Android TV home screen.
- **Google Assistant:** Activates voice control.
- **App Buttons:** Dedicated buttons for Netflix, YouTube, Prime Video.

## 5.2 Smart TV Features (Android TV)

Your TV runs on Android 9.0, providing access to a wide range of apps and services:

- **Google Play Store:** Download and install additional applications.
- **Google Assistant:** Use voice commands to search for content, control smart home devices, and get information.
- **Chromecast Built-in:** Cast content from your smartphone or tablet to the TV.
- **Pre-installed Apps:** Netflix, YouTube, Prime Video, and more.

## 5.3 Network Connection

To access Smart TV features, connect your TV to the internet:

- **Wi-Fi:** Navigate to Settings > Network & Internet, select your Wi-Fi network, and enter the password.
- **Ethernet:** Connect an Ethernet cable from your router to the RJ45 port on the TV. The TV will automatically detect the wired connection.

# 6. MAINTENANCE

## 6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner

directly onto the screen.

- Avoid using alcohol, benzene, thinners, or other volatile substances.

### 6.2 Software Updates

Your Android TV may receive software updates to improve performance and add new features. You can check for updates via Settings > Device Preferences > About > System update.

## 7. TROUBLESHOOTING

Problem	Possible Cause / Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Ensure the wall outlet is functional.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly. Adjust brightness/contrast settings.
No sound, but picture is present	Check volume level and mute status. Ensure audio cables are connected correctly. Check audio output settings.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the TV. Verify the Wi-Fi password. Restart your router. Try a wired Ethernet connection.
Apps are slow or crashing	Close unused apps. Clear app cache (Settings > Apps > [App Name] > Clear cache). Restart the TV.

## 8. SPECIFICATIONS

Feature	Specification
Model	32HA10V3
Screen Size	32 inches (80 cm)
Display Technology	LED
Resolution	1366 x 768 pixels (HD Ready)
Operating System	Android 9.0
Processor	Quad Core
Memory (RAM)	1.5 GB
Storage (ROM)	8 GB
Tuner Technology	DVB-T2, DVB-C, DVB-S2
Video Decoding	H.265
Audio Technology	Dolby Audio
Output Wattage	26 Watts (Total for speakers: 8 Watts)
Connectivity	2T2R WLAN (Wi-Fi), Bluetooth, Ethernet (RJ45)

Feature	Specification
Ports	3x HDMI, 2x USB 2.0, AV In, Optical Audio Out, Antenna In
Refresh Rate	60 Hz
Response Time	8 Milliseconds
Power Consumption (SDR)	26 kWh/1000h (Energy Class E)
Dimensions (with stand)	71.95 x 22.5 x 46.4 cm
Weight	3.6 kg
VESA Mount	100 x 100 mm

For detailed energy information, refer to the EU Energy Label:<https://eprel.ec.europa.eu/qr/964841>

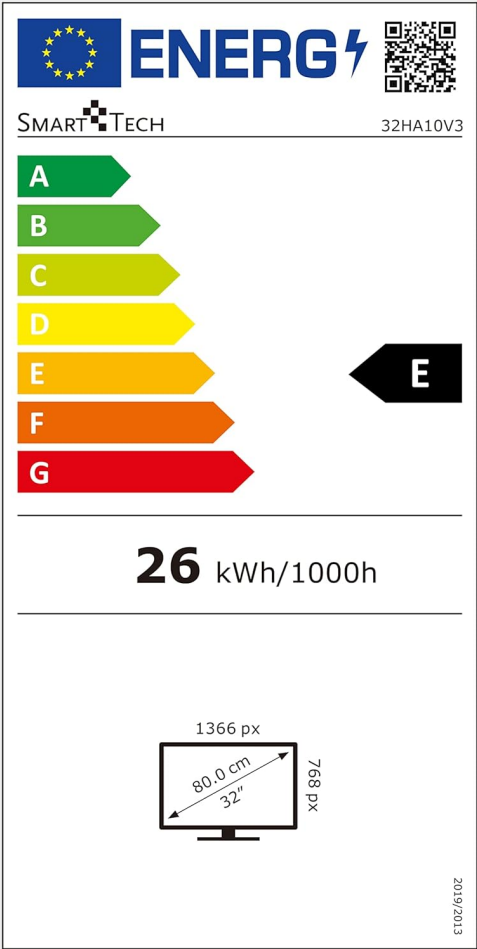


Image 8.1: EU Energy Label for the Smart Tech 32HA10V3 TV.

## 9. WARRANTY AND SUPPORT

Smart Tech products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Smart Tech website. Keep your proof of purchase for warranty claims. For further assistance, contact your local retailer or the Smart Tech customer service department.

## Related Documents - 32HA10V3

	<p><a href="#">DYON SMART 43 XT V2 Quick Guide - Setup and Operation</a></p> <p>Concise setup and operation guide for the DYON SMART 43 XT V2 television. Covers initial connection, setup wizard, remote control functions, and support information.</p>
	<p><a href="#">Denver LDS-4368 Smart TV User Guide</a></p> <p>Comprehensive user guide for the Denver LDS-4368 Smart TV, covering safety information, product features, connections, remote control functions, and detailed setup and customization options for picture, audio, network, channels, time, locks, and apps.</p>
	<p><a href="#">DENVER LDS-5071 Smart TV Quick Start Guide</a></p> <p>Quick start guide for the DENVER LDS-5071 Smart TV, covering setup, connections, channel installation, safety information, and basic operation.</p>
	<p><a href="#">alphatronics User Manual: TV Sets with webOS Hub Operating System</a></p> <p>Comprehensive user manual for alphatronics TV sets featuring the webOS Hub operating system. Covers setup, features, safety, troubleshooting, and technical specifications for mobile environments.</p>
	<p><a href="#">STRONG 4K UHD Smart TV SRT 50UC7433 / SRT 55UC7433 Installation Guide</a></p> <p>Comprehensive installation guide for STRONG 4K UHD Smart TVs models SRT 50UC7433 and SRT 55UC7433, covering setup, wall mounting, connections, and channel tuning.</p>

