

AKORD OP0LSZADAB009

AKORD Shoe Cabinet with 4 Flip-Down Doors - Sonoma Oak

Model: OP0LSZADAB009

Brand: AKORD

INTRODUCTION

This manual provides essential information for the safe and efficient use of your AKORD Shoe Cabinet. Please read these instructions carefully before assembly and use, and retain them for future reference. The AKORD Shoe Cabinet is designed for shoe storage in entryways, hallways, or similar areas, featuring four flip-down doors and multiple compartments.

SAFETY INFORMATION

General Safety Warning: Follow assembly instructions carefully to ensure stability and structural integrity. Ensure the cabinet is securely fastened to prevent tipping or collapse. Always use safety gear as recommended during assembly and maintenance.

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the unit on a soft, clean surface to avoid scratching the furniture.
- Do not overload the cabinet. Distribute weight evenly across compartments.
- Always use the provided wall-anchoring hardware to secure the cabinet to a solid wall. This is crucial to prevent tipping, especially in households with children.
- Avoid placing hot items directly on the cabinet surface.
- Do not stand or climb on the cabinet.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the included assembly diagram for a complete list of parts.

- Cabinet panels (top, bottom, sides, back)
- 4 Flip-down door panels
- Internal shoe compartments/shelves
- Hardware pack (screws, dowels, hinges, handles, wall anchors)
- Assembly instructions leaflet

SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that two adults assemble the cabinet. Please follow the step-by-step instructions provided in the separate assembly leaflet included in your package. Ensure you have the necessary tools (e.g., screwdriver, hammer) before starting.

Key Assembly Steps:

1. **Unpack and Identify Parts:** Lay out all panels and hardware. Compare them with the parts list in the assembly guide.
2. **Assemble the Main Frame:** Connect the side panels to the top and bottom panels using the provided fasteners.
3. **Install Back Panel:** Secure the back panel to the main frame for added stability.
4. **Attach Flip-Down Doors:** Install hinges onto the door panels and then attach them to the cabinet frame.
5. **Insert Internal Compartments:** Place the shoe compartments/shelves inside the flip-down doors.
6. **Attach Handles:** Secure the handles to the front of each flip-down door.
7. **Wall Anchoring:** Position the cabinet in its desired location. Use the provided wall anchoring hardware to secure the cabinet to the wall. This step is critical for safety.

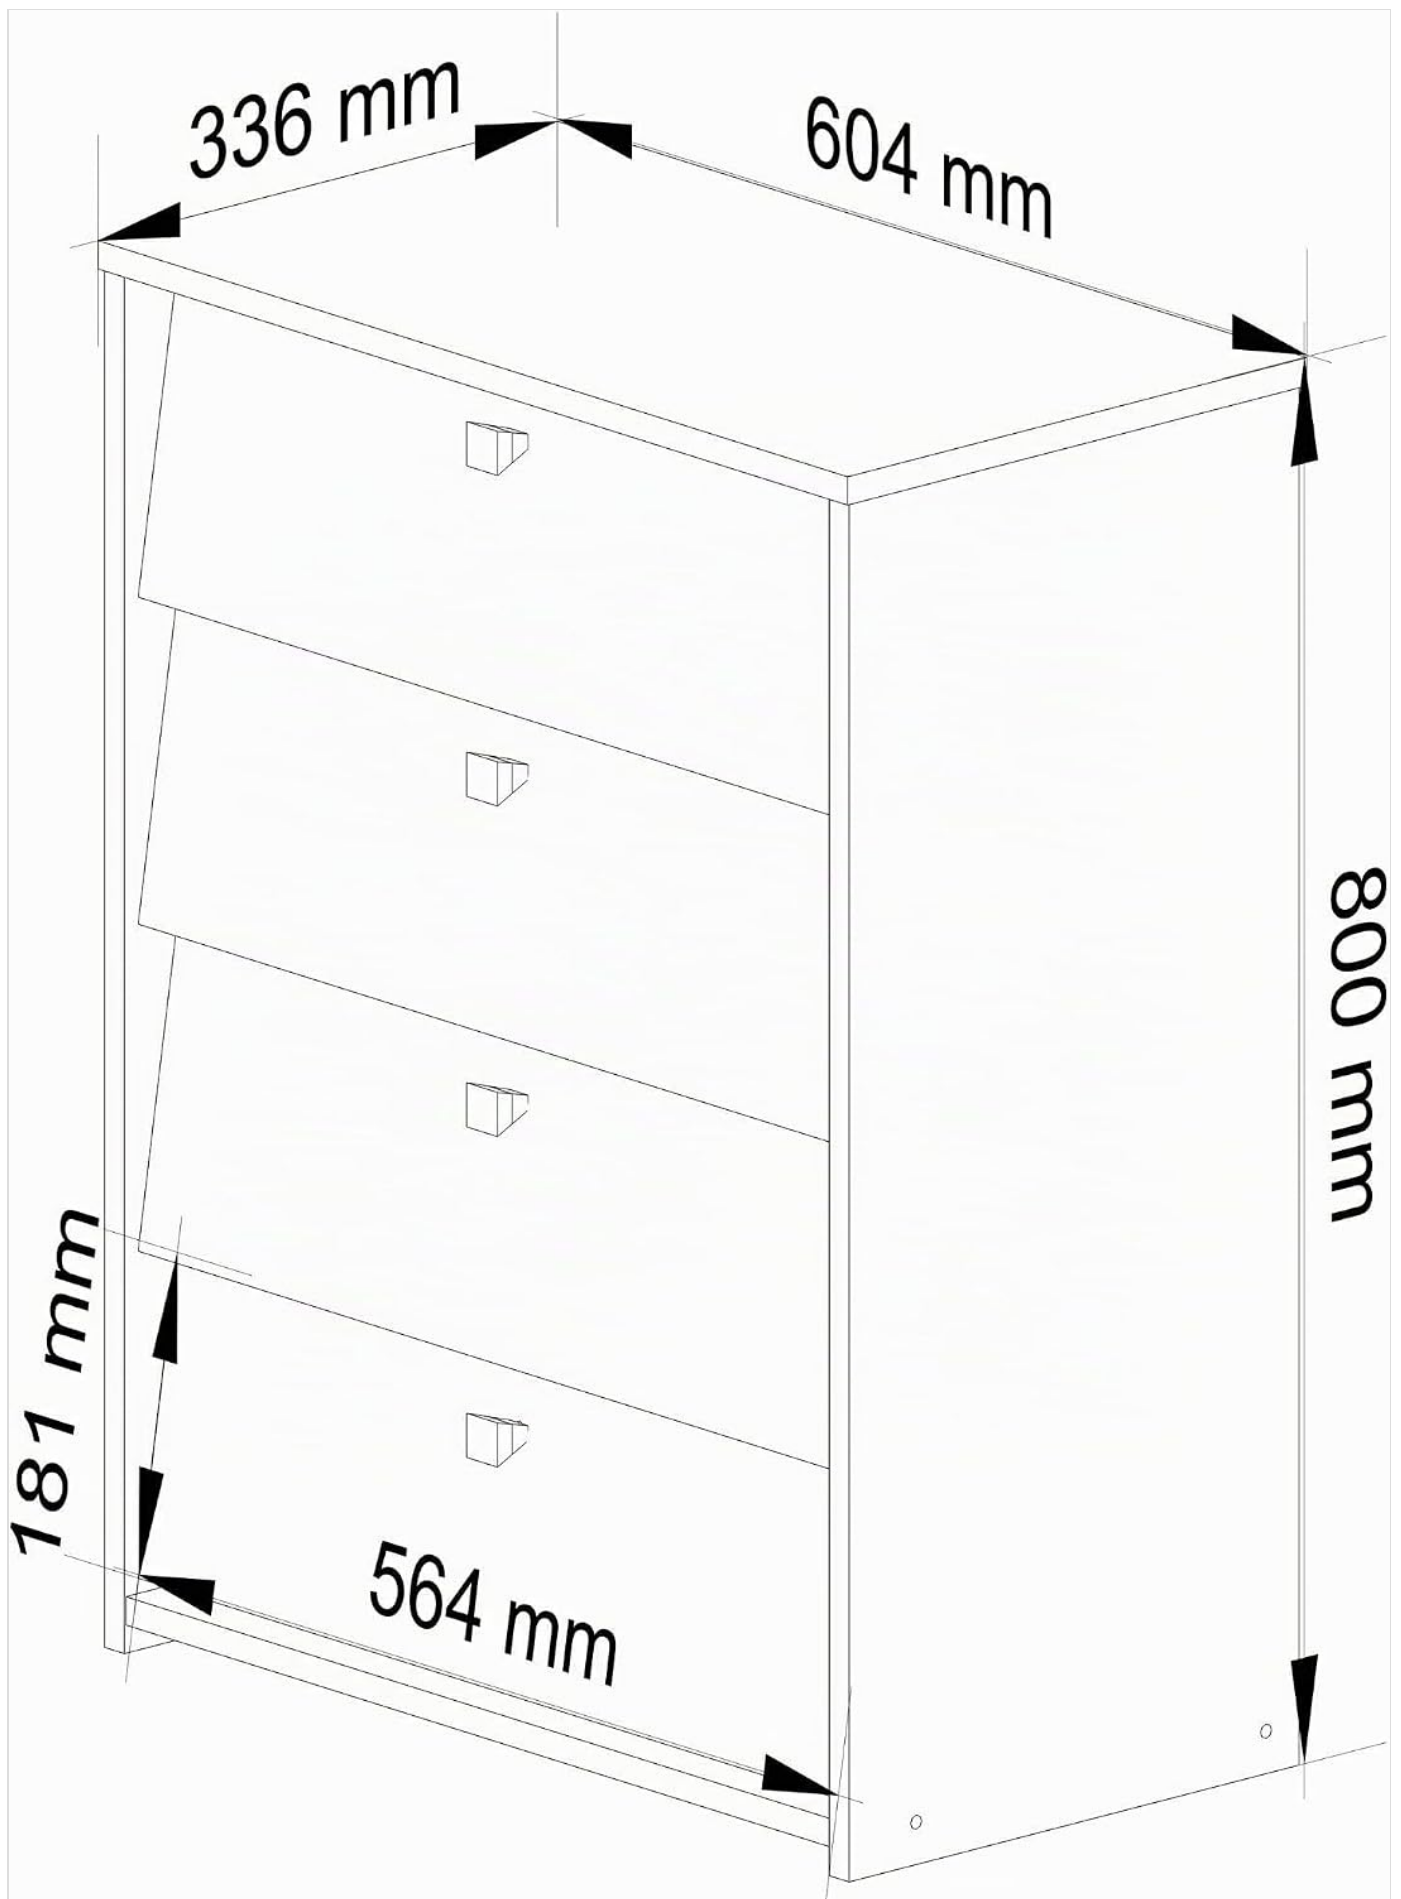


Image: Technical drawing illustrating the dimensions of the shoe cabinet (604mm width, 800mm height, 336mm depth).



Image: The AKORD shoe cabinet in Sonoma Oak, positioned in an entryway with decorative shelves above it.

OPERATING INSTRUCTIONS

The AKORD Shoe Cabinet is designed for easy access and organization of your footwear.

- **Opening Doors:** Gently pull the handle on each flip-down door to open it. The doors are designed to tilt forward, revealing the shoe compartments.
- **Storing Shoes:** Place shoes into the designated compartments within each door. The cabinet features 5 compartments suitable for various shoe types.
- **Closing Doors:** Push the flip-down door back into the cabinet until it is fully closed and flush with the cabinet front.
- **Capacity:** Each compartment can typically hold 1-2 pairs of shoes, depending on their size and style. Avoid forcing oversized shoes into compartments.

**Le pratiche maniglie
facilitano l'apertura e
la chiusura
dell'armadietto**



Image: The shoe cabinet with its four flip-down doors open, displaying shoes stored within the internal compartments.



Image: A close-up view highlighting the metal handles on the flip-down doors, designed for easy opening and closing.

MAINTENANCE

Proper care will ensure the longevity and appearance of your AKORD Shoe Cabinet.

- **Cleaning:** Wipe surfaces with a dry, soft cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed immediately by drying with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Spills:** The cabinet surfaces are dirt and water repellent. Wipe up spills immediately to prevent staining or damage.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood material.

TROUBLESHOOTING

If you encounter issues with your shoe cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Loose hinges or incorrect hinge adjustment during assembly.	Check and tighten all hinge screws. Adjust hinges as per assembly instructions if they allow for adjustment. Ensure no obstructions are preventing closure.
Cabinet feels wobbly or unstable.	Loose fasteners or not properly anchored to the wall.	Ensure all assembly screws are tightened. Verify that the cabinet is securely anchored to a solid wall using the provided anti-tip hardware.
Scratches or minor surface damage.	Accidental impact or abrasive cleaning.	For minor scratches, touch-up pens or furniture repair kits matching the Sonoma Oak finish may be used. Avoid abrasive materials for cleaning.

If you experience issues not covered here, please contact AKORD customer support.

SPECIFICATIONS

Feature	Detail
Brand	AKORD
Model Number	OP0LSZADAB009
Color	Sonoma Oak
Material	Laminated Wood (16 mm thick furniture board)
Dimensions (W x H x D)	60 cm x 80 cm x 33 cm (23.6 x 31.5 x 13 inches)
Item Weight	22.6 kg (49.8 lbs)
Maximum Weight Capacity	29 kg (63.9 lbs)
Number of Doors	4 (Flip-down style)
Number of Compartments	5 (internal shoe compartments)
Special Features	Robust construction, dirt and water repellent surfaces, wall-mountable for stability.
Assembly Required	Yes
Country of Origin	Poland

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support, missing parts, or further assistance, please contact AKORD customer service through the retailer's platform or the official AKORD website.

Please have your model number (OP0LSZADAB009) and purchase date ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question