

[Manuals.plus](#) /

> [AKORD](#) /

> AKORD K60 6-Drawer Chest of Drawers: Assembly and User Manual

## AKORD K60

# AKORD K60 6-Drawer Chest of Drawers: Assembly and User Manual

Model: K60 | Brand: AKORD

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, safe operation, and maintenance of your new AKORD K60 6-drawer chest of drawers. Please read all instructions carefully before beginning assembly and retain this manual for future reference.





Image 1: AKORD K60 6-Drawer Chest of Drawers (White / Sonoma Oak finish).

## 2. SAFETY INFORMATION

---

- Always assemble the furniture on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- To prevent tipping, always use the included anti-tip hardware to secure the chest of drawers to a wall. This is crucial for child safety.
- Do not allow children to climb on drawers or shelves.
- Distribute weight evenly across drawers. Avoid placing heavy items in the top drawers only.
- Do not exceed the maximum weight capacity for each drawer or the top surface.

## 3. PACKAGE CONTENTS

---

Before beginning assembly, verify that all components and hardware are present. If any parts are missing or damaged, please contact customer support.

### Components:

- Laminated particle board panels for frame and drawers.
- Drawer fronts (6 units).
- Drawer bottoms.
- Metal drawer slides (6 pairs).

#### Hardware:

- Screws, dowels, cam locks, and other fasteners.
- Anti-tip hardware.

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully to assemble your AKORD K60 chest of drawers. It is recommended to have two people for assembly.

### Step 1: Prepare Drawer Slides

Unpack the metal drawer slides. Each slide consists of two main parts: one for the drawer and one for the cabinet frame. Separate these parts by pressing the small lever on the inner slide and pulling it apart.

Your browser does not support the video tag.

Video 1: Detailed guide on how to separate and prepare the drawer slides for installation. This video demonstrates the mechanism for detaching the inner slide from the outer slide, which is essential before mounting them to the drawer and cabinet.

### Step 2: Attach Slides to Drawer Sides

Attach the inner part of the metal slides to the pre-drilled holes on the sides of each drawer. Ensure they are oriented correctly, with the roller mechanism facing the front of the drawer.



Image 2: Attaching the inner part of the drawer slide to the drawer side panel using screws.

### Step 3: Assemble Drawer Boxes

Connect the drawer sides, back, and front panels using the provided hardware (e.g., dowels and cam locks). Slide the drawer bottom into the grooves. Ensure the drawer is square and stable.



Image 3: Illustration of drawer box assembly, showing how panels connect and the bottom slides into place.

#### **Step 4: Attach Slides to Cabinet Frame**

Attach the outer part of the metal slides to the pre-drilled holes on the inner sides of the cabinet frame. Ensure they are level and correctly aligned for smooth drawer operation.



Image 4: Securing the outer part of the drawer slide to the cabinet's side panel.

#### **Step 5: Assemble Cabinet Frame**

Connect the side panels, top, and bottom panels of the cabinet using the provided hardware. Ensure the back panel is properly installed to add stability and squareness to the frame.



Image 5: The fully assembled AKORD K60 chest of drawers, ready for use.

### Step 6: Insert Drawers

Carefully align the assembled drawers with the cabinet slides and push them in until they click into place. Test each drawer for smooth operation.

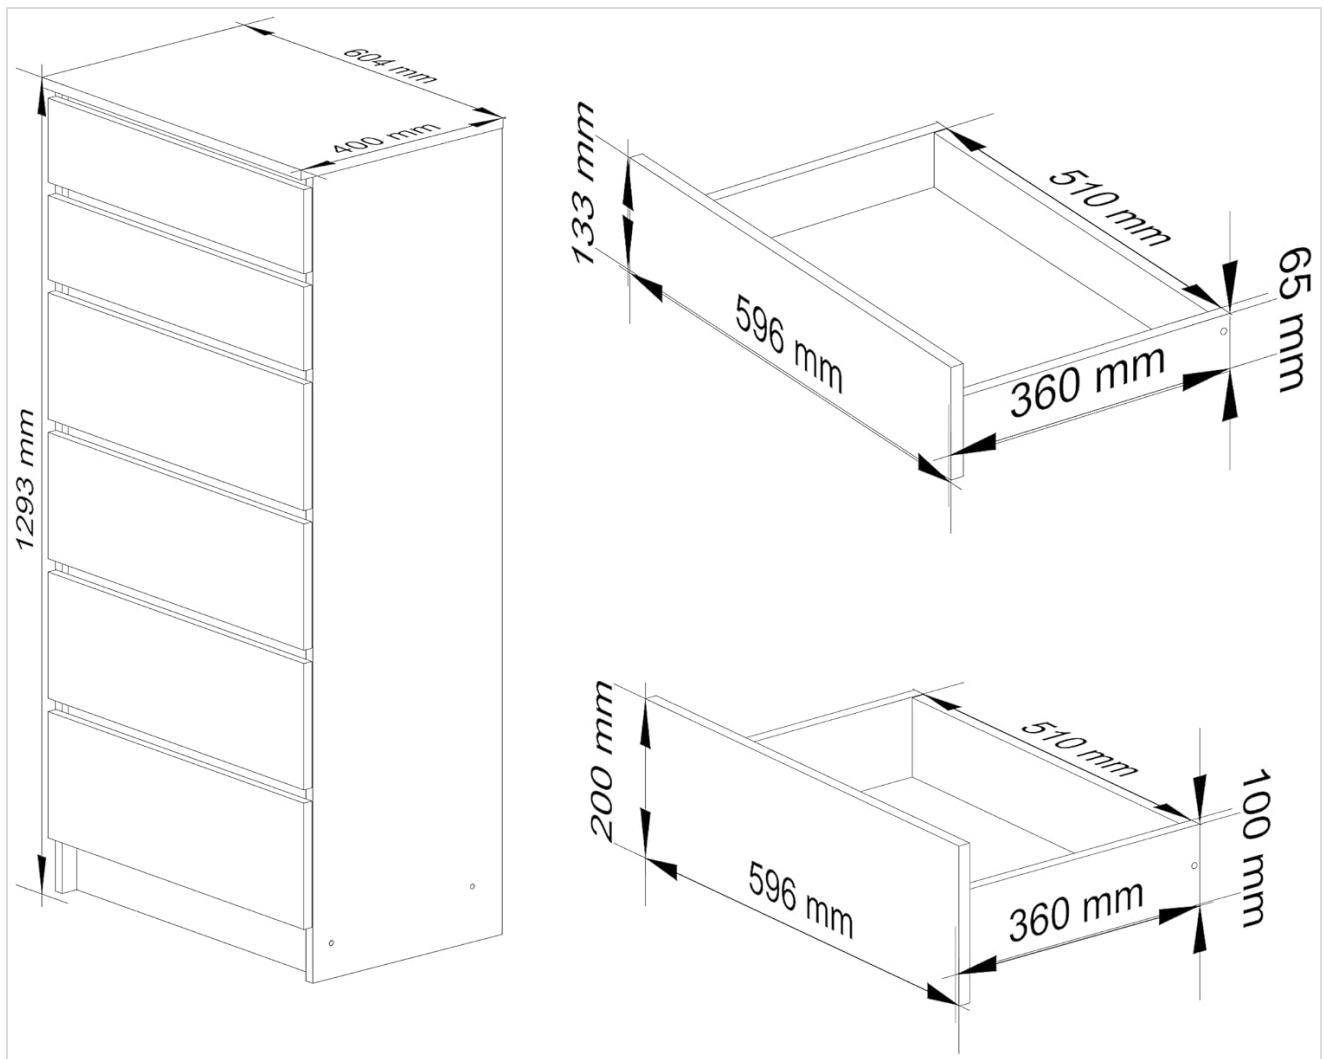


Image 6: View of the drawers fully installed and functioning smoothly.

## 5. USAGE

The AKORD K60 chest of drawers is designed for storing clothing, linens, and other household items. Its handle-less design provides a clean, modern aesthetic. Ensure items are placed within the drawers without overfilling to allow for smooth opening and closing.

The robust top surface can be used for decorative items, lamps, or other light objects. Avoid placing excessively heavy items on the top surface to maintain stability and prevent damage.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. For stubborn marks, a mild, non-abrasive cleaner can be used, followed by wiping with a dry cloth. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage to the laminated particle board.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain the structural integrity of the furniture.
- **Drawer Slides:** If drawers become stiff, a small amount of silicone-based lubricant can be applied to the metal slides.

## 7. TROUBLESHOOTING

**Problem: Drawers do not slide smoothly.**

- **Solution:** Check if the drawer slides are correctly aligned and securely fastened to both the drawer and the cabinet frame. Ensure no objects are obstructing the slides. Apply a silicone lubricant if necessary.

**Problem: Chest of drawers feels unstable.**

- **Solution:** Verify that all assembly hardware is fully tightened. Ensure the chest is placed on a level surface. Most importantly, confirm that the anti-tip hardware is correctly installed and secured to a wall stud.

**Problem: Missing or damaged parts.**

- **Solution:** Do not attempt to assemble with missing or damaged parts. Contact AKORD customer support for replacements.

## 8. SPECIFICATIONS

Feature	Detail
Brand	AKORD
Model	K60
Color	White / Sonoma Oak
Product Dimensions (L x W x H)	40 x 60 x 130 cm
Item Weight	31.5 kg
Material	Engineered Wood
Finish Type	Brushed
Number of Drawers	6
Style	Classic
Room Type	Bedroom, Living Room
Care Instructions	Wipe with a damp cloth



Image 7: Technical drawing showing the dimensions of the AKORD K60 chest of drawers.

## 9. WARRANTY AND SUPPORT

---

Your AKORD K60 chest of drawers is covered by standard legal guarantees. For specific warranty details, please refer to your purchase documentation or contact the seller directly. We offer specialized customer support for any questions or issues you may encounter.

For assistance, please contact Furniture-Akord customer service through your purchase platform or visit the official AKORD brand store for more information.

Returns are accepted within 30 days of purchase, subject to the seller's return policy.