

AKORD OP0LK-1VENSON008

AKORD K120 10-Drawer Chest Instruction Manual

PRODUCT OVERVIEW

The AKORD K120 10-drawer chest offers spacious and organized storage. Its practical design accommodates numerous small items, office supplies, or personal belongings, helping to maintain an orderly space. Its versatile structure makes it suitable for living rooms, dining rooms, bedrooms, offices, or children's rooms.

This spacious chest features 10 drawers, providing ample storage. Its top surface is suitable for decorations, accessories, or a television. It is ideal for living rooms, bedrooms, or youth rooms.

Practical and robust, this handle-less chest measures 120 cm wide and 121 cm high. It is designed to be resistant to abrasion and mechanical damage. The spacious drawers facilitate easy organization of various items, helping to maintain room tidiness.

Its modern and versatile design complements various decor styles, integrating seamlessly into any room. The stable structure provides an efficient storage solution without excessive space consumption.

Constructed from 16 mm thick laminated board with abrasion-resistant ABS protected edges. Drawers feature metal runners for smooth gliding and comfortable use.



AKORD K120 10-Drawer Chest in Wenge with Sonoma Oak fronts, displayed in a modern living room setting. This chest offers both aesthetic appeal and practical storage.

 
SETUP INSTRUCTIONS


The AKORD K120 chest is delivered unassembled and includes clear instructions for straightforward assembly. Please follow these general steps for proper setup:

1. **Unpack Components:** Carefully unpack all parts and hardware from the packaging. Verify that all components listed in the included parts list are present and undamaged.
2. **Identify Parts:** Refer to the assembly diagram to identify each panel, screw, and fitting. Lay them out in an organized manner to simplify the process.
3. **Assemble Frame:** Begin by assembling the main frame of the chest according to the step-by-step instructions provided. Ensure all connections are secure but do not overtighten screws until the entire frame is stable.
4. **Install Drawer Runners:** Attach the metal drawer runners to the side panels of the chest, ensuring they are

level and correctly oriented for smooth drawer operation.

5. **Assemble Drawers:** Construct each of the ten drawers. Pay close attention to the orientation of the drawer fronts and backs. Install the corresponding drawer runners onto each assembled drawer.
6. **Insert Drawers:** Carefully slide each assembled drawer into its designated slot within the chest frame. Test each drawer for smooth movement.
7. **Secure to Wall (Optional but Recommended):** For safety and stability, especially in households with children or pets, it is highly recommended to secure the chest to a wall using the anti-tip hardware provided. Follow the specific instructions for wall mounting.

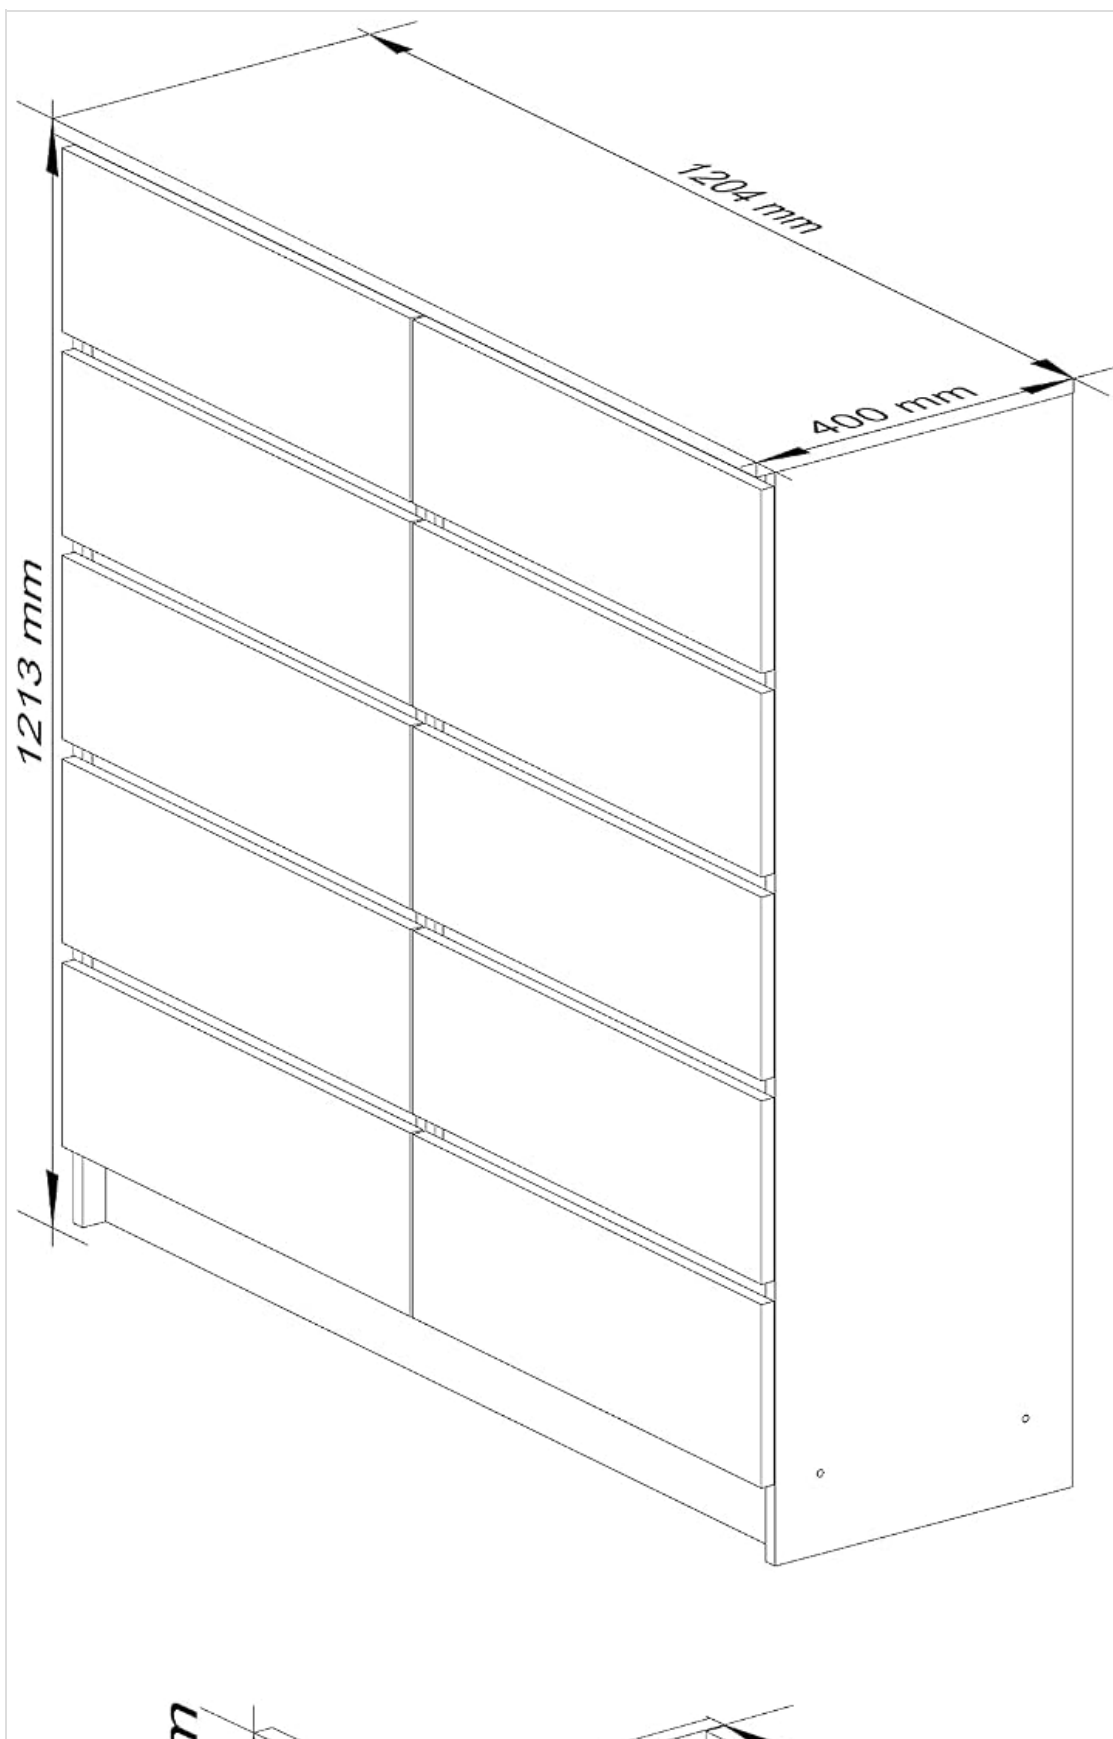

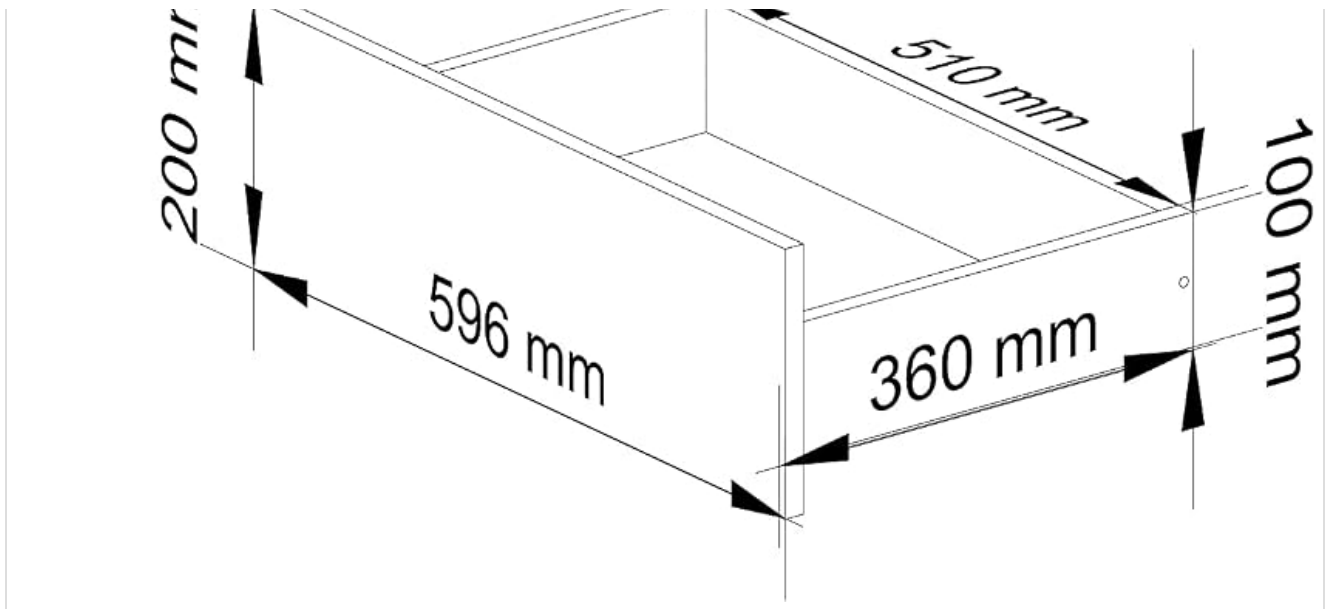

This diagram illustrates the overall dimensions of the AKORD K120 chest: 1204 mm width, 400 mm depth, and 1213 mm height. It also provides detailed dimensions for a single drawer: 596 mm width, 360 mm depth, 200 mm height for the front panel, and 100 mm internal height.

OPERATING INSTRUCTIONS

The AKORD K120 chest is designed for straightforward use. Each of the ten drawers operates independently on metal runners, ensuring smooth opening and closing.

- **Opening Drawers:** To open a drawer, gently pull the front panel outwards. The metal runners will guide the drawer smoothly.
- **Closing Drawers:** To close a drawer, push the front panel inwards until it is flush with the chest frame. Ensure no items are obstructing the drawer's path.
- **Weight Distribution:** Distribute items evenly within the drawers to prevent excessive strain on the runners and maintain the chest's stability. Avoid placing excessively heavy items in a single drawer.
- **Top Surface Use:** The top surface can be used to display decorative items, store frequently accessed objects, or support a television. Ensure the weight placed on the top surface does not exceed the chest's stability limits.




This image displays the AKORD K120 chest with multiple drawers pulled open, highlighting the ample storage space available within each of the ten compartments. The Wenge frame contrasts with the Sonoma Oak drawer fronts.

MAINTENANCE

Proper maintenance will help preserve the appearance and functionality of your AKORD K120 chest.

- **Cleaning:** The laminated surface is resistant to water, stains, and scratches. It can be easily cleaned with a dry or damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the finish.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth to prevent buildup.
- **Drawer Runners:** Periodically check the metal drawer runners for any debris or dust that might impede smooth operation. If necessary, clean the runners and apply a small amount of silicone-based lubricant to ensure continued smooth gliding.
- **Hardware Check:** Occasionally inspect all screws and fittings to ensure they remain tight. Retighten if necessary to maintain structural integrity.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the furniture finish. Position the chest away from direct sunlight or use window coverings.

- **Humidity Control:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood-based materials.

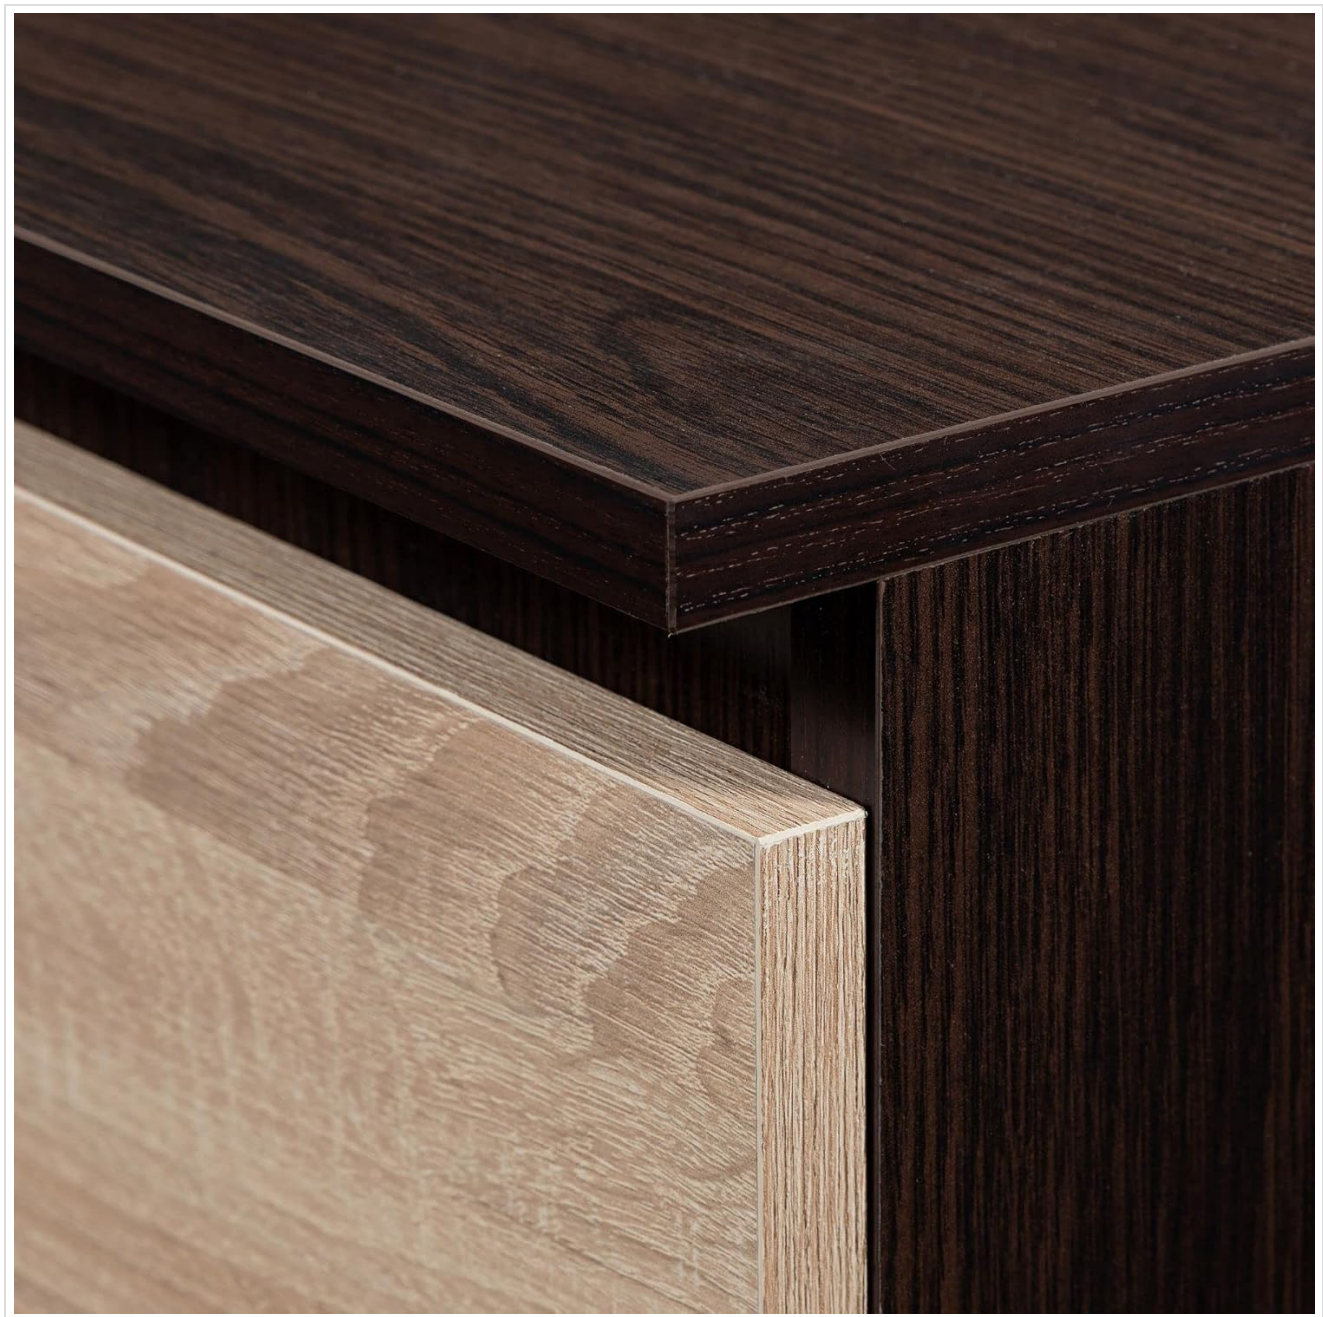

A detailed view of the drawer front, showing the Sonoma Oak finish and the precise fit against the Wenge frame. This illustrates the quality of the laminated board and edge protection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Difficulty during assembly	Instructions unclear, parts misidentified, or insufficient force applied.	Review the assembly manual carefully. Ensure all parts are correctly identified and oriented. If a step requires significant force, ensure it is applied correctly and gradually. Consider seeking assistance if needed.
Drawers do not slide smoothly	Drawer runners misaligned, debris in runners, or screws protruding.	Check that the drawer runners on both the drawer and the chest frame are perfectly aligned. Clean any dust or debris from the runners. Ensure all screws are fully tightened and not protruding, which could obstruct movement.

Problem	Possible Cause	Solution
Chest feels unstable or wobbly	Loose connections or uneven floor.	Tighten all assembly screws. Ensure the chest is placed on a level surface. If the floor is uneven, use furniture pads or shims to stabilize the chest. Always use the provided anti-tip hardware to secure the chest to a wall.
Missing parts or damaged components upon arrival	Manufacturing or shipping error.	Contact AKORD customer support immediately with your purchase details and a description of the missing or damaged parts. Do not attempt to assemble with incomplete or damaged components.

SPECIFICATIONS

Feature	Detail
Model Number	OP0LK-1VENSON008
Dimensions (W x D x H)	120 cm x 40 cm x 121 cm (approximately 47.2 x 15.7 x 47.6 inches)
Weight	73 kg (approximately 160.9 lbs)
Number of Drawers	10
Color	Wenge / Sonoma Oak
Material	Laminated Board (16 mm thick)
Edge Protection	ABS resistant to abrasion
Drawer Mechanism	Metal runners
Care Instructions	Clean with a dry or damp cloth
Style	Modern
Room Type	Living Room, Bedroom, Office, Children's Room

WARRANTY AND SUPPORT

Specific warranty details for the AKORD K120 10-Drawer Chest may vary by retailer and region. Please refer to your purchase documentation or the retailer's website for precise warranty information.

For product support, including inquiries about missing parts, assembly assistance, or general product questions, please contact the manufacturer or your point of purchase. Ensure you have your model number (OP0LK-1VENSON008) and proof of purchase available when contacting support.

Manufacturer: AKORD

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question