

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA TISKEN Basket with Suction Cup User Manual

IKEA TISKEN

IKEA TISKEN Basket with Suction Cup User Manual

Model: TISKEN | Brand: IKEA

1. PRODUCT OVERVIEW

The IKEA TISKEN series offers practical storage solutions that can be easily installed without the need for drilling. The TISKEN Basket with Suction Cup is designed to provide convenient storage in areas like bathrooms and kitchens, utilizing smooth surfaces such as glass or tiles. Its robust suction cups ensure a tight grip, and the design allows for easy removal without leaving marks.



Figure 1: The IKEA TISKEN Basket with Suction Cup, a white rectangular basket with two integrated suction cups for wall mounting.

2. FEATURES

- **Material Composition:** Frame/Plate: Polycarbonate Plastic; Suction Cup: Synthetic Rubber; Cover/Body: Recycled ABS Plastic; Basket: ABS Plastic.
- **Easy Drainage:** Water drains easily through the holes located in the bottom of the basket, preventing water accumulation.
- **Tool-Free Assembly:** Features a one-push assembly mechanism, requiring no tools for installation. Simply clean the wall surface and push to attach.
- **Damage-Free Removal:** To release and remove, insert a credit card or similar thin object between the suction cup and the wall. This method ensures no holes or marks are left behind.
- **Strong Suction:** The suction cups provide a tight and reliable grip on smooth, non-porous surfaces.
- **Weight Capacity:** Designed to hold up to 3 kg (approximately 6.6 pounds).

3. SAFETY INFORMATION

Important Safety Notes:

- Do not attach the TISKEN basket to wallpaper or other delicate surfaces, as this may cause damage to the material.
- Ensure the surface is clean and dry before mounting the suction cup to achieve optimal grip and prevent the basket from falling.

- Adhere strictly to the maximum weight capacity of 3 kg (6.6 pounds) to prevent detachment and potential injury or damage to items.
- Always follow the instructions for proper attachment and detachment to avoid damage to the product or the mounting surface.

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your TISKEN Basket:

1. **Choose a Suitable Surface:** The TISKEN suction cups are designed to stick only on flat, smooth surfaces such as glass, mirrors, and tiles. Avoid porous, textured, or delicate surfaces like wallpaper.
2. **Clean the Surface:** Thoroughly clean the chosen wall surface. Ensure it is free from dust, dirt, grease, and moisture. A clean, dry surface is crucial for a strong suction grip.
3. **Position the Basket:** Hold the basket against the desired location on the clean, smooth surface.
4. **Attach Suction Cups:** Press each suction cup firmly against the wall until you hear a click or feel it secure. Apply even pressure to both suction cups.
5. **Test Stability:** Gently pull on the basket to ensure it is securely attached before placing items inside.



Figure 2: A hand demonstrating the "one-push assembly" by pressing the suction cup firmly against a tiled wall.



Figure 3: A close-up view of the securely attached suction cup on a white tiled surface, demonstrating its tight grip.

5. USAGE

The TISKEN Basket is ideal for organizing various items in your bathroom or kitchen. Its design allows for easy access and visibility of contents.

- Use in the shower for shampoo, conditioner, and soap.
- Store cleaning supplies under the sink or inside cabinet doors.
- Organize small items on bathroom walls or next to mirrors.



Figure 4: The TISKEN basket installed in a shower, holding shampoo and body wash bottles, demonstrating its practical use in a wet environment.



Figure 5: The TISKEN basket positioned conveniently next to a bathtub, holding various bath accessories, highlighting its versatility.

6. MAINTENANCE AND CLEANING

The TISKEN Basket is designed for easy maintenance:

- **Cleaning:** Wipe clean with a cloth dampened in a mild cleaner. Wipe dry with a clean cloth immediately after cleaning to prevent water spots.
- **Detachment for Cleaning:** For thorough cleaning of the basket or the surface, the basket can be easily detached. Insert a credit card or similar thin, flat object between the suction cup and the wall to break the vacuum seal.
- **Re-attachment:** After cleaning, ensure both the suction cups and the mounting surface are completely dry before re-attaching the basket as per the "Setup and Installation" instructions.

7. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Name	TISKEN
Product Dimensions	6.75"D x 11"W x 6.75"H (approx. 26x18x10 cm)
Item Weight	330 Grams (approx. 11.6 ounces)

Weight Limit	3 Kilograms (approx. 6.6 Pounds)
Room Type	Bathroom (Recommended)
Installation Type	Wall Mount (Suction Cup)
Assembly Required	Yes (One-push assembly)
Materials	Polycarbonate Plastic, Synthetic Rubber, ABS Plastic (Recycled ABS Plastic for Cover/Body)

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the official IKEA website or contact IKEA customer service directly. Keep your purchase receipt as proof of purchase.
For more information, visit: www.ikea.com

© 2025 IKEA. All rights reserved. TISKEN is a registered trademark of Inter IKEA Systems B.V.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question