

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Intempo](#) /
- › [Intempo Wireless Charging Headphones User Manual](#)

Intempo EE7067BLKPADSTKEU7

Intempo Wireless Charging Headphones

MODEL: EE7067BLKPADSTKEU7 - USER MANUAL

INTRODUCTION

Thank you for choosing the Intempo Wireless Charging Headphones. These versatile headphones are designed for an immersive audio experience, whether you're gaming, exercising, or simply enjoying your favorite music. With Bluetooth connectivity and convenient wireless charging, they offer freedom and extended listening pleasure.

This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity.



Image: Front view of the Intempo Wireless Charging Headphones, showcasing their sleek black design.

PACKAGE CONTENTS

- Intempo Wireless Charging Headphones

- Wireless Charging Pad
- USB Charging Cable
- User Manual

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. The Intempo Wireless Charging Headphones feature convenient wireless charging.

1. Connect the provided USB charging cable to the wireless charging pad and a compatible USB power source (e.g., wall adapter, computer USB port).
2. Place the headphones onto the wireless charging pad. Ensure the charging area of the headphones aligns with the charging pad.
3. An indicator light on the headphones (or charging pad) will illuminate to confirm charging is in progress. The light will change or turn off once fully charged.



Image: Intempo Wireless Charging Headphones resting on their wireless charging pad, ready for charging.



Image: Top-down view of the headphones placed on the wireless charging pad, illustrating the charging process.

2. Pairing with a Bluetooth Device

To use your headphones wirelessly, you need to pair them with your smartphone, tablet, or other Bluetooth-enabled device.

1. Ensure the headphones are charged and turned off.
2. Press and hold the Power button on the headphones until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device, go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. Select "Intempo EE7067" (or similar name) from the list.
5. Once paired, the LED indicator on the headphones will flash blue slowly or turn solid blue. You will also hear an audible confirmation.

Note: If prompted for a password, enter "0000". The headphones will automatically reconnect to the last paired device when turned on, if it's within range and Bluetooth is enabled.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

Music Playback



Image: Close-up view of the control buttons located on the earcup of the headphones, including power, volume, and track controls.

- **Play/Pause:** Press the Multi-function button (often marked with a play/pause icon).
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Phone Calls

- **Answer/End Call:** Short press the Multi-function button.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

Foldable Design

The headphones feature a sleek, foldable design for compact storage and easy portability. Gently fold the

earcups inwards towards the headband when not in use.



Image: Intempo Wireless Charging Headphones in their folded position, demonstrating their compact design for storage and travel.

MAINTENANCE

Proper care will extend the life of your Intempo Wireless Charging Headphones.

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. Utilize the foldable design for compact and safe storage.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.
- **Battery Care:** To preserve battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones won't turn on.	Low battery.	Charge the headphones fully using the wireless charging pad.
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn Bluetooth on your device. Move headphones closer to the device (within 10 meters).

Problem	Possible Cause	Solution
No sound or poor sound quality.	Volume too low; headphones not connected; interference.	Increase volume on headphones and device. Re-pair the headphones. Move away from other wireless devices.
Wireless charging not working.	Improper placement; charging pad not powered; faulty cable/pad.	Ensure headphones are correctly aligned on the charging pad. Check if the charging pad is powered. Try a different USB cable or power source.

SPECIFICATIONS

Model Number	EE7067BLKPADSTKEU7
Brand	Intempo
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Play Time	Up to 8 hours
Special Features	Microphone included, Wireless Charging, Foldable Design
Form Factor	Over-Ear
Color	Black and Silver
Material	Plastic

WARRANTY AND SUPPORT

Intempo products are designed and manufactured to the highest standards. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or visit the official Intempo website.

Please retain your proof of purchase for warranty claims.