



Manuals.plus /

› Move2Play /

› Move2Play Kids Star Karaoke Microphone Instruction Manual (Model KSK101)

Move2Play KSK101

Move2Play Kids Star Karaoke Microphone Instruction Manual

Model: KSK101 | Brand: Move2Play

INTRODUCTION

Welcome to the Move2Play Kids Star Karaoke Microphone! This versatile device combines a microphone and speaker, offering hours of musical fun with pre-loaded songs and Bluetooth connectivity. This manual provides essential information for setup, operation, and maintenance to ensure a great user experience.

WHAT'S IN THE BOX

- Move2Play Kids Star Karaoke Microphone
- Micro-USB Charging Cable
- TF Card (with 15+ Pre-Loaded Nursery Rhymes)
- Rechargeable Battery (pre-installed)

SETUP

1. Initial Charging

Before first use, fully charge the microphone. Connect the Micro-USB charging cable to the charging port on the microphone and the other end to a USB power source (e.g., computer, wall adapter). A red light indicates charging, which will turn off or change color when fully charged. Ensure the TF card is inserted before charging for the first time, as some units may require this for proper initial charging.

2. Powering On/Off

Press and hold the power button (usually indicated by a power symbol) to turn the microphone on or off. You will hear an audible prompt indicating the power status.

3. Bluetooth Pairing

1. Turn on the microphone. It will enter Bluetooth pairing mode automatically, indicated by an audible prompt.
2. On your mobile device (phone, tablet), go to Bluetooth settings.

3. Search for available devices and select "Motown Magic" or a similar device name (e.g., "WS-868").
4. Once connected, you will hear a confirmation sound. You can now play music from your device through the microphone's speaker.

4. TF Card (Pre-Loaded Songs)

The microphone comes with a pre-installed TF card containing 15 classic nursery rhymes. These songs will play automatically when the microphone is powered on and not connected via Bluetooth. You can also switch to TF card mode using the 'Mode' button if connected to Bluetooth.

Your browser does not support the video tag.

Video: Unboxing and Instructions for Kids Karaoke Mics. This video demonstrates the unboxing process and basic instructions for the Move2Play Kids Star Karaoke Microphone, including how to power it on and off, and identify key features.

OPERATING INSTRUCTIONS

The microphone features intuitive controls for an engaging karaoke experience:

- **Power Button:** Press and hold to turn on/off.
- **Mode Button:** Switch between Bluetooth mode and TF card (pre-loaded songs) mode.
- **Mic Volume:** Adjust the microphone's input volume using the dedicated slider or buttons.
- **Echo Effect:** Control the echo intensity for vocal effects.
- **Voice FX:** Change your voice with various fun effects (e.g., high-pitched, low-pitched).
- **Music Volume:** Adjust the volume of the background music playing from Bluetooth or the TF card.
- **Previous/Next Track:** Skip to the previous or next song on the TF card or connected Bluetooth device.
- **Play/Pause:** Pause or resume music playback.



Image: Features of the Move2Play Kids Star Karaoke Microphone. This image highlights key features such as 15 pre-loaded songs, high-quality sound output, lightweight design, and a 6-hour battery life.

Your browser does not support the video tag.

Video: Kids Karaoke Microphone Demo. This video demonstrates the various functions and sound capabilities of the Move2Play Kids Star Karaoke Microphone, including voice effects and music playback.

MAINTENANCE

- **Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use harsh chemicals or immerse in water.

- **Storage:** Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly, even if not in use for extended periods.

TROUBLESHOOTING

- **Microphone not turning on/charging:**
 - Ensure the Micro-USB cable is securely connected to both the microphone and a working power source.
 - Verify the charging indicator light is on.
 - Some users have reported that removing and reinserting the TF card before the first charge can resolve initial power issues.
- **No sound from microphone:**
 - Check the microphone volume slider/buttons and ensure it is not set to minimum.
 - Ensure the microphone is powered on.
- **Bluetooth not connecting:**
 - Ensure the microphone is in Bluetooth pairing mode (audible prompt).
 - Turn off and on your device's Bluetooth, then try re-pairing.
 - Forget the device from your Bluetooth list and try pairing again.
- **Music too loud/quiet:**
 - Adjust the dedicated music volume controls on the microphone.
 - Adjust the volume on your connected Bluetooth device.

SPECIFICATIONS

Feature	Detail
Brand	Move2Play
Model Name	KSK101
Microphone Form Factor	Handheld
Connectivity Technology	Bluetooth
Power Source	Battery Powered (1 Lithium Ion battery required)
Battery Life	Up to 6 hours of play
Material	Plastic
Item Weight	15.2 ounces
Product Dimensions	6 x 6 x 6 inches
Special Feature	15+ Pre-Loaded Nursery Rhymes with TF Card, Built-In Speakers
Recommended Uses	Karaoke

WARRANTY AND SUPPORT

For warranty information or technical support, please visit the official Move2Play website or contact their customer service. Keep your purchase receipt for any warranty claims.

Official Move2Play Store: [Visit Store](#)