

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN RC902V FMR1 Voice Remote Control User Manual for TCL TVs

PERFASCIN RC902V-FMR1

PERFASCIN RC902V FMR1 Voice Remote Control User Manual

MODEL: RC902V-FMR1

Brand: PERFASCIN

Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your PERFASCIN RC902V FMR1 Voice Remote Control. Please read this manual thoroughly before using your remote to ensure proper functionality and to maximize your user experience.





Image: Front view of the PERFASCIN RC902V FMR1 Voice Remote Control, showcasing its buttons and ergonomic design.

Setup

1. Battery Installation

The RC902V FMR1 remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, showing the battery compartment for two AAA batteries.

2. Pairing Method

To enable voice control and full functionality, the remote must be paired with your TCL TV. This remote is compatible with various TCL TV models, including but not limited to: 50S446, 50S546, 55S446, 55R646, 55S546, 65S446, 65R646, 65S546, 75S446, 50P725G, 55C728, 75C728, 65X925, 55R635, 65R635, 75R635, 75R646, 75S446, 85X925 PRO, 85S446, 32S5200, 32S615, 32S60A, 32S334, 32P30S, 42S6500.

Follow these steps to pair your remote:

1. Ensure your TCL TV is powered on and in Google TV mode.
2. On your remote, simultaneously press and hold the **HOME** button and the **OK** button.
3. Keep the remote within 3 feet (approximately 1 meter) of your TV during the pairing process.
4. The TV screen should display a pairing confirmation message once successful.

Operating Instructions

The RC902V FMR1 remote control provides intuitive access to your TCL TV's functions. Familiarize yourself with the button layout

for optimal use.

Key Functions:

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Circular):** Use the directional buttons to move through menus and the central **OK** button to confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the main Google TV home screen.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (P+/P-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Settings Button:** Opens the TV's settings menu.
- **Quick Access Buttons:** Dedicated buttons for Netflix, Prime Video, YouTube, and T-Channel for direct access to these streaming services.

Voice Control Feature:

The remote features a built-in microphone for voice commands. Once paired, you can use your voice to search for content, control playback, and access various TV functions.

1. Press the **Voice Assistant Button** (typically marked with a microphone icon or Google Assistant logo) on your remote.
2. Speak clearly into the microphone located at the top of the remote.
3. Release the button when you have finished your command.



Image: The PERFASCIN RC902V FMR1 remote control, with a blue highlight indicating the voice assistant button and a microphone icon representing the voice input function.

Maintenance

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Avoid Damage:** Do not drop the remote or expose it to water or other liquids.

Troubleshooting

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote and the TV's IR receiver.
 - Try re-pairing the remote with the TV (refer to the "Pairing Method" section).
- **Voice Control Not Working:**
 - Confirm the remote is successfully paired with your TV.
 - Ensure your TV is connected to the internet for voice assistant functionality.
 - Speak clearly and directly into the remote's microphone.
 - Check TV settings to ensure voice control is enabled.
- **Buttons Not Functioning Correctly:**
 - Clean the remote's surface and buttons to remove any dirt or debris that might be interfering.
 - If specific buttons are unresponsive, it might indicate a hardware issue.

Specifications

Feature	Detail
Model Number	RC902V-FMR1
Brand	PERFASCIN
Product Dimensions	6 x 3 x 0.5 inches
Item Weight	2.54 ounces
Batteries Required	2 AAA batteries
Special Feature	Voice Search
Color	Black
Max Supported Devices	15 (via compatible TV)

Feature	Detail
Compatible Devices	Television (Specific TCL models)

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question