

PowerSmart PS76101B

PowerSmart PS76101B Cordless Leaf Blower User Manual

Model: PS76101B

[Information](#) [Components](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the PowerSmart PS76101B Cordless Leaf Blower. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new leaf blower. Please read this manual thoroughly before use and retain it for future reference.

The PowerSmart PS76101B is a lightweight, battery-powered leaf blower designed for clearing leaves, lawn debris, dust, and light snow from various surfaces such as lawns, patios, and driveways. It features a 20V motor, two-speed modes, and an ergonomic design for comfortable use.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Read all instructions before operating this product.

- **Personal Safety:** Always wear eye protection, long pants, and sturdy footwear. Do not operate the blower barefoot or in open sandals. Secure long hair above shoulder level.
- **Work Area:** Keep the work area clean and well-lit. Do not operate the blower in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Avoid body contact with earthed or grounded surfaces. Do not expose power tools to rain or wet conditions.
- **Product Use and Care:** Do not force the tool. Use the correct tool for your application. Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing power tools.
- **Battery Pack Use and Care:** Recharge only with the charger specified by the manufacturer. Do not use battery packs other than those specifically designated for the tool.

- **Maintenance:** Have your power tool serviced by a qualified repair person using only identical replacement parts.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your PowerSmart PS76101B Cordless Leaf Blower.



Figure 1: Annotated diagram showing the main components of the leaf blower, including the powerful air speed nozzle, variable speed trigger, lightweight body, ergonomic handle, and the 2.0Ah battery and charger.

- **Blower Nozzle:** Directs the airflow.
- **Motor Housing:** Contains the motor and fan assembly.
- **Ergonomic Handle:** Provides a comfortable grip for one-handed operation.
- **Variable Speed Trigger:** Controls the airflow speed (low and high modes).
- **Battery Port:** Where the battery pack is inserted.
- **20V 2.0Ah Battery:** Rechargeable power source.
- **Fast Charger:** Used to recharge the battery.

4. SETUP INSTRUCTIONS

4.1. Charging the Battery

Before first use, fully charge the battery. The included 20V 2.0Ah battery requires approximately 1 hour for a full charge using the provided fast charger.

1. Connect the charger to a standard electrical outlet.
2. Slide the battery pack onto the charger. Ensure it clicks into place.
3. The charger indicator light will show the charging status. Refer to the charger's specific instructions for light indications (typically red for charging, green for fully charged).
4. Once fully charged, disconnect the battery from the charger and unplug the charger from the outlet.



Figure 2: The PowerSmart leaf blower, battery, and charger. Ensure the battery is fully charged before use.

4.2. Attaching the Blower Tube

The blower tube needs to be securely attached to the main unit.

1. Align the grooves on the blower tube with the corresponding slots on the blower's main housing.

2. Push the tube firmly onto the housing until it locks into place. Some models may require a twist to secure.
3. Ensure the tube is securely fastened before operation.



Figure 3: Illustration demonstrating the correct method for attaching the blower tube to the main body of the leaf blower.

4.3. Installing the Battery

Once charged, install the battery into the blower.

1. Align the battery pack with the battery port on the blower.
2. Slide the battery pack into the port until it clicks securely into place.
3. To remove the battery, press the release button (if present) and slide the battery out.

5. OPERATING INSTRUCTIONS

5.1. Starting and Stopping the Blower

1. Ensure the battery is fully charged and securely installed.
2. To start the blower, press and hold the power button or squeeze the variable speed trigger.
3. To stop the blower, release the power button or trigger.



Figure 4: Detail of the control panel, indicating the power button and speed selection for operation.

5.2. Adjusting Speed Modes

The PowerSmart PS76101B features two speed modes for varying tasks.

- **Low Speed:** Ideal for delicate areas, light debris, or extending battery life.
- **High Speed:** Provides maximum blowing power (up to 150 MPH) for stubborn debris and larger areas.

Use the variable speed trigger or speed selector switch (if present) to toggle between low and high speeds as needed. The no-load speed ranges from 9000 to 15000 RPM.



Figure 5: Visual representation of the leaf blower operating at low speed for light debris and high speed for more substantial leaf clearing.

5.3. General Usage Tips

- Hold the blower firmly with one hand, directing the nozzle towards the debris.
- Work in a sweeping motion, moving debris away from buildings, vehicles, and other obstacles.
- For optimal performance and battery life, avoid continuously running the blower at maximum speed if not necessary.
- The blower is lightweight (3.3 lbs without battery) and has an upgraded double-length tube (35 inches total) to reduce bending during use.



Figure 6: Examples of the leaf blower in use, clearing leaves from a patio and light snow from a car, demonstrating its versatility.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your leaf blower.

- **Cleaning:** After each use, wipe down the exterior of the blower with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no debris is lodged in the air intake or blower nozzle.
- **Battery Care:** Store the battery in a cool, dry place away from direct sunlight and extreme temperatures. Do not store the battery fully discharged for extended periods.
- **Storage:** When not in use, store the leaf blower in a dry, secure location out of reach of children. Remove the battery pack before storing for extended periods.
- **Inspection:** Periodically inspect the blower for any signs of damage, loose parts, or wear. If any damage is found, do not operate the blower and contact customer support.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your PowerSmart PS76101B leaf blower.

Problem	Possible Cause	Solution
Blower does not start.	Battery not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Reduced blowing power.	Low battery charge; debris obstructing nozzle or air intake.	Recharge battery. Clear any obstructions from the nozzle or air intake.
Battery not charging.	Charger not plugged in; faulty battery or charger.	Check power connection. If problem persists, contact customer support for battery/charger replacement.
Blower tube detaches during use.	Tube not securely attached.	Reattach the blower tube, ensuring it locks firmly into place.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	PS76101B
Brand	PowerSmart
Power Source	Battery Powered
Voltage	20 Volts (DC)
Battery Type	Lithium Ion (2.0Ah included)
Charger Type	Fast Charger (1 hour charge time)
Speed Modes	2 (Variable Speed Trigger)
No-Load Speed	Up to 9000/15000 RPM
Blower Speed	Up to 150 MPH
Noise Level	<65 Decibels (at max power)
Item Weight	3.3 Pounds (without battery)
Product Dimensions	7"L x 7"W x 16"H (assembled length 35 inches)
Material	Plastic
UPC	840432707272

9. WARRANTY AND CUSTOMER SUPPORT

PowerSmart products are designed for reliability and performance. In the event of any issues, please refer to the following information:

- **Warranty Information:** For specific warranty details, please refer to the warranty card included with your product or visit the official PowerSmart website.
- **Customer Support:** If you encounter any problems or have questions regarding your PowerSmart PS76101B leaf blower, please contact PowerSmart customer service. PowerSmart has a network of certified repair centers and provides replacement parts.
- **Contact:** For assistance, please contact PowerSmart directly.

© 2024 PowerSmart. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question