

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITOM](#) /

› [PRITOM K7 7-inch Kids Tablet User Manual](#)

PRITOM K7

PRITOM K7 7-inch Kids Tablet User Manual

Model: K7

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your PRITOM K7 7-inch Kids Tablet. Please read it thoroughly to ensure proper use and to maximize your child's learning and entertainment experience.



Figure 1: PRITOM K7 7-inch Kids Tablet with its protective case.

2. WHAT'S IN THE BOX

Your PRITOM K7 Kids Tablet package includes:

- PRITOM K7 7-inch Kids Tablet
- Colorful bumper case
- Charging cable
- User Guide (this manual)

3. PRODUCT FEATURES

The PRITOM K7 Kids Tablet is designed with children in mind, offering a blend of education and entertainment with robust features:

- **Operating System:** Android 13 for a smooth user experience.
- **Display:** 7-inch IPS HD screen (1024x600 resolution) with eye protection features.

- **Processor:** High-performance quad-core processor (1.5 GHz Unisoc).
- **Memory:** 4GB RAM (2GB physical + 2GB expanded) and 32GB internal storage (expandable via Micro SD card).
- **Connectivity:** 2.4G WiFi and Bluetooth.
- **Cameras:** Dual cameras (front and rear).
- **Battery:** Durable battery providing approximately 3 hours of average use.
- **Protective Case:** Lightweight, durable, kid-friendly, impact-resistant soft silicone case with a built-in stand.
- **Pre-installed Software:** iWawa Kid's software with free pre-installed educational and entertaining apps and games.

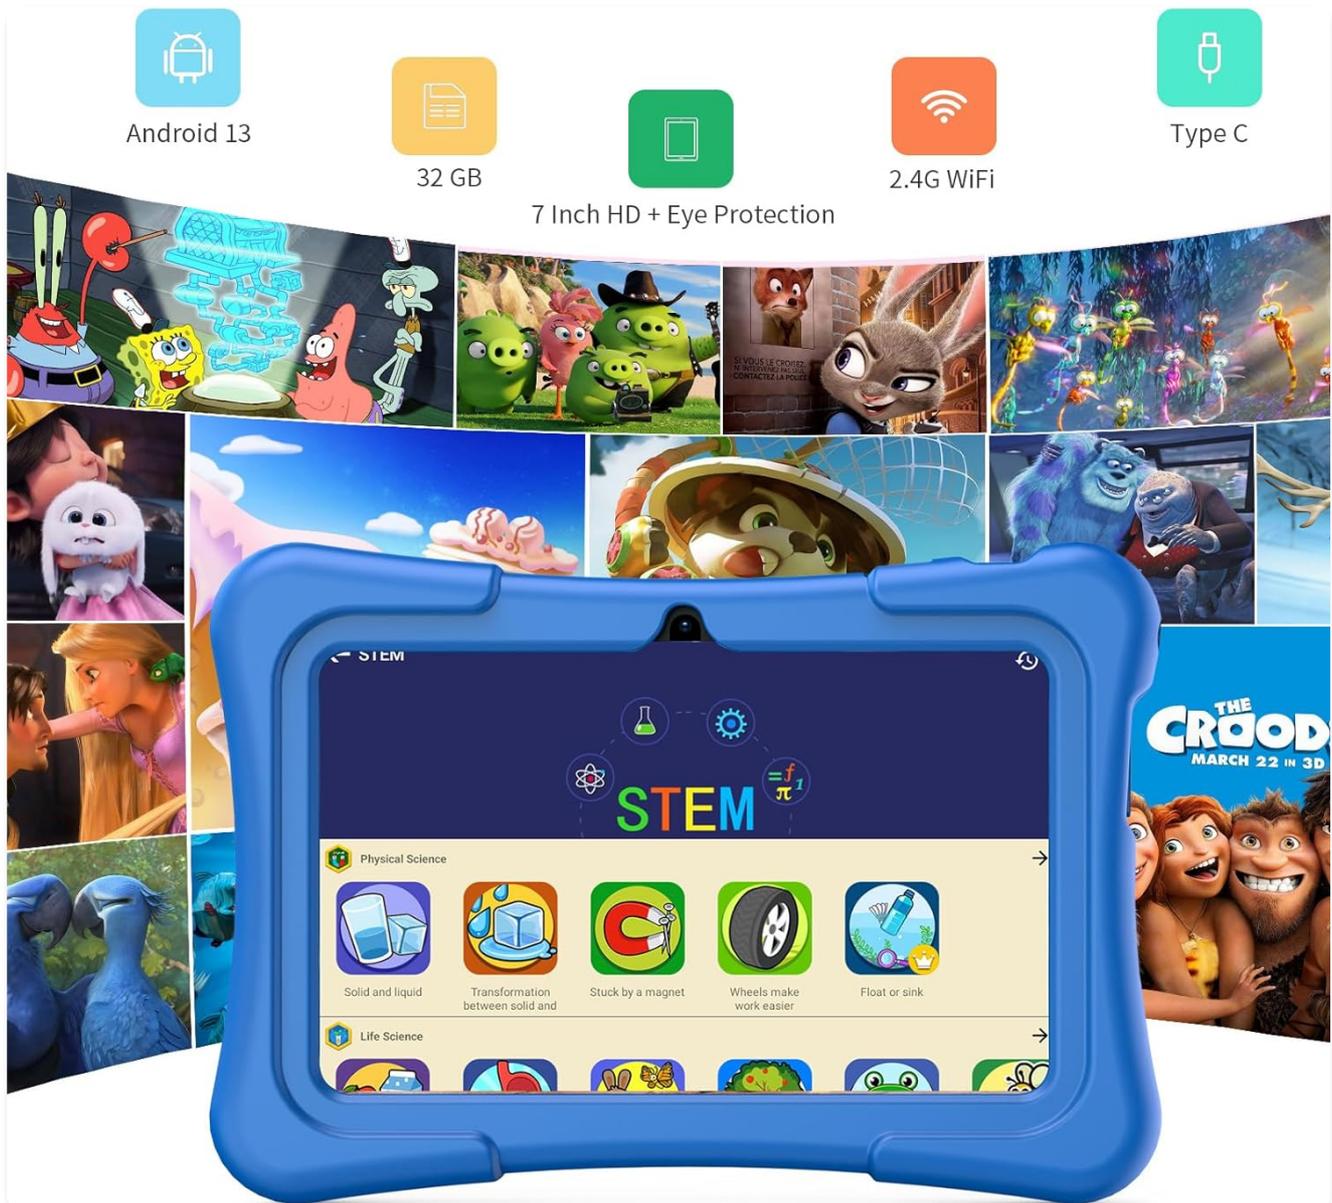


Figure 2: Key features of the PRITOM K7 Kids Tablet.

4. SETUP INSTRUCTIONS

4.1 Initial Power On

1. Press and hold the power button located on the side of the tablet until the PRITOM logo appears on the screen.
2. Follow the on-screen prompts to select your language and region.

4.2 Connecting to Wi-Fi

1. During the initial setup, you will be prompted to connect to a Wi-Fi network.
2. Select your desired Wi-Fi network from the list.
3. Enter the Wi-Fi password if prompted and tap 'Connect'.
4. If you skip this step, you can connect later via **Settings > Network & internet > Wi-Fi**

4.3 Google Account Setup

You may be prompted to sign in with a Google account. This is necessary to download apps from the Google Play Store and access other Google services. You can create a new account or use an existing one.

Your browser does not support the video tag.

Video 1: Demonstrates the unboxing and initial setup process, including powering on and navigating the initial setup screens.

5. OPERATING INSTRUCTIONS

5.1 Navigating the Interface

The tablet features a child-friendly interface. Swipe left or right on the home screen to access different pages of apps. Tap on an app icon to launch it.

5.2 Using iWawa Kid's Software

The iWawa Kid's software provides a safe and engaging environment for children. It includes pre-installed educational and entertainment apps. You can also download additional free apps from the kids store within iWawa or from the Google Play Store.



Iwawa Software for kids Free / Fun /Puzzle Develop Children's Brainpower, Learn in Games



Figure 3: The iWawa Kid's software interface.

5.3 Parental Control System

The tablet includes a robust parental control system to manage your child's usage:

- **App and Network Filters:** Control access to specific applications and websites.
- **Content Management:** Curate and classify multimedia content suitable for your child's age.
- **Behavioral Restrictions:** Set child locks, spending limits, and game time limits.
- **User Settings:** Customize themes and user profiles for different children.

Access parental controls through the dedicated icon on the home screen or within the tablet's main settings menu.

Parental Control System



Child
Lock



Filtering
App



Safe
Websites



Time
Limited

Figure 4: Overview of the Parental Control System.

6. MAINTENANCE

6.1 Cleaning the Tablet

To clean the screen, use a soft, lint-free cloth. For the silicone case, it can be easily wiped clean with a damp cloth and mild soap if necessary. Ensure the tablet is powered off and disconnected from any power source before cleaning.

6.2 Battery Care

To prolong battery life, avoid fully discharging the tablet frequently. Charge the tablet using the provided charging cable and adapter. Do not expose the tablet to extreme temperatures.

6.3 Protective Case and Stand

The silicone case is designed to protect the tablet from drops and bumps. The integrated stand allows for hands-free viewing. Ensure the stand is properly folded away when not in use to prevent damage.



Soft Silicon Case



Anti-Drop Design

Figure 5: The durable silicone case provides protection and features an integrated stand.

7. TROUBLESHOOTING

If you encounter issues with your PRITOM K7 Kids Tablet, refer to the following common solutions:

- **Tablet is slow or unresponsive:** Try restarting the tablet. Close unused applications running in the background. Ensure there is sufficient storage space available.
- **Battery overheating:** Discontinue use immediately if the tablet feels excessively hot. Disconnect from the charger. Avoid using the tablet in direct sunlight or hot environments. If the issue persists, contact customer support.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled in settings. Restart your Wi-Fi router. Check if other devices can connect to the same network.
- **Apps not downloading/updating:** Check your internet connection. Ensure you are signed into your Google account. Clear the cache and data of the Google Play Store app (Settings > Apps > Google Play Store > Storage).

8. SPECIFICATIONS

Feature	Specification
Standing Screen Display Size	7 Inches
Screen Resolution	1024x600
Max Screen Resolution	720P Pixels
Processor	1.5 GHz Quad-Core (Unisoc)
RAM	2 GB SDRAM DDR4 (4GB total with expanded memory)
Hard Drive	32 GB
Graphics Coprocessor	IMG8300
Wireless Type	802.11n (2.4G WiFi)
Number of USB 2.0 Ports	1
Average Battery Life	3 Hours
Operating System	Android 13
Item Weight	1.32 pounds
Product Dimensions	9 x 8 x 1 inches
Rear Webcam Resolution	2 MP
Power Source	AC & Battery
Batteries	1 Lithium Ion battery (included)

9. WARRANTY & SUPPORT

The PRITOM K7 Kids Tablet comes with a **1-year worry-free guarantee**. If you experience any quality issues with the tablet, you may return it for a free replacement.

For quality issues or further assistance, please contact PRITOM customer support. Refer to the contact information provided with your product packaging or visit the official PRITOM website for support details.