

## MONSIATUG 762917597171

# MONSIATUG Replacement Remote Control User Manual

For Skyworth Android Smart TV Models: 50UC6200, 43UB5500, 43UB5550, 43UB5560, 50UB5500, 50UB5550, 50UB5560, 55UB5500, 55UB5550, 55UB5560

## 1. INTRODUCTION

---

This manual provides instructions for the MONSIATUG replacement remote control, designed for use with various Skyworth Android Smart TV models. This remote control offers direct functionality without the need for complex programming. Simply insert batteries, and it is ready for use.

### Compatible TV Models:

- Skyworth Android Smart TV 50UC6200
- Skyworth Android Smart TV 43UB5500, 43UB5550, 43UB5560
- Skyworth Android Smart TV 50UB5500, 50UB5550, 50UB5560
- Skyworth Android Smart TV 55UB5500, 55UB5550, 55UB5560

## 2. PACKAGE CONTENTS

---

- 1 x MONSIATUG Replacement Remote Control

*Note: AAA batteries are not included and must be purchased separately.*

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with

the markings inside the compartment.

4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Back view of the remote control with the battery compartment.

### **3.2 First Use**

This replacement remote control requires no programming. Once the batteries are correctly installed, it is ready to operate your compatible Skyworth Android Smart TV. Point the remote control directly at your television and begin using it.

## **4. OPERATING INSTRUCTIONS**

---

The remote control features a standard layout for easy navigation and control of your Skyworth Android Smart TV. Below is a general overview of key buttons and their functions.



Figure 2: Front view of the remote control, highlighting button layout.

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection or inputting numbers.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Home Button:** Accesses the TV's main home screen or smart TV interface.
- **Menu Button:** Opens the TV's settings or options menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and selects options.
- **Back Button:** Returns to the previous screen or menu.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (P+/P-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Netflix Button:** Direct access to the Netflix application.

- **Prime Video Button:** Direct access to the Amazon Prime Video application.
- **YouTube Button:** Direct access to the YouTube application.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the TV menu or application.



Figure 3: Remote control in use, demonstrating typical viewing scenario.

## 5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.

## 6. TROUBLESHOOTING

- **Remote not responding:** Ensure there are no obstructions between the remote control and the TV's infrared sensor. Check that the batteries are inserted correctly with the correct polarity. Replace old batteries with new ones.
- **Limited range:** Ensure the remote control is within a reasonable distance and line of sight of the TV. Weak batteries can also reduce the remote's effective range.
- **Specific buttons not working:** If only certain buttons are unresponsive, try replacing the batteries. If the issue persists, the remote control may require replacement.

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	MONSIATUG
Item Model Number	762917597171
Compatible Devices	Skyworth Android Smart Televisions
Max Number of Supported Devices	1
Color	Black, Silver
Special Feature	Ergonomic design
Item Weight	3.52 ounces
Package Dimensions	9.53 x 4.33 x 1.22 inches
Battery Type	2 x AAA (not included)

## 8. WARRANTY AND SUPPORT

---

For any issues not covered in this manual, or for further assistance, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any warranty claims.