

MUSITREND T408-Silver

MUSITREND 10-in-1 Record Player User Manual

Model: T408-Silver (MUSJR18Speaker-USMY)

Brand: MUSITREND

1. IMPORTANT SAFETY INFORMATION

Please read all safety and operating instructions carefully before using this product. Keep these instructions for future reference.

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

2. PRODUCT OVERVIEW AND COMPONENTS

The MUSITREND 10-in-1 Record Player is a versatile audio system designed to play various media formats, including vinyl records, CDs, cassette tapes, and digital audio from USB drives and SD cards. It also features Bluetooth connectivity and AM/FM radio. The unit comes with two external speakers for enhanced sound quality.



Image: The complete MUSITREND 10-in-1 Record Player system, showing the main unit, two external speakers, and the remote control.

What's in the Box:

- 1 Record Player Main Unit
- 1 User Manual (this document)
- 1 Remote Control
- 2 External Speakers

Key Features:

- **10-in-1 Functionality:** Vinyl records, Bluetooth, USB, SD, CD, Cassette play, AM/FM Radio, Cassette/USB/SD Playback, Aux-in/RCA Line Out, Remote Control.
- **Dual Powerful External Speakers:** Equipped with 2x10W speakers for clear audio.
- **Recording Capability:** Convert Vinyl, Aux-in, CD, Cassette to USB/SD (MP3 Format) and record USB/SD, CD, Vinyl, Aux-in to Cassette directly.
- **3-Speed Belt Drive Turntable:** Plays 7, 10, and 12-inch vinyl discs at 33 1/3, 45, and 78 RPM with auto-stop.

Multifunction



Vinyl Player



CD Player



Cassette



SD/MMC Card




AM/FM



Bluetooth



Headphone

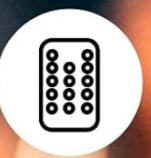

Remote Control



USB



AUX in/
RCA out

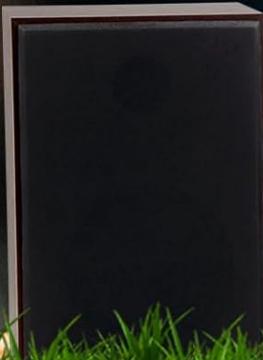


Image: An illustrative diagram highlighting the ten versatile functions of the record player, including vinyl, CD, cassette, SD/MMC, AM/FM radio, Bluetooth, headphone jack, remote control, USB, and Aux-in/RCA out.

3. SETUP INSTRUCTIONS

3.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging materials for future transport or storage.

3.2 Connecting External Speakers

Locate the speaker output jacks on the rear of the main unit. Connect the provided external speakers to these jacks. Ensure the correct polarity (positive to positive, negative to negative) if indicated on the speaker wires or jacks.



Image: The back of the record player unit with cables connecting to the two external speakers, illustrating the speaker setup.

3.3 Power Connection

Plug the AC power cord into a standard wall outlet. The unit is now ready for operation.

3.4 Placement

Place the record player on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or vibration. Ensure adequate ventilation around the unit.

4. OPERATING INSTRUCTIONS


4.1 General Operation

- Power On/Off:** Use the Power button on the front panel or the remote control to turn the unit on or off.
- Mode Selection:** Press the 'FUNCTION' button on the unit or remote to cycle through different modes: PHONO (Vinyl), CD, USB, SD, AUX, BT (Bluetooth), TAPE (Cassette), AM, FM. The current mode will be displayed on the LED screen.

- **Volume Control:** Adjust the 'VOLUME' knob on the unit or use the volume buttons on the remote control.

4.2 Vinyl Playback

1. Open the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the 'SPEED SELECTOR' switch based on your record's speed. For 45 RPM records, place the 45 RPM adaptor on the center spindle.
4. Gently move the tone arm from its rest and position the stylus over the desired track on the record. Lower the tone arm slowly using the lift lever.
5. The record will begin playing. When the record finishes, the auto-stop function will stop the platter rotation. Lift the tone arm and return it to its rest.

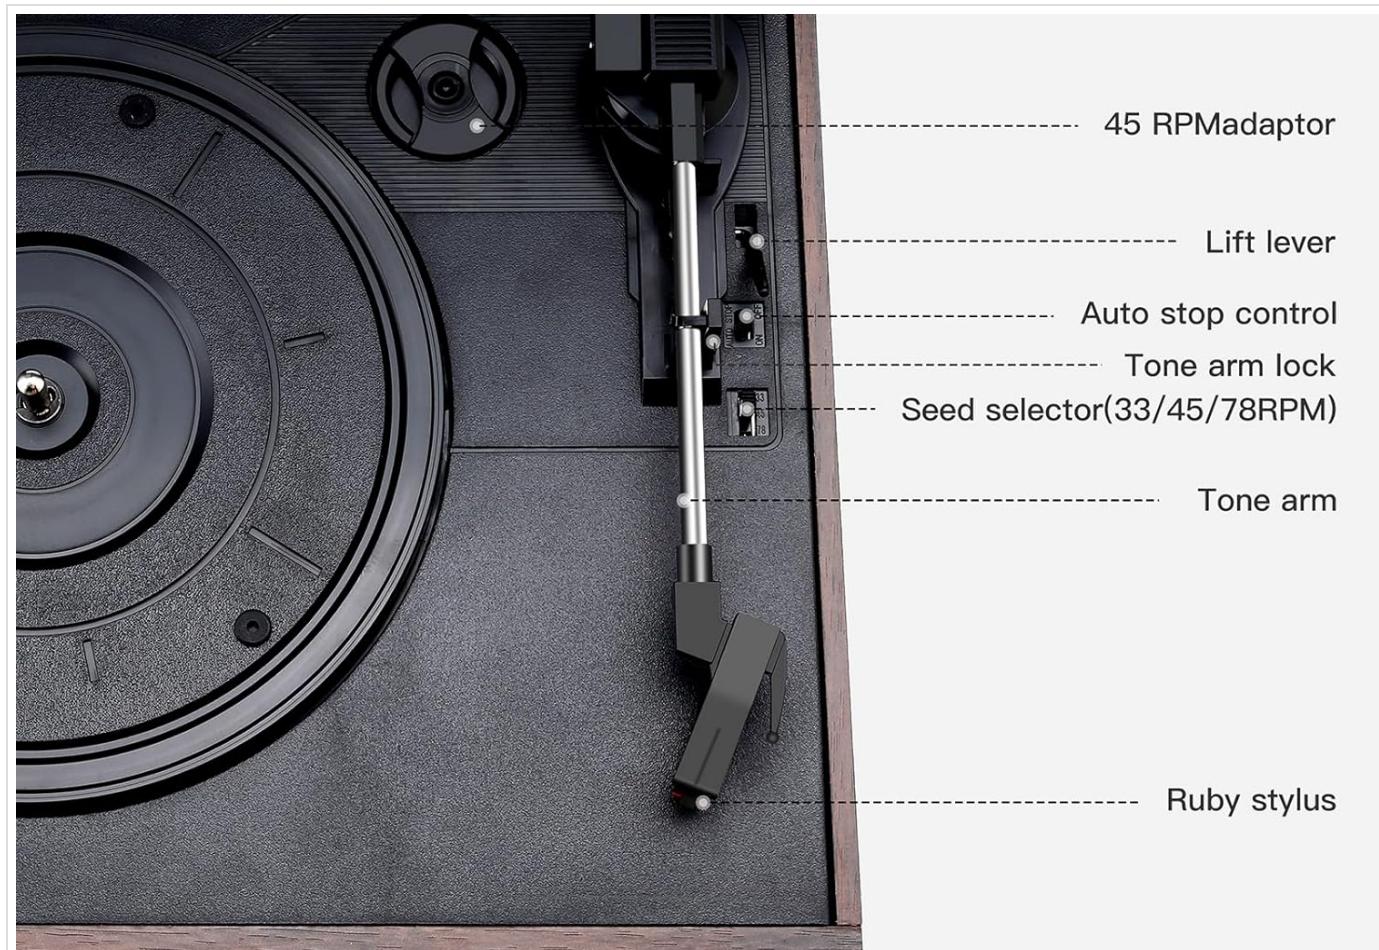

3 Speed Selectable



Image: Detailed view of the turntable's key components and a guide to selecting the correct speed for 7, 10, and 12-inch vinyl records.

4.3 CD Playback

1. Press the 'FUNCTION' button to select CD mode.

2. Press the 'OPEN/CLOSE' button to open the CD tray.
3. Place a CD with the label side facing up into the tray and press 'OPEN/CLOSE' again to close the tray.
4. The unit will read the CD and begin playback automatically. Use the 'PLAY/PAUSE', 'STOP', 'SKIP FORWARD', and 'SKIP BACKWARD' buttons for control.



Image: A composite image detailing the cassette play mechanism, AM/FM radio controls, USB port, and CD player tray.

4.4 Cassette Playback

1. Press the 'FUNCTION' button to select TAPE mode.
2. Insert a cassette tape into the cassette slot on the front of the unit.
3. Press the 'PLAY' button to start playback. Use the 'STOP', 'FAST FORWARD', and 'REWIND' buttons for control.

4.5 Bluetooth Connection

1. Press the 'FUNCTION' button to select BT (Bluetooth) mode. The unit will enter pairing mode, indicated by a flashing Bluetooth indicator.

2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'MUSITREND' from the list of devices. Once paired, the Bluetooth indicator will stop flashing and remain solid.
4. You can now play audio from your device through the record player's speakers.



Image: Demonstrates wireless Bluetooth connection, allowing users to stream music from their mobile devices to the record player.

4.6 USB/SD Playback

1. Insert a USB flash drive into the USB port or an SD/MMC card into the SD card slot.
2. Press the 'FUNCTION' button to select USB or SD mode. The unit will automatically detect and begin playing compatible audio files (MP3 format).
3. Use the 'PLAY/PAUSE', 'STOP', 'SKIP FORWARD', and 'SKIP BACKWARD' buttons to navigate and control playback.

4.7 AM/FM Radio

1. Press the 'FUNCTION' button to select AM or FM mode.
2. Extend the FM wire antenna on the rear of the unit for better reception. For AM, rotate the unit for optimal signal.

3. Use the 'TUNING' knob to manually tune to your desired radio station.

4.8 Aux-in / RCA Line Out

- **Aux-in:** Connect an external audio device (e.g., MP3 player) to the 'AUX IN' jack using a 3.5mm audio cable. Select AUX mode to play audio from the connected device.
- **RCA Line Out:** Use the RCA Line Out jacks on the rear of the unit to connect the record player to an external amplifier or powered speakers for alternative audio output.

4.9 Recording Functions (Vinyl/CD/Aux/Cassette to USB/SD/Cassette)

The unit supports recording audio from Vinyl, CD, Aux-in, or Cassette to a USB drive or SD card in MP3 format, and also recording from USB/SD, CD, Vinyl, Aux-in to a Cassette tape.

To Record to USB/SD:

1. Insert a USB drive or SD card into its respective slot.
2. Select the desired source mode (PHONO, CD, AUX, or TAPE).
3. Begin playing the audio from the source (e.g., start a vinyl record, play a CD track).
4. Press the 'REC' button on the unit. The recording will begin. Press 'REC' again to stop recording.

To Record to Cassette:

1. Insert a blank cassette tape into the cassette slot.
2. Select the desired source mode (USB, SD, CD, PHONO, or AUX).
3. Begin playing the audio from the source.
4. Press the 'REC' button on the cassette deck. The recording will begin. Press 'STOP' on the cassette deck to stop recording.

5. MAINTENANCE

5.1 Cleaning the Unit

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

5.2 Stylus Care

The stylus (needle) is delicate. Clean it periodically with a soft brush, brushing from back to front. Avoid touching the stylus with your fingers. A worn stylus can damage records and produce poor sound quality. Replace the stylus when necessary.

5.3 Record Care

Keep records clean by wiping them gently with a soft, anti-static cloth before and after each use. Store records vertically in their sleeves to prevent warping and dust accumulation.

6. TROUBLESHOOTING

If you experience issues with your record player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely plugged in. Test the outlet with another device.

Problem	Possible Cause	Solution
No sound from speakers	Volume too low; Speakers not connected; Incorrect mode selected.	Increase volume. Check speaker connections. Ensure correct function mode is selected.
Turntable not spinning	Unit not powered on; Auto-stop engaged.	Turn on the unit. Ensure the tone arm is over the record for playback.
Skipping on vinyl records	Record is dirty or scratched; Stylus is worn or dirty; Unit is not on a stable surface.	Clean the record. Clean or replace the stylus. Place the unit on a stable, level surface.
Bluetooth not connecting	Unit not in BT mode; Device not in pairing mode; Interference.	Select BT mode. Ensure your device's Bluetooth is on and searching. Move closer to the unit.
Recording issues	USB/SD full or incompatible format; Cassette full or damaged.	Use an empty USB/SD card (FAT32 format). Ensure cassette is not full and is in good condition.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	21.85 x 13.58 x 11.22 inches
Item Weight	12.57 pounds
Model Number	MUSJR18Speaker-USMY
Brand	MUSITREND
Maximum Rotational Speed	78 RPM
Included Components	1 Record Player, 1 User Manual, 1 Remote Control, 2 External Speakers
Special Features	Dual External Speakers, Vinyl-to-MP3 Recording, 3-Speed Belt Drive Turntable
Material	Engineered Wood, Wood
Style	T408-Silver
Color	Silver
Compatible Devices	Smartphone, Speaker
Motor Type	AC Motor
On-mode power consumption	10 watts

8. WARRANTY AND SUPPORT

MUSITREND provides one year after-sales service for this product. For technical support, warranty claims, or further assistance, please contact MUSITREND customer service through their official channels or the retailer where the product

was purchased.

Please retain your proof of purchase for warranty purposes.

© 2024 MUSITREND. All rights reserved.

Related Documents

 <p>CLASSICAL TURNTABLE WITH AM/FM RADIO CD, CASSETTE RECORDER & USB/SD SLOT & BT Operating Instructions Manual</p>	<p><u>MT408AM-SP Classical Turntable with AM/FM Radio, CD, Cassette Recorder & USB/SD Slot & BT Operating Instructions Manual</u></p> <p>This manual provides operating instructions for the MT408AM-SP Classical Turntable, covering its features like AM/FM radio, CD player, cassette recorder, USB/SD slot, and Bluetooth connectivity. Learn how to use the turntable, radio, cassette, CD, USB/SD, and auxiliary inputs, along with troubleshooting tips.</p>
--	---