

[Manuals.plus](#) /

› [PMD Beauty](#) /

› PMD Clean Mini - Smart Facial Cleansing Device User Manual

PMD Beauty 811485034226

PMD Clean Mini User Manual

Smart Facial Cleansing Device with Silicone Brush & Anti-Aging Massager

PRODUCT OVERVIEW

The PMD Clean Mini is a smart facial cleansing device designed to provide a deep cleanse and anti-aging massage. It utilizes SonicGlow Technology to break down dirt and oil, leaving skin feeling smoother and looking healthier. Its compact, waterproof design makes it ideal for both home use and travel.



Image: The PMD Clean Mini device in pink, shown with its retail packaging. This device is designed for smart facial cleansing.

KEY FEATURES

- **SonicGlow Technology:** Utilizes 7,000 vibrations per minute to deeply cleanse and lift, firm, and tone the skin.
- **Silicone Brush Head:** Made from ultra-hygienic silicone, which is anti-bacterial and hypoallergenic, making it suitable for all skin types, including sensitive and blemish-prone skin.
- **Anti-Aging Massager:** The backside of the device can be used to massage serums and lotions into the skin, enhancing absorption.
- **Waterproof Design:** Fully waterproof for safe use in the shower or at the sink.
- **Compact and Portable:** Its mini size (5.75 inches) makes it perfect for travel.
- **No Replacement Brush Heads:** The silicone head does not require replacement, offering long-term value.

SONICGLOW™ TECHNOLOGY

Breaks down dirt and oil from within the pores at **7,000 vibrations per minute** while operating at a perfect frequency to lift, firm, & tone the skin.

Image: The PMD Clean Mini device illustrating its SonicGlow Technology, which breaks down dirt and oil with 7,000 vibrations per minute.

SETUP

1. **Unpack:** Carefully remove the PMD Clean Mini from its packaging.
2. **Battery Installation:** The device requires 1 AAA battery (included). Unscrew the cap at the bottom of the device, insert the battery with the correct polarity, and securely screw the cap back on.
3. **Initial Charge (Not Applicable):** This model uses a replaceable AAA battery and does not require charging.
4. **First Use Preparation:** Before first use, rinse the silicone brush head under warm water.


Your browser does not support the video tag.

Video: An official PMD Beauty video demonstrating the features and setup of the PMD Clean Mini device, including how to prepare it for first use.

OPERATING INSTRUCTIONS

The PMD Clean Mini features four customizable modes for cleansing and massaging.

1. **Apply Cleanser:** Wet your face and apply your preferred cleanser directly to the silicone brush head or to your face.
2. **Power On:** Press the power button located on the handle to turn on the device.
3. **Select Mode:** Press the power button repeatedly to cycle through the four modes:
 - Mode 1: Gentle Vibration (Cleansing)
 - Mode 2: Intense Vibration (Cleansing)
 - Mode 3: Gentle Pulsation (Massager)
 - Mode 4: Intense Pulsation (Massager)
4. **Cleansing:** For cleansing, use the front side of the device with the silicone bristles. Move the device in circular motions across your face.
5. **Massaging:** For massaging, flip the device and use the ribbed backside. Apply your favorite serum or moisturizer to your skin and gently glide the device over your face to aid absorption.
6. **Power Off:** Press the power button until the device turns off.

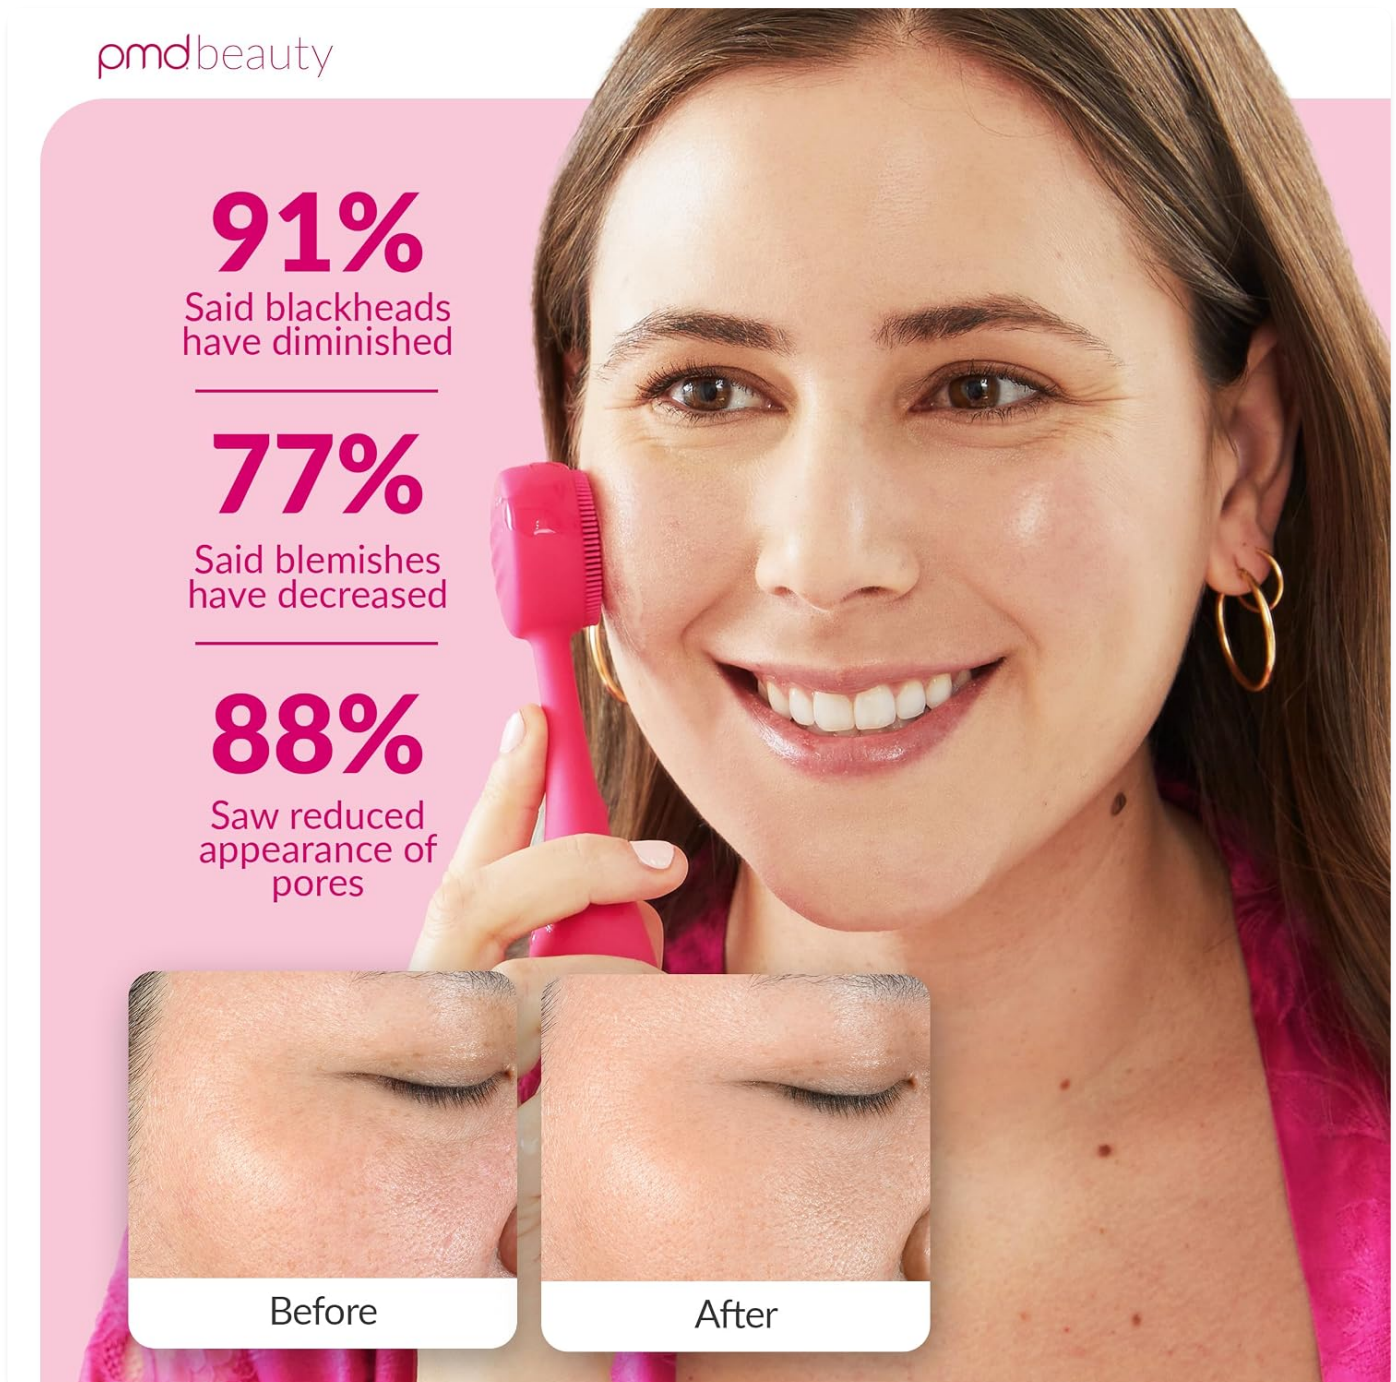

pmdbeauty

91%
Said blackheads
have diminished

77%
Said blemishes
have decreased

88%
Saw reduced
appearance of
pores

Before After

Image: Visual guide demonstrating the three simple steps to use the PMD Clean Mini: apply cleanser, cleanse in circular motions, and massage in skincare.

MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your PMD Clean Mini.

- **Cleaning the Device:** After each use, rinse the silicone brush head thoroughly under warm running water to remove any cleanser residue. The silicone material is naturally anti-bacterial and quick-drying.
- **Drying:** Allow the device to air dry completely before storing.
- **Storage:** Store the PMD Clean Mini in a clean, dry place.
- **Battery Replacement:** Replace the AAA battery when the device's vibrations weaken or it no longer turns on.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is dead or incorrectly inserted.	Check battery polarity or replace with a new AAA battery.
Vibrations are weak.	Low battery power.	Replace the AAA battery.
Skin irritation after use.	Excessive pressure or incompatible cleanser.	Use lighter pressure. Ensure your cleanser is suitable for your skin type and for use with a vibrating device. Consult a dermatologist if irritation persists.

SPECIFICATIONS

- **Model:** PMD Clean Mini
- **Item Model Number:** 811485034226
- **Dimensions:** 1.56 x 1.13 x 5.75 inches
- **Weight:** 0.96 ounces
- **Power Source:** 1 AAA battery (included)
- **Technology:** SonicGlow Technology (7,000 vibrations/minute)
- **Material:** Ultra-hygienic silicone
- **Waterproof Rating:** IPX7 (suitable for shower use)
- **Manufacturer:** AmazonUs/PMDFP
- **Country of Origin:** China

WARRANTY AND SUPPORT

The PMD Clean Mini comes with a one-year warranty. For warranty claims or technical support, please refer to the contact information provided on the official PMD Beauty website or the product packaging.
For additional information and resources, visit the [official product page](#).

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question