

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Diesel](#) /
- › [Diesel DZ4593 Mega Chief Digital Watch User Manual](#)

Diesel DZ4593

Diesel DZ4593 Mega Chief Digital Watch User Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Diesel DZ4593 Mega Chief Digital Watch. Please read this manual thoroughly to ensure proper use and care of your timepiece.



Image: Front view of the Diesel DZ4593 Mega Chief Digital Watch, showcasing its black dial and silicone strap.

SETUP

1. Initial Power On

Your Diesel DZ4593 watch comes with a pre-installed Lithium Ion battery. The watch should be operational upon removal from its packaging. If the display is blank, ensure no protective film is covering the screen or buttons.

2. Setting Time and Date

The DZ4593 features an ana-digi movement, combining analog and digital displays. The digital display allows for precise time and date setting.

1. **Identify Buttons:** Locate the buttons on the side of your watch. Typically, digital watches have at least two to four buttons for mode selection and adjustment. Refer to the image below for general button placement.



Image: Side view of the Diesel DZ4593 watch, highlighting the crown and push-buttons used for setting functions.

2. **Enter Setting Mode:** Press and hold the 'MODE' or 'SET' button (usually bottom-left or top-left) until the time digits begin to flash.
3. **Adjust Time:** Use the 'ADJUST' or 'START/STOP' button (usually top-right or bottom-right) to increase or decrease the flashing digits (hours, minutes). Press the 'MODE' button again to cycle through hours, minutes, and other settings like 12/24-hour format.
4. **Set Date:** Continue pressing the 'MODE' button to navigate to date settings (month, day, year). Adjust using the 'ADJUST' button.
5. **Exit Setting Mode:** Once all settings are correct, press the 'MODE' or 'SET' button one last time, or wait for the watch to automatically exit setting mode.

3. Adjusting the Strap

The watch features a silicone strap with a buckle closure. To adjust the fit:

1. Open the buckle.
2. Thread the strap through the buckle until a comfortable fit is achieved on your wrist.
3. Secure the buckle pin into one of the strap holes.
4. Ensure the watch is snug but not overly tight, allowing for proper circulation.



Image: Rear view of the Diesel DZ4593 watch, displaying the silicone strap and buckle mechanism.

CASE SIZE GUIDE : ROUND CASES

Wrists come in all sizes. Use this handy guide to find the right watch for you!
Print on 8.5 x 11 paper at 100% scale.

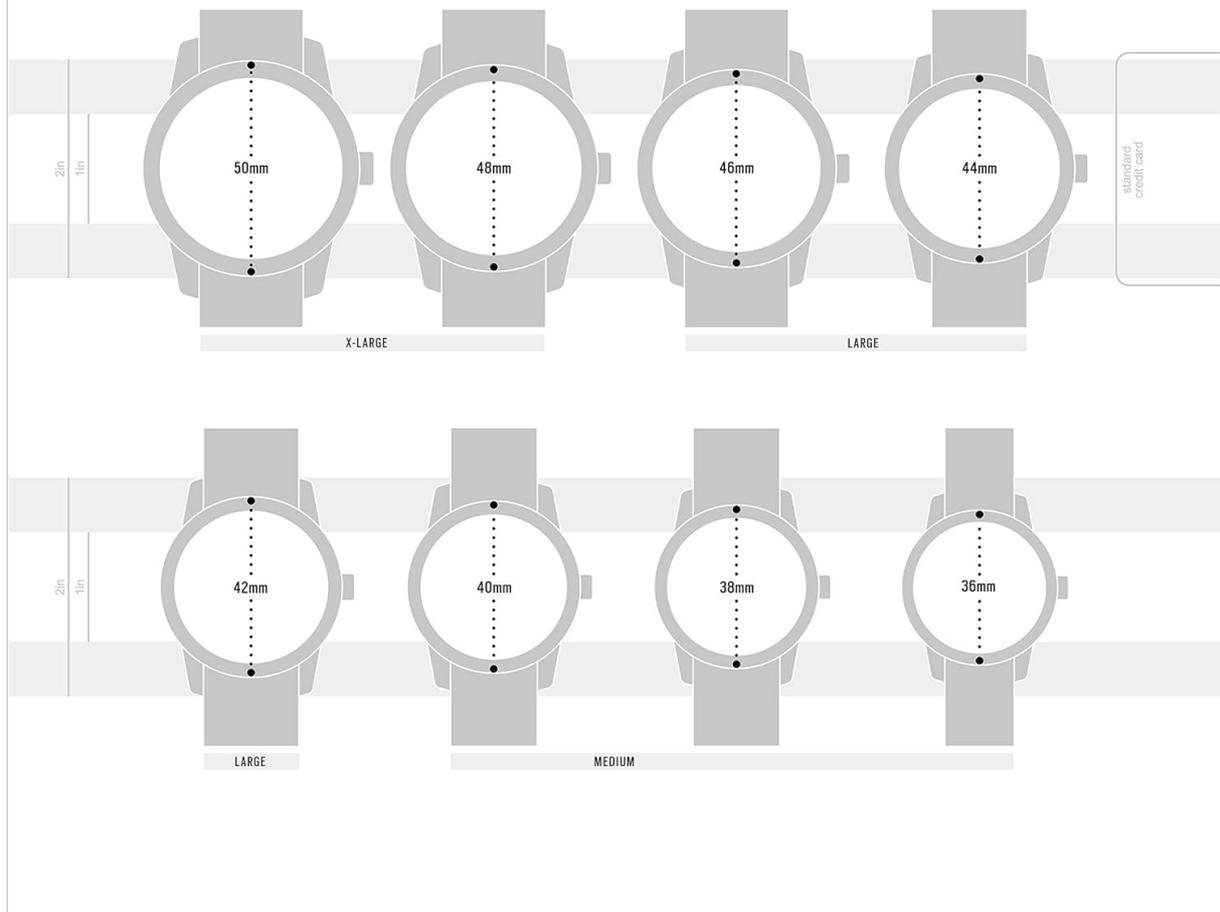


Image: A general watch case size guide for round cases, illustrating different watch diameters on a wrist for reference.

OPERATING THE WATCH

1. Display Modes

Your DZ4593 watch typically offers several digital display modes. Press the 'MODE' button repeatedly to cycle through them:

- **Time Mode:** Displays current time (hours, minutes, seconds) and often the day of the week.
- **Date Mode:** Displays the current date (month, day, year).
- **Alarm Mode:** Allows setting and viewing alarms.
- **Stopwatch Mode:** For measuring elapsed time.
- **Timer Mode:** For countdown functions.

2. Using the Stopwatch

1. Navigate to the Stopwatch mode by pressing the 'MODE' button.
2. Press the 'START/STOP' button (often top-right) to begin timing.
3. Press 'START/STOP' again to pause or stop the timer.

4. Press the 'RESET' button (often bottom-right) to clear the stopwatch to zero.

3. Water Resistance

The Diesel DZ4593 watch is water resistant, suitable for swimming. However, it is important to observe the following:

- Do not operate buttons or the crown while the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise seals.
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

MAINTENANCE

1. Cleaning Your Watch

- Wipe the watch case and strap with a soft, damp cloth.
- For silicone straps, mild soap and water can be used, then rinse thoroughly and dry.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

2. Battery Replacement

The watch uses 1 Lithium Ion battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

3. Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from strong magnetic fields, which can affect the watch's accuracy.

TROUBLESHOOTING

- **Watch Not Displaying:** Check if the battery is depleted. If recently replaced, ensure it is inserted correctly.
- **Incorrect Time/Date:** Re-enter the setting mode and adjust the time and date as described in the 'Setup' section.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable). If submerged, dry the watch thoroughly before attempting to use buttons. If issues persist, a battery reset or professional inspection may be required.
- **Water Inside Watch:** If condensation or water appears inside the watch, immediately take it to a professional watch repair service. Do not attempt to open the watch yourself, as this will void the warranty and likely cause further damage.

SPECIFICATIONS

Model Number	DZ4593
Brand	Diesel

Display Type	Digital
Movement Type	Quartz (Ana-Digi)
Case Material	Stainless Steel
Case Diameter	51 Millimetres
Case Thickness	14 Millimetres
Band Material Type	Silicone
Band Colour	Black
Band Width	26 Millimetres
Dial Colour	Black
Closure Type	Buckle
Water Resistance Level	Water Resistant (Suitable for Swimming)
Battery Type	1 Lithium Ion (included)
Item Weight	281 g
Product Dimensions	5.1 x 2.6 x 1.4 cm

WARRANTY INFORMATION

Your Diesel DZ4593 Mega Chief Digital Watch is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was not used according to its water resistance guidelines.
- Battery life.
- Unauthorized repairs or modifications.

For warranty claims or service, please retain your proof of purchase and contact Diesel customer support or an authorized service center.

SUPPORT

If you require further assistance or have questions not covered in this manual, please visit the official Diesel website or contact their customer service department. Always refer to your specific model number (DZ4593) when seeking support.

For additional resources, you may visit the [Diesel Store on Amazon](#).