

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 3-Seat Outdoor Patio Swing Chair User Manual

Outsunny 84A-054LB

Outsunny 3-Seat Outdoor Patio Swing Chair User Manual

Model: 84A-054LB | Brand: Outsunny

INTRODUCTION

Thank you for choosing the Outsunny 3-Seat Outdoor Patio Swing Chair. This manual provides important information regarding the assembly, operation, maintenance, and safety of your new swing chair. Please read this manual thoroughly before assembly and use, and retain it for future reference.

This cushioned porch swing is designed to comfortably seat three adults, making it ideal for enjoying sunny days outdoors. Its versatile design is perfect for patios, poolside areas, backyards, or balconies, providing a relaxing spot to unwind.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of serious injury, always follow these basic safety precautions:

- **Read All Instructions:** Before assembly and use, read and understand all instructions in this manual.
- **Adult Assembly Required:** Assembly should be performed by competent adults. Keep children and pets away during assembly.
- **Weight Limit:** Do not exceed the maximum weight capacity of 440 lbs (200 kg). Overloading can cause damage and injury.
- **Secure Placement:** Ensure the swing chair is placed on a flat, level, and stable surface. Do not use on uneven ground.
- **Regular Inspection:** Periodically check all bolts, nuts, and other fasteners to ensure they are tight and secure. Retighten as necessary.
- **Weather Conditions:** Do not use the swing chair during strong winds, heavy rain, or other severe weather conditions. Store or secure the canopy during such conditions.
- **Proper Use:** Do not stand on the swing, jump on it, or use it for purposes other than its intended use as a seating swing.
- **Children Supervision:** Children should always be supervised when using the swing chair.

- **Sharp Objects:** Keep sharp objects away from the fabric components to prevent tears or damage.

PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer service.

Part	Description	Quantity
A	Main Frame Components (Legs, Crossbars)	Various
B	Swing Seat Frame	1 set
C	Canopy Frame and Fabric	1 set
D	Cushioned Seat and Backrest	1
E	Hanging Chains/Hooks	2
F	Hardware Pack (Bolts, Nuts, Washers, Wrench)	1 set

ASSEMBLY INSTRUCTIONS

Please follow these steps carefully. It is recommended to have two adults for assembly.

Step 1: Assemble the Main Frame

Connect the leg components using the provided crossbars and hardware. Ensure all connections are finger-tight before fully tightening.



Image: The fully assembled Outsunny 3-Seat Outdoor Patio Swing Chair, showcasing its green canopy and seat, and sturdy steel frame.



Image: The swing chair positioned on a patio, demonstrating its size and appearance in an outdoor environment.

Step 2: Attach the Swing Seat

Assemble the swing seat frame and attach the cushioned seat. Then, hang the assembled seat onto the main frame using the hanging chains and hooks. Ensure the hooks are securely fastened to the frame's designated points.



Image: A detailed view of the swing chair's comfortable cushioned seat and backrest, highlighting the fabric texture.




Image: A close-up shot showing how the seat cushion is secured to the frame with ties, ensuring it stays in place.

Step 3: Install the Canopy

Assemble the canopy frame and slide the canopy fabric onto it. Attach the canopy assembly to the top of the main frame. The canopy is designed to be adjustable for optimal shade.

ADJUSTABLE CANOPY

The angle of the canopy can be easily adjusted to your needs

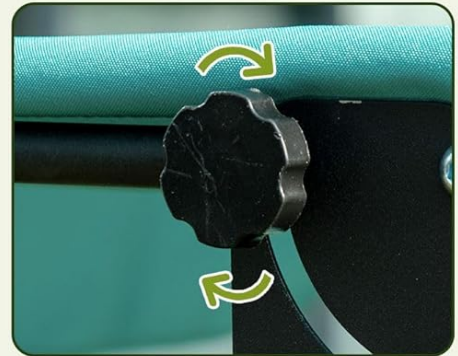

Splash-Proof

Image: A diagram illustrating the adjustable canopy feature, showing how the angle can be tilted and highlighting its splash-proof material.

Step 4: Final Tightening and Inspection

Once all components are assembled, carefully tighten all bolts and nuts using the provided wrench. Do not overtighten. Verify that the swing chair is stable and all parts are securely connected before first use.

STABLE STANDING



● Solid Steel Frame



● Strong Spring Hanging Hook

● Steady A-shaped Structure



● Non-Slip Foot Pad

Image: A diagram detailing the stable standing features, including the solid steel frame, strong spring hanging hooks, steady A-shaped structure, and non-slip foot pads.

OPERATING INSTRUCTIONS

Using the Swing

Gently sit on the swing seat. The swing is designed for a smooth, relaxing motion. Avoid sudden movements or excessive force when swinging.

3-SEATER SWING

Relax with your family or friends



Image: An illustration demonstrating the 3-seater capacity of the swing, showing three individuals comfortably seated.

Adjusting the Canopy

The canopy features an adjustable tilt mechanism. Loosen the adjustment knobs on either side of the canopy frame, adjust the canopy to your desired angle for optimal shade, and then tighten the knobs to secure it in place. This allows you to block UV rays and protect from light rain.

ADJUSTABLE CANOPY

The angle of the canopy can be easily adjusted to your needs



Image: A diagram illustrating the adjustable canopy feature, showing how the angle can be tilted and highlighting its splash-proof material.

MAINTENANCE

- **Cleaning:** Clean the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. The fabric components can be spot cleaned with mild soap and water. Allow to air dry completely.
- **Cushion Care:** The cushion is removable for easier cleaning and storage. For prolonged life, store cushions indoors during inclement weather or when not in use for extended periods.
- **Inspection:** Periodically inspect all nuts, bolts, and connections for tightness. Retighten as needed. Check the fabric for any signs of wear, tears, or fading.
- **Storage:** During off-season or extended periods of non-use, it is recommended to disassemble the swing chair or cover it with a protective outdoor furniture cover to protect it from harsh weather conditions. Store in a dry, sheltered area.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose bolts or uneven ground.	Ensure all bolts are tightened. Move the swing to a flat, level surface.
Canopy does not stay in position.	Adjustment knobs are not tight enough.	Tighten the adjustment knobs firmly after setting the desired angle.
Squeaking noise during swinging.	Friction at pivot points or hanging hooks.	Apply a small amount of silicone lubricant to the hanging hooks and pivot points.
Fabric tearing or showing excessive wear.	Exposure to harsh weather, sharp objects, or exceeding weight limit.	Ensure proper storage/covering during harsh weather. Avoid contact with sharp objects. Do not exceed weight limit. Consider replacement fabric if available.

SPECIFICATIONS

Brand: Outsunny

Model Number: 84A-054LB

Color: Green

Overall Dimensions: 67.75" W x 43.25" D x 60.25" H (172.1 cm W x 109.9 cm D x 153 cm H)

Seat Depth: 18.1 inches (46 cm)

Frame Material: Steel, Polyester

Finish Type: Powder Coated

Weight Capacity: 440 lbs (200 kg)

Item Weight: 36 pounds (16.3 kg)

Assembly Required: Yes

UPC: 196393156926

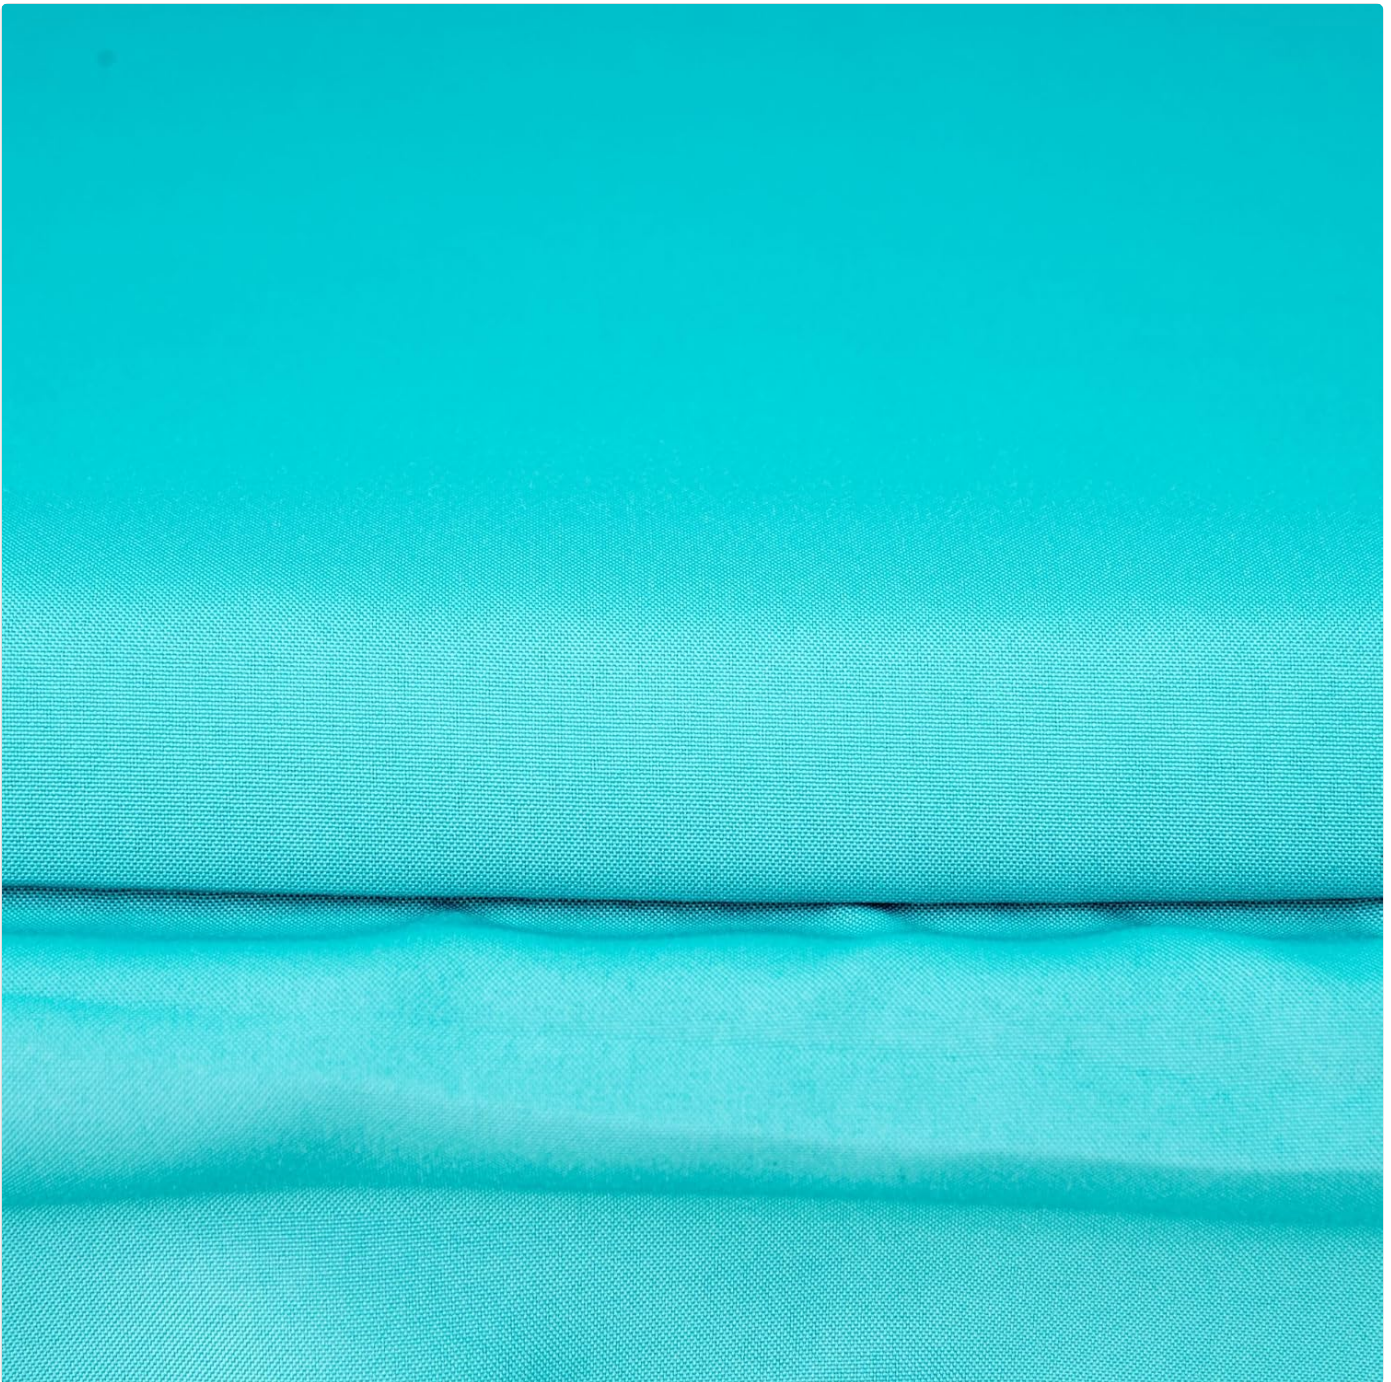


Image: A detailed diagram showing the overall dimensions of the swing chair, including width, depth, height, and seat dimensions.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included in your package or visit the official Outsunny website. You may also contact Aosom LLC, the manufacturer, for assistance.

Manufacturer: Aosom LLC

For further assistance, please visit the [Outsunny Store on Amazon](#).

