

Woputne HL-TJ8010A

Woputne HL-TJ8010A Desk Clip-on Lamp User Manual

Model: HL-TJ8010A

INTRODUCTION

Thank you for choosing the Woputne HL-TJ8010A Desk Clip-on Lamp. This versatile LED lamp is designed to provide optimal lighting for various tasks such as reading, studying, crafting, and office work. It features a sturdy clip for easy attachment, a flexible gooseneck for precise positioning, three adjustable color temperatures, and ten dimmable brightness levels. This manual provides essential information for the safe and efficient use of your new lamp.

WHAT'S IN THE BOX

- 1 x Woputne Clip Lamp
- 1 x 5V 2A Mains Plug (Power Adapter)
- 1 x 150cm USB Cable (integrated with lamp)
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Woputne Desk Clip-on Lamp.



Figure 1: Overview of the Woputne HL-TJ8010A Desk Clip-on Lamp, including the lamp head, flexible gooseneck, sturdy clamp, USB cable, and separate power adapter.



Figure 2: Detailed view of the lamp's dimensions, highlighting the 8.8cm lamp head diameter, 38cm gooseneck length, 1.5m USB cable, 360° flexible gooseneck, 2-inch clamp tension, and scratch-resistant foam pads on the clamp for secure and damage-free attachment.

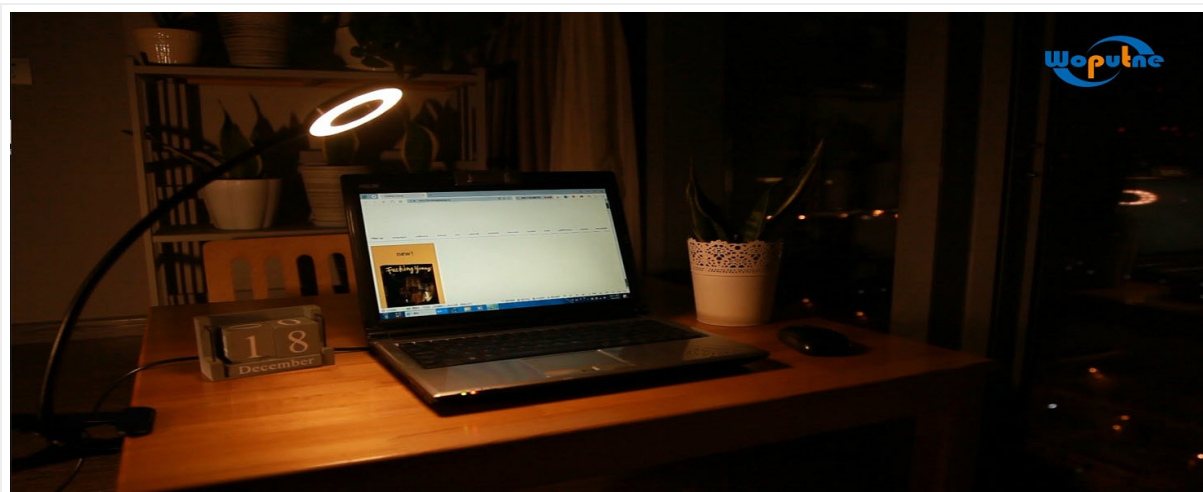 


Figure 3: The inline control panel featuring buttons for power on/off, increasing brightness, decreasing brightness, and changing the light color mode.

SETUP INSTRUCTIONS

 
1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Attach the Lamp:** Securely clip the lamp's clamp onto a stable surface such as a desk, headboard, or shelf. Ensure the surface thickness is within the clamp's capacity (up to 2 inches). The scratch-resistant foam pads protect your furniture.
3. **Connect Power:** Insert the USB end of the lamp's cable into the provided 5V 2A mains plug (power adapter).
4. **Plug In:** Plug the mains adapter into a standard electrical wall outlet.
5. **Position the Light:** Adjust the flexible 360° gooseneck to direct the light precisely where needed.

OPERATING INSTRUCTIONS


The Woputne Desk Clip-on Lamp features an inline control panel for easy operation.

- **Power On/Off:** Press the **Power Button** (usually marked with a circle and vertical line) on the inline control panel to turn the lamp on or off.
- **Adjust Brightness:** Use the **Brightness Up (+)** and **Brightness Down (-)** buttons to cycle through 10 levels of brightness, from 10% to 100%.
- **Change Color Mode:** Press the **Mode Button** (often marked with an 'M' or sun icon) to switch between three color temperatures:
 - **Warm Light (3000K):** Ideal for relaxation or creating a cozy atmosphere.
 - **Natural Light (4500K):** A balanced light suitable for general tasks.
 - **White Light (6000K):** Bright and clear, best for focused work or reading.
- **Auto Turn-Off Function:** The lamp can be set to automatically turn off after 1 minute. This feature is useful for bedtime reading. Consult the specific button on your control panel for this function (often indicated by a clock icon).
- **Memory Function:** The lamp will remember the last used brightness level and color mode when turned off and on again, provided the power supply is not disconnected.


3 COLORS LIGHTING MODE

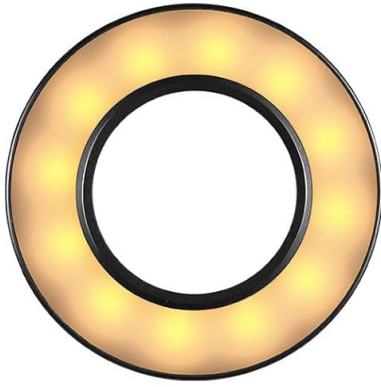

Warm Light

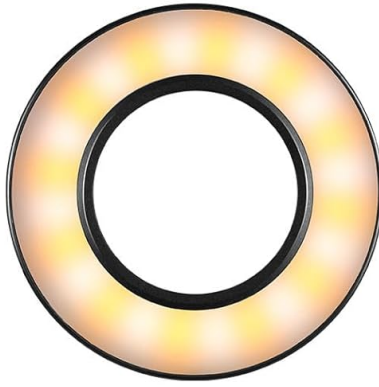

Natural Light

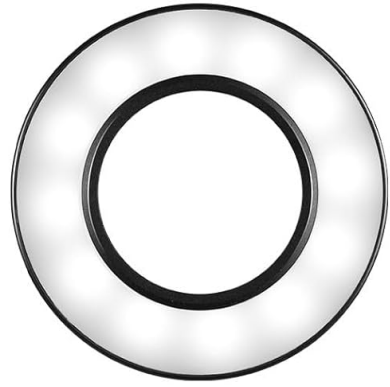

White Light

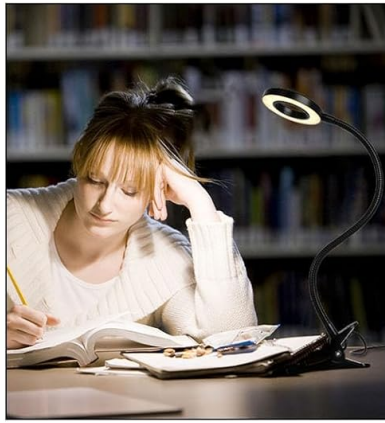 


Figure 4: Visual representation of the three available light color modes: Warm Light, Natural Light, and White Light, demonstrating their distinct appearances.

10 Levels of Brightness (10%-100%)



Figure 5: Depiction of the lamp's 10 dimmable brightness levels, ranging from 10% to 100%, allowing for fine-tuned illumination.

MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe the lamp head, gooseneck, and clamp. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place, away from direct sunlight and moisture.
- **Handling:** Avoid excessive bending or twisting of the gooseneck beyond its natural flexibility to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply; loose connection; faulty adapter.	Ensure the power adapter is securely plugged into both the lamp's USB cable and the wall outlet. Try a different outlet. Verify the adapter is functioning correctly.

Problem	Possible Cause	Solution
Lamp flickers or dims unexpectedly.	Unstable power supply; loose connection; adapter not providing sufficient power.	Check all connections. Ensure the power adapter is rated 5V 2A. Avoid using the lamp with other high-power devices on the same circuit.
Lamp turns off by itself after a short period.	Auto turn-off timer activated; internal fault.	Check if the auto turn-off function was accidentally activated. If the issue persists and the timer is not active, contact customer support.
Buttons on control panel are unresponsive.	Power issue; control panel malfunction.	Disconnect and reconnect the power. If the issue persists, the control panel may be faulty.

SPECIFICATIONS

Brand	Woputne
Model Name	HL-TJ8010A
Light Source Type	LED
Wattage	5 watts
Brightness	Up to 500 Lumens
Color Temperatures	3000K (Warm), 4500K (Natural), 6000K (White)
Dimmable Levels	10 levels (10% - 100%)
Power Source	Corded Electric (5V 2A Adapter included)
Material	Acrylonitrile Butadiene Styrene, Aluminum
Product Dimensions	8"D x 13"W x 17"H (approximate, flexible gooseneck)
Gooseneck Length	Approx. 38 cm
USB Cable Length	Approx. 150 cm
Clamp Opening	Up to 5 cm (2 inches)
Special Features	Adjustable Arm, Adjustable Color Temperature, Dimmable, Memory Function, Auto Turn-Off Timer
UPC	715377635440

WARRANTY INFORMATION






Specific warranty details are not provided in the available product information. For warranty claims or information regarding product defects, please refer to the terms and conditions of your purchase or contact the seller directly. A Certificate of Compliance (PDF) is available for this product, which can be accessed

via the following link: [Certificate of Compliance](#).

SUPPORT

Should you encounter any issues or have questions not covered in this manual, please contact Woputne customer support through the retailer where you purchased the product. You may also visit the official Woputne Store for additional product information and support: [Woputne Store](#).

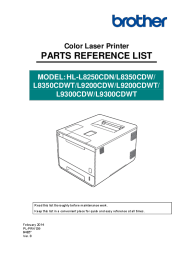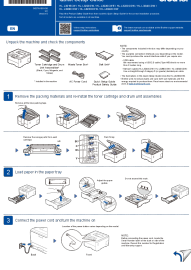Related Documents - HL-TJ8010A

 <p>brother Color Laser Printer PARTS REFERENCE LIST MODEL: HL-L8250CDN, L8350CDW, L8350CDWT, L9200CDW, L9200CDWT, L9300CDW, L9300CDWT</p>	<p>Brother Color Laser Printer Parts Reference List</p> <p>Comprehensive parts reference list for Brother Color Laser Printers, including models HL-L8250CDN, HL-L8350CDW, HL-L8350CDWT, HL-L9200CDW, HL-L9200CDWT, HL-L9300CDW, and HL-L9300CDWT. This document details various components with their respective part numbers, descriptions, and model compatibility.</p>
 <p>brother Quick Setup Guide For Brother HL-L3215CW, HL-L3220CW, HL-L3220CWE, HL-L3240CDW, HL-L3280CDW, HL-L8230CDW, and HL-L8240CDW</p>	<p>Brother Printer Quick Setup Guide for HL-L3215CW and other models</p> <p>Step-by-step instructions for setting up your Brother HL-L3215CW, HL-L3220CW, HL-L3220CWE, HL-L3220CDW, HL-L3240CDW, HL-L3280CDW, HL-L8230CDW, and HL-L8240CDW printers, including unpacking, component installation, paper loading, and connectivity.</p>
 <p>stealthRO150™ Customized Reverse Osmosis Filter User Manual HydroLogic Precision Water Treatment</p>	<p>HydroLogic StealthRO150 User Manual: Customized Reverse Osmosis Filter</p> <p>This user manual provides comprehensive instructions for the HydroLogic StealthRO150 Customized Reverse Osmosis Filter, covering setup, filter replacement, maintenance, troubleshooting, and technical specifications. Designed for hydroponic and horticultural applications, it details how to achieve optimal water purification.</p>
 <p>brother Color Laser Printer PARTS REFERENCE LIST MODEL: HL-L8260CDW, L8260CDN, L8360CDW, L8360CDWT, L9310CDW</p>	<p>Brother Color Laser Printer Parts Reference List - HL-L8260CDW Series</p> <p>Comprehensive parts reference list for Brother Color Laser Printers including models HL-L8260CDW, HL-L8260CDN, HL-L8360CDW, HL-L8360CDWT, and HL-L9310CDW. Features detailed part diagrams and part number listings for maintenance and service.</p>
 <p>Instructions For Toner Cartridge Kind reminder: Reading before installation can better use the product</p>	<p>Toner Bank Instructions for Toner Cartridge</p> <p>Comprehensive instructions for Toner Bank toner cartridges, including storage guidelines, compatible printer models, and essential security steps for installation.</p>

<div>HL-100 HL-200 HL-300 HL-400 HL-500 HL-600 HL-700 HL-800 HL-900 HL-910</div> <div>OWNER'S MANUAL</div> <div>#001</div> <div>The New Generation Starts in The Sauna! Healthland Sauna Equipment Co., Ltd. Ver. 1.0/01</div>	<div>Healthland Sauna Owner's Manual: HL-100 to HL-910 Models</div> <div>Comprehensive owner's manual for Healthland Sauna Equipment Co. Ltd. HL-100, HL-200, HL-300, HL-400, HL-500, HL-600, HL-700, HL-800, HL-900, and HL-910 models. Includes operating instructions, safety warnings, technical specifications, and control panel guide.</div>
--	---