

[Manuals.plus](#) /

› [Epson](#) /

› Epson Ecotank L3256 Wi-Fi Multifunction Ink tank Colour Printer User Manual

Epson L3256

Epson Ecotank L3256 Wi-Fi Multifunction Ink tank Colour Printer

Model: L3256 | Brand: Epson

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Epson Ecotank L3256 Wi-Fi Multifunction Ink tank Colour Printer. The L3256 is an all-in-one printer designed for home and small office use, offering print, scan, and copy functionalities with Wi-Fi and USB connectivity.



Figure 1: Epson Ecotank L3256 Printer. This image shows the compact white printer with its integrated ink tanks visible on the right side.

WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Epson Ecotank L3256 Printer
- CD DVD Tray
- Power Cable
- USB Cable
- Ink Bottles (Black, Cyan, Magenta, Yellow)

SETUP

1. Unpacking and Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate space around it for ventilation and cable connections. Remove all protective tapes and packing materials from the printer.

2. Filling the Ink Tanks

The Epson Ecotank L3256 uses an ink tank system. Follow these steps to fill the ink tanks:

1. Open the ink tank unit cover on the right side of the printer.
2. Open the cap for each color tank (Black, Cyan, Magenta, Yellow).
3. Uncap the corresponding ink bottle and align its nozzle with the tank's inlet. The bottles are designed to prevent misfilling.
4. Allow the ink to drain into the tank. Do not squeeze the bottle.
5. Once the tank is full, remove the bottle and securely close the tank cap. Repeat for all colors.
6. Close the ink tank unit cover.



Figure 2: Ink Tank Filling. This image illustrates the process of filling an ink tank with an Epson ink bottle, highlighting the smart design that prevents spills and incorrect color filling.

3. Initial Ink Charging

After filling the ink tanks, connect the power cable and turn on the printer. The printer will begin an initial ink charging process, which may take several minutes. Do not turn off the printer or disconnect the power cable during this process.

4. Software Installation and Connectivity

Install the printer drivers and software from the included CD or download them from the official Epson support website. The L3256 supports Wi-Fi and USB connectivity.

- **USB Connection:** Connect the printer to your computer using the provided USB cable.
- **Wi-Fi Connection:** Follow the on-screen instructions during software installation to connect the printer to your wireless network. Alternatively, use the Epson Smart Panel app for guided setup.

OPERATING THE PRINTER

The Epson Ecotank L3256 offers print, scan, and copy functionalities.

1. Printing Documents and Photos

Load paper into the rear paper feeder. Ensure the paper guides are adjusted to the paper width. From your computer or mobile device, select the Epson L3256 as your printer and adjust print settings as needed (e.g., paper size, print quality, color/grayscale).

- **Supported Page Sizes:** A4, A5, A6, B5, C6, DL.
- **Duplex Printing:** Manual duplex printing is supported. Follow software prompts for two-sided printing.

2. Scanning Documents

Place the document face-down on the scanner glass, aligning it with the corner mark. Use the Epson Scan software on your computer or the Epson Smart Panel app on your mobile device to initiate a scan. Select scan settings such as resolution, color mode, and destination folder.

3. Copying Documents

Place the document face-down on the scanner glass. Use the control panel on the printer or the Epson Smart Panel app to select copy options (e.g., number of copies, color or black & white, paper size) and start the copying process.



Figure 3: Multifunction Capabilities. This image highlights the printer's ability to Print, Scan, and Copy, showcasing its versatility for various document handling needs.

4. Using the Epson Smart Panel App

The Epson Smart Panel app allows you to control your printer from your smartphone or tablet. It supports printing, scanning, copying, and managing printer settings. Download the app from your device's app store and connect it to your printer via Wi-Fi.



Figure 4: Wi-Fi Connectivity and Smart Panel App. This image shows a smartphone running the Epson Smart Panel app, demonstrating wireless control over the printer for various tasks.

MAINTENANCE

1. Checking Ink Levels and Refilling

Regularly check the ink levels through the transparent ink tanks on the front of the printer or via the Epson Smart Panel app/printer status monitor on your computer. Refill ink tanks as described in the "Filling the Ink Tanks" section when levels are low.

2. Print Head Cleaning

If print quality declines (e.g., missing lines, faded prints), perform a print head cleaning. This can be done through the printer's utility software on your computer or via the Epson Smart Panel app. Follow the on-screen instructions.

3. Print Head Alignment

If prints appear blurry or misaligned, perform a print head alignment. This utility is available through the printer's software. The printer will print a test pattern, and you will select the best alignment option.

4. Cleaning the Printer

Wipe the exterior of the printer with a soft, damp cloth. For the scanner glass, use a lint-free cloth and a non-abrasive glass cleaner. Avoid spraying cleaner directly onto the glass.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson Ecotank L3256 printer.

- **Printer Not Responding:**

- Ensure the printer is powered on and connected securely (USB or Wi-Fi).
- Check for error messages on the printer's control panel or computer.
- Restart the printer and your computer/router.
- Verify that the correct printer driver is installed and selected.

- **Poor Print Quality:**

- Check ink levels and refill if necessary.
- Perform a print head cleaning.
- Perform a print head alignment.

- Ensure you are using genuine Epson ink.
- Check paper type and quality settings in your print driver.

- **Paper Jams:**

- Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or inside the printer.
- Ensure paper is loaded correctly and not creased or curled.
- Do not overload the paper tray.

- **Wi-Fi Connection Issues:**

- Ensure your Wi-Fi router is on and functioning.
- Verify the Wi-Fi password entered is correct.
- Move the printer closer to the Wi-Fi router if signal is weak.
- Restart your router and printer.
- Re-run the Wi-Fi setup using the Epson Smart Panel app or printer utility.

SPECIFICATIONS

Feature	Detail
Printer Type	Ink Tank, All-in-One (Print, Scan, Copy)
Scanner Type	Flatbed
Printer Output	Colour
Connectivity	Wi-Fi, USB, App (Epson Smart Panel)
Max Print Resolution (Colour)	5760 x 1440 dpi
Max Print Resolution (Black & White)	5760 x 1440 dpi
Max Copy Resolution (Colour)	5760 x 1440 dpi
Max Copy Resolution (Black & White)	5760 x 1440 dpi
Maximum Print Speed (Colour)	15 ppm
Maximum Print Speed (Monochrome)	33 ppm
Supported Page Sizes	A4, A5, A6, B5, C6, DL
Duplex Print	Manual
Max Input Sheet Capacity	100 sheets
Ink Colours	Black, Cyan, Magenta, Yellow
Product Dimensions (LxWxH)	43.5 x 40.8 x 24.4 cm
Item Weight	5.6 kg
Model Number	L3256
Manufacturer	Epson

Feature	Detail
Country of Origin	Philippines

Table 1: Technical Specifications of Epson Ecotank L3256.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your printer or visit the official Epson support website. Keep your purchase receipt as proof of purchase for warranty claims.

Epson India Support: <https://www.epson.co.in/support>

Extended Warranty Options: Extended warranty plans may be available for purchase. Refer to your retailer or Epson's official channels for details.

© 2024 Epson Corporation. All rights reserved.

Epson and EcoTank are registered trademarks of Seiko Epson Corporation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question