

[Manuals.plus](#) /

› [Chicco](#) /

› Chicco Activ3 Jogging Stroller Instruction Manual

Chicco 05079373150070

Chicco Activ3 Jogging Stroller Instruction Manual

Model: 05079373150070

INTRODUCTION

The Chicco Activ3 Jogging Stroller combines the functionality of a full-size stroller with the robust features of a jogging stroller. Designed for versatile use across various terrains, it features a lightweight aluminum frame, a three-wheel design for maneuverability, and adjustable FlexCore rear suspension. The stroller is equipped with foam-filled tires that offer durability without maintenance. For enhanced comfort and safety, it includes an extendable UPF-rated canopy with peek-a-boo windows and reflective details. The exclusive Chicco Control Console provides convenient hand-operated controls for the parking brake and front swivel wheel lock, alongside a 4-position adjustable handle. Additional features include a multi-position reclining seat, a large storage basket, and compatibility with Chicco infant car seats (sold separately) for creating a travel system.



Image: The Chicco Activ3 Jogging Stroller, showcasing its three-wheel design and overall structure.

SETUP AND ASSEMBLY

Unfolding the Stroller

1. Ensure the stroller is on a flat, stable surface.
2. Locate the folding mechanism, typically near the handlebar.
3. Release the folding latch and lift the handlebar firmly until the stroller frame locks into place.
4. Verify that all locking mechanisms are engaged before use.

Adjusting the Handlebar

- The handlebar features a 4-position adjustment.
- Press the adjustment buttons located on both sides of the handlebar simultaneously.
- Move the handlebar up or down to your desired height.

- Release the buttons to lock the handlebar in position.



Control *Console*

Parking brake, swivel lock and 4-position handle

Image: The control console on the handlebar, showing the hand-operated brake and swivel lock controls.

Car Seat Compatibility (Travel System)

The Activ3 Jogging Stroller is designed to pair with all Chicco infant car seats (sold separately) without the need for an additional adapter. The car seat attaches securely via the stroller's arm bar.

1. Ensure the stroller seat is in its upright position.
2. Align the infant car seat with the stroller's arm bar.
3. Press down firmly until you hear a "click" indicating a secure attachment.
4. Always check that the car seat is securely fastened by gently pulling upwards before use.



Click-in Compatibility

Secure attachment for all Chicco infant car seats

Image: An infant car seat being securely clicked into the Activ3 Jogging Stroller.

OPERATING INSTRUCTIONS

Braking System

- The stroller features a hand-operated parking brake located on the handlebar.
- To engage the brake, push the lever forward.
- To release the brake, pull the lever backward.
- Always engage the parking brake when the stroller is stationary.

Front Swivel Wheel Lock

- A hand-operated lever on the handlebar controls the front swivel wheel.
- To lock the front wheel for jogging or straight-line travel, push the lever to the locked position.
- To allow the front wheel to swivel for enhanced maneuverability in tight spaces, pull the lever to the unlocked position.

Reclining Seat

- The multi-position reclining seat can be adjusted for your child's comfort.
- Locate the recline mechanism (usually a strap or lever behind the seat).
- Adjust the seat to the desired recline angle.

Canopy Adjustment

- The UPF 50+ extendable canopy provides ample shade and protection.
- Pull the canopy forward or backward to adjust its coverage.
- Utilize the peek-a-boo windows to check on your child without disturbing them.



Image: A child enjoying the shade provided by the extended UPF 50+ canopy.

Folding the Stroller for Storage

The Activ3 jogger offers three compact, one-hand fold configurations:

1. **Standing Fold:** Ideal for garage storage. Engage the folding mechanism and lift until it stands upright.
2. **Flat Fold:** For trunk storage, the front swivel wheel can be folded down to create a flatter profile.
3. **Quick-Release Wheels:** For maximum compactness, the wheels can be quickly removed.



3-Fold Configurations

Quick release wheels for additional fold options

Image: The stroller folded into a compact configuration, fitting into a car trunk.

MAINTENANCE

- **Cleaning:** The fabric components (80% Polyester, 20% PVC) are easy to clean. Spot clean with mild soap and water. Refer to the care instructions label for specific details.
- **Tires:** The foam-filled tires are designed to be maintenance-free and do not require inflation. Regularly check for debris or damage.
- **Frame:** Wipe the aluminum frame with a damp cloth to remove dirt and dust.
- **Storage:** Store the stroller in a dry place away from direct sunlight to prevent fading and material degradation.

SPECIFICATIONS

Feature	Detail
Brand	Chicco
Model Number	05079373150070
Color	Eclipse
Frame Material	Aluminum
Fabric Type	80% Polyester, 20% PVC
Tire Material	Foam
Number of Wheels	3
Harness Type	5 Point
Maximum Weight Recommendation	50 Pounds
Item Weight	27.5 Pounds
Item Dimensions (L x W x H)	47.5"L x 25"W x 42"H
Folded Size	47.5 x 25.0 x 42.0 (Note: This seems to be the same as unfolded dimensions, likely a data error or refers to a specific folded configuration. Refer to product for exact folded dimensions.)
Is Car Seat Compatible	Yes
Number of Cup Holders	2
Additional Features	Adjustable Handle, Foldable, Forward Facing Seat, Hand Operated Brakes, Infant Car Seat Compatible



Image: Visual representation of the stroller's dimensions.

WARRANTY AND SUPPORT

The Chicco Activ3 Jogging Stroller comes with a **1-year limited warranty** from the manufacturer, Artsana USA, Inc. For warranty claims, product support, or additional information, please refer to the contact details provided in your product packaging or visit the official Chicco website.

For further assistance, you may also visit the [Chicco Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question