

AKAI AK247006LA

Akai AK247006LA 24-inch HD LED Android Smart TV User Manual

Model: AK247006LA / AKTV24006LA

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Akai AK247006LA 24-inch HD LED Android Smart TV. Please read this manual thoroughly before using the television and retain it for future reference. This guide covers setup, operation, maintenance, and troubleshooting to ensure you get the most out of your device.

2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep the TV away from direct sunlight, heat sources, and strong magnetic fields.
- Do not place objects filled with liquids, such as vases, on the TV.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition:

- Akai 24-inch HD LED Android Smart TV
- Remote Control (requires 2 AAA batteries, included)
- Power Cable
- TV Stand
- Screws for Stand Assembly
- User Manual (this document)

4. PHYSICAL OVERVIEW

Familiarize yourself with the television's components and connection ports.



Figure 4.1: Front View of the Akai Smart TV. This image displays the front of the Akai 24-inch HD LED Android Smart TV, showing the screen and the Akai logo at the bottom center. The screen displays a soccer ball in a net, indicating a clear picture quality.



Figure 4.2: Dimensions and Side View with Ports. This image illustrates the physical dimensions of the Akai Smart TV, including screen width (556.5 mm), screen height without stand (334 mm), screen depth (76 mm), and stand depth (165 mm). The side panel

shows various input/output ports for connectivity.



Figure 4.3: Example Placement. This image shows the Akai 24-inch Smart TV positioned on a modern TV stand in a room, demonstrating its compact size and suitability for various living spaces. The TV is displaying a soccer scene.

5. SETUP

5.1. Stand Assembly

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the TV stand legs with the corresponding holes on the bottom of the TV.
3. Secure the stand legs using the provided screws. Ensure they are tightened firmly.

5.2. Power Connection

- Connect the power cable to the TV's power input.
- Plug the other end of the power cable into a suitable wall outlet.

5.3. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Network Connection:** Connect to your Wi-Fi network or an Ethernet cable. (Refer to Section 8.2 for details).
3. **Channel Scan:** Select your region and initiate a scan for available Freeview HD (DVB-T2) or Satellite (DVB-S2) channels. An antenna is required for Freeview HD.
4. **Time Zone:** Set the correct time zone.
5. Follow any additional on-screen prompts to complete the setup.

6. OPERATING THE TV

6.1. Remote Control

Insert the two AAA batteries into the remote control, observing polarity. The remote allows you to navigate menus, change channels, adjust volume, and access smart features.

6.2. Basic Functions

- **Power On/Off:** Press the **Power** button on the remote or TV.
- **Volume Control:** Use the **VOL +/-** buttons.

- **Channel Selection:** Use the **CH +/-** buttons or number pad.
- **Mute:** Press the **Mute** button to silence the audio.
- **Menu:** Press the **Menu** button to access TV settings.

6.3. Input Source Selection

To switch between connected devices (e.g., game console, Blu-ray player):

- Press the **Source** or **Input** button on the remote.
- Use the arrow keys to select the desired input (e.g., HDMI 1, HDMI 2, USB).
- Press **OK** or **Enter** to confirm.

7. SMART TV FEATURES

Your Akai TV runs on the Android operating system, providing access to a wide range of smart features and applications.

7.1. Android OS

The Android OS allows you to download apps from the Google Play Store, browse the internet, and stream content. Navigate the smart interface using the remote control's directional buttons and OK button.

7.2. Connecting to Wi-Fi

1. From the Home screen, navigate to **Settings**.
2. Select **Network & Internet**.
3. Choose **Wi-Fi** and select your network from the list.
4. Enter your Wi-Fi password using the on-screen keyboard and select **Connect**.

7.3. Using Applications

Access pre-installed apps like Netflix or download new ones from the Google Play Store. Ensure your TV is connected to the internet for optimal app functionality.

8. CONNECTIVITY

The TV offers various ports for connecting external devices:

- **HDMI Ports (x3):** Connect Blu-ray players, game consoles, set-top boxes, etc.
- **USB Port (x1):** For playing media files (photos, videos) from a USB drive.
- **Ethernet (LAN) Port:** For a wired internet connection.
- **Headphone Jack:** For connecting headphones for private listening.
- **Antenna/Satellite Input:** For connecting an aerial or satellite dish for Freeview HD or DVB-S2 channels.

9. MAINTENANCE

9.1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray cleaner directly onto the screen.

- Avoid using abrasive cleaners, waxes, or solvents.

9.2. Software Updates

Periodically check for software updates through the TV's settings menu to ensure optimal performance and access to the latest features. (Settings > About > System Update).

10. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Check if the power cable is securely connected to both the TV and the wall outlet. Try a different outlet.
No Picture, but Sound is Present	Ensure the correct input source is selected. Check cable connections to external devices.
No Sound, but Picture is Present	Check volume level and mute status. Ensure audio cables are correctly connected for external devices.
Remote Control Not Working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Verify Wi-Fi password. Restart your router. Ensure the TV is within range of the Wi-Fi signal.
Poor Picture Quality (Freeview/DVB-S2)	Check antenna/satellite dish connection and alignment. Perform a channel rescan.

11. SPECIFICATIONS

Feature	Detail
Brand	AKAI
Model Number	AK247006LA / AKTV24006LA
Screen Size	24 Inches
Display Technology	LED
Resolution	720p (1366 x 768)
Refresh Rate	60 Hz
Operating System	Android
Connectivity Technology	Ethernet, HDMI, USB, Wi-Fi
HDMI Ports	3
USB Ports	1
Sound System	2-channel, 2 x 3W RMS output

Feature	Detail
Digital Tuner	Freeview HD (DVB-T2), DVB-S2
Supported Internet Services	Netflix (and others via Android OS)
Energy Consumption (1000h)	42 kWh
Standby Power Consumption	0.5 W

12. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact Akai customer support. Keep your proof of purchase for any warranty claims.

If you require further assistance or encounter issues not covered in this manual, please contact Akai customer support through their official website or the contact details provided with your purchase documentation.

- Spare parts availability: Information not available.
- Software updates guaranteed until: Information not available.