

## **PARIS RHÔNE PE-AF006**

# **Paris Rhône 24-in-1 Air Fryer Toaster Oven User Manual**

Model: PE-AF006

Brand: PARIS RHÔNE

## **INTRODUCTION**

Thank you for choosing the Paris Rhône 24-in-1 Air Fryer Toaster Oven. This versatile countertop appliance combines the functions of an air fryer, toaster oven, and rotisserie cooker, offering 24 intelligent presets for a wide range of cooking tasks. With its 26-quart large capacity and efficient 360-degree hot air circulation, you can prepare healthy and delicious meals with up to 85% less oil. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Figure 1: Paris Rhône 24-in-1 Air Fryer Toaster Oven

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

## WHAT'S IN THE Box

---

Upon unboxing your Paris Rhône Air Fryer Toaster Oven, please ensure all components listed below are present and in good condition.

- 1 x Paris Rhône Air Fryer Toaster Oven
- 1 x Crumb Tray
- 1 x Wire Rack
- 1 x Air Fry Basket
- 1 x Sheet Pan
- 1 x Cookbook
- 1 x Magnetic Cheat Sheet
- 1 x Quick Start Guide
- 1 x User Manual (this document)

# What's In The Box



Figure 2: Included Components

## PRODUCT OVERVIEW

The Paris Rhône Air Fryer Toaster Oven is designed for efficiency and versatility in your kitchen.

## Key Features:

- **85% Less Oil:** The inner heating tube and high-speed fan generate 360-degree hot air circulation, allowing for rapid and even cooking with significantly less oil than traditional deep frying.
- **Ultimate Versatility:** Equipped with 24 intelligent presets, this oven handles various tasks including air frying, roasting, slow cooking, baking, and dehydrating.
- **Intuitive Operation:** Features a digital touch panel with LED display and a control knob for easy selection of cooking menus, functions, temperature adjustments (100°F to 450°F), and customizable cooking times (up to 72 hours).
- **26QT Extra Large Capacity:** Designed to fit a 12-inch pizza, 12 bagels, 6 slices of toast, or a whole chicken, making it ideal for family meals.
- **Crisp Control Technology:** Precision-controlled temperature, heat source, and increased airflow ensure optimal cooking performance and crispy results.
- **Easy Cleaning & Maintenance:** Constructed with a stainless steel housing that is easy to wipe clean, and all included accessories are dishwasher safe.

# Extra-Large Capacity

Perfectly fits a 12-inch pizza or 6 slices of toast



26QT



12" Pizza



6 Pcs Toaster



1kg Fries



Figure 3: Extra-Large Capacity for Family Meals

# Easy Operation

Accurately control with the knob and one-touch panel



Touch panel



Knob



Figure 4: Intuitive Digital Control Panel

# Uniform & Efficient Heating

The top-mounted fan ensures even heat convention



Figure 5: Uniform & Efficient Heating Technology

# Chef-Crafted Recipes

Stay inspired with the 100-recipe cookbook and magnetic cheat sheet

**FRENCH FRIES**

**PREP TIME**  
10 Min

**SERVES**  
2

**INGREDIENTS**

- 2 medium potatoes, 12 oz, washed and dried
- 2 tsp olive oil
- 1/4 tsp kosher salt
- 1/4 tsp garlic powder
- Fresh cracked black pepper, to taste
- Cooking spray

**DIRECTIONS**

- SLICE each potato into even  $\frac{1}{4}$ -inch thick slices.
- COVER potatoes with water and let sit for 5 minutes to release excess starches.
- DRAIN and cover with boiling water. Let sit for 10 minutes.
- DRAIN potatoes and transfer onto some paper towels. Blot off the excess water and let cool completely, at least 10 minutes.
- PREHEAT the air fryer oven to 380°F.
- TOSS the potatoes and oil in a medium bowl. Season with salt, garlic powder and black pepper, to taste, toss to coat.
- PLACE in a single layer without overlapping or crowding.
- COOK for 20 to 25 minutes, until golden brown and crisp. Serve with your favorite dipping sauce.



Figure 6: Chef-Crafted Recipes and Magnetic Cheat Sheet

# 85% Less Oil

Enjoy a crisp and healthy crunch with 85% less oil than deep-fried foods



Figure 7: Healthier Cooking with 85% Less Oil

## SETUP

- Unpacking:** Carefully remove all packaging materials, including any protective films or inserts from inside the oven. Keep the packaging for future storage or transport if needed.

- Placement:** Place the appliance on a stable, flat, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space on all sides and above the oven for proper ventilation. Do not place it near flammable materials or under cabinets.
- Initial Cleaning:** Before first use, wipe down the exterior with a damp cloth. Wash all removable accessories (air fry basket, sheet pan, wire rack, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
- First Use (Burn-in):** To eliminate any manufacturing odors, operate the oven empty for approximately 15-20 minutes at 400°F (200°C). Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during the first use.
- Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (110 Volts).

## OPERATING INSTRUCTIONS

Your Paris Rhône Air Fryer Toaster Oven features a user-friendly digital interface and a control knob for precise cooking.

### Control Panel Overview:

The top panel features an LED display and various touch controls and a rotary knob.

- LED Display:** Shows temperature, time, and selected functions.
- Control Knob:** Used to adjust temperature, time, and navigate through presets. Press to confirm selection.
- Preset Buttons:** Dedicated touch buttons for common cooking functions like Air Fry, Toast, Bake, Roast, Broil, Dehydrate, Ferment, Keep Warm, Slow Cook, and more.
- Start/Pause Button:** Initiates or pauses the cooking cycle.
- Light Button:** Turns the interior oven light on or off.

### General Operation:

- Power On:** Plug in the appliance. The display will illuminate.
- Select Function:** Use the control knob or touch the desired preset button (e.g., "Air Fry", "Bake").
- Adjust Temperature/Time:** Once a function is selected, the default temperature and time will appear. Rotate the control knob to adjust the temperature (100°F to 450°F) and press the knob to switch to time adjustment. Rotate again to set the cooking time (up to 72 hours for certain functions like dehydrate/slow cook).
- Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
- Pause/Resume:** Press the Start/Pause button during cooking to pause. Press again to resume.
- End Cooking:** The oven will beep when the cooking cycle is complete. You can also press and hold the Start/Pause button to stop cooking manually.

### Using Accessories:

- Air Fry Basket:** Ideal for air frying foods like fries, chicken wings, and vegetables. Place food in the basket and insert into the oven on the middle rack position.
- Sheet Pan:** Use for baking cookies, roasting vegetables, or catching drips from the air fry basket.
- Wire Rack:** Suitable for toasting bread, bagels, or placing oven-safe dishes.
- Crumb Tray:** Always keep the crumb tray in place at the bottom of the oven to collect crumbs and drips, making cleanup easier.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your appliance and ensure optimal performance.

- Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they can

scratch the surface.

3. **Interior:** For the interior, wipe down with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used. Ensure the interior is dry before next use.
4. **Crumb Tray:** Remove the crumb tray regularly and discard collected crumbs. Wash with warm, soapy water, rinse, and dry thoroughly.
5. **Accessories:** The air fry basket, sheet pan, and wire rack are dishwasher safe for convenient cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge.
6. **Storage:** When not in use, store the oven in a clean, dry place.



Figure 8: Easy Interior Cleaning

## TROUBLESHOOTING

If you encounter any issues with your Paris Rhône Air Fryer Toaster Oven, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the basket; incorrect temperature/time; food not flipped/shaken.	Do not overcrowd the air fry basket. Adjust temperature and time as needed. For best results, shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the oven interior and accessories thoroughly after each use. For high-fat foods, place a small amount of water in the sheet pan below the air fry basket to reduce smoke.
Appliance emits a strange odor during first use.	Normal burn-in odor from manufacturing residues.	This is normal. Ensure adequate ventilation during the first use. The odor will dissipate after a few uses.
Food is not crispy.	Too much oil; overcrowding; insufficient cooking time/temperature.	Use minimal oil. Do not overcrowd. Increase cooking time or temperature slightly. Ensure food is dry before air frying.

If the problem persists after trying these solutions, please contact Paris Rhône customer support for assistance.

## SPECIFICATIONS

Feature	Detail
Brand	PARIS RHÔNE
Model Name	PE-AF006
Product Dimensions	16"D x 17"W x 16"H
Color	Black
Capacity	26 Quarts
Material	Stainless Steel
Output Wattage	1700 Watts
Voltage	110 Volts
Control Method	Touch, Mechanical Knob
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	450 Degrees Fahrenheit
Dishwasher Safe Accessories	Yes
Air Frying Technology	360-degree Hot Air Circulation

## WARRANTY AND SUPPORT

The Paris Rhône Air Fryer Toaster Oven comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, warranty claims, or any questions regarding your appliance, please contact Paris Rhône customer service.

- Website:** [www.parisrhone.com](http://www.parisrhone.com) (Please check the official website for the most up-to-date contact information.)
- Email:** Refer to your Quick Start Guide or the official website for customer support email.
- Phone:** Refer to your Quick Start Guide or the official website for customer support phone number.

Please have your model number (PE-AF006) and purchase date ready when contacting support.

[\[pdf\] User Manual Troubleshooting Guide Warranty](#)



PE AF006 20211130 Rev 1 0 EN OUT Smokeless Indoor Grill with Air Fryer Paris Rhône Electric Combo 12 in for Griddle Slow Cook Broil Bake Crisp Roast Dehydrate Dual Heating Elements Easy Knob Control PE BG002 User Manual PARIS RHÔNE D16atMzHTKL m media amazon images I ||| Questions or Concerns support parisrhone.co PE-BG002 KNOWING YOUR AIR FRYER GRILL USING YOUR AIR FRYER GRILL CLEANING AND MAINTENANCE TROUBLESHOOTING WARRANTY INTENDED USE This appliance is not intended for use by persons including children with reduced physical, sensory or mental cap... lang:en score:21 filesize: 8.92 M page\_count: 9 document date: 2023-03-08



[\[pdf\] User Manual](#)

PE AF006 20211125 Rev 1 0 EN OUT Toaster Paris Rhône 2 Slice Extra Wide Long Slot Retro with Easy View Window 6 Browning Levels to Clean Auto Shutoff Stainless Steel Silver for Bagels Waffles BM001 User Manual PARIS RHÔNE C1Eq Bu6h2L m media amazon images I ||| ... lang:en score:21 filesize: 4.63 M page\_count: 13 document date: 2021-11-30