



[Manuals.plus](#) /

> [UYODM](#) /

> UYODM Wall Mount Holder for SimpliSafe Outdoor Security Camera Instruction Manual

UYODM 63

UYODM Wall Mount Holder for SimpliSafe Outdoor Security Camera Instruction Manual

Model: 63 | Brand: UYODM

INTRODUCTION

The UYODM Wall Mount Holder is designed to provide a secure and adjustable mounting solution for your SimpliSafe Outdoor Security Camera. Constructed from durable Aluminum Alloy and ABS material, this bracket is built for both indoor and outdoor use, offering stability and resistance to rust and water. Its unique design allows for 360° rotation and 90° tilt, enabling optimal camera positioning to capture various viewing angles.

This manual provides detailed instructions for the installation, operation, and maintenance of your UYODM Wall Mount Holder.

SAFETY INFORMATION

- Always ensure the mounting surface is strong enough to support the weight of the camera and the mount.
- Use appropriate tools and safety gear during installation, including eye protection.
- When drilling, be aware of any hidden electrical wires or plumbing.
- Do not overtighten screws, as this may damage the mount or the mounting surface.
- Keep small parts and packaging materials away from children.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x UYODM Wall Mount Holders
- 2 sets of mounting screws (screws and wall anchors)

PACKAGE

2 pack wall mount

2 sets of screws



NOTE: All Camera Not Included

Figure 1: Contents of the UYODM Wall Mount Holder package.

Note: SimpliSafe Outdoor Security Camera is not included.

SETUP AND INSTALLATION

Follow these steps to install your UYODM Wall Mount Holder:

1. **Choose a Mounting Location:** Select a flat surface such as a wall, ceiling, wooden board, or desk. Ensure the location provides a clear view for your camera and is within reach for installation.
2. **Mark Drill Holes:** Place the base of the mount against the chosen surface and mark the three screw hole positions with a pencil.
3. **Drill Holes:** Using an appropriate drill bit for your surface type, drill three holes at the marked positions. If mounting into drywall or masonry, insert the provided wall anchors.
4. **Secure the Mount Base:** Align the mount base with the drilled holes and secure it firmly using the provided screws.

5. **Attach the Camera:** The mount features a 1/4-inch screw thread at the top. Align your SimpliSafe Outdoor Security Camera's mounting hole with this thread and screw the camera onto the mount until secure.

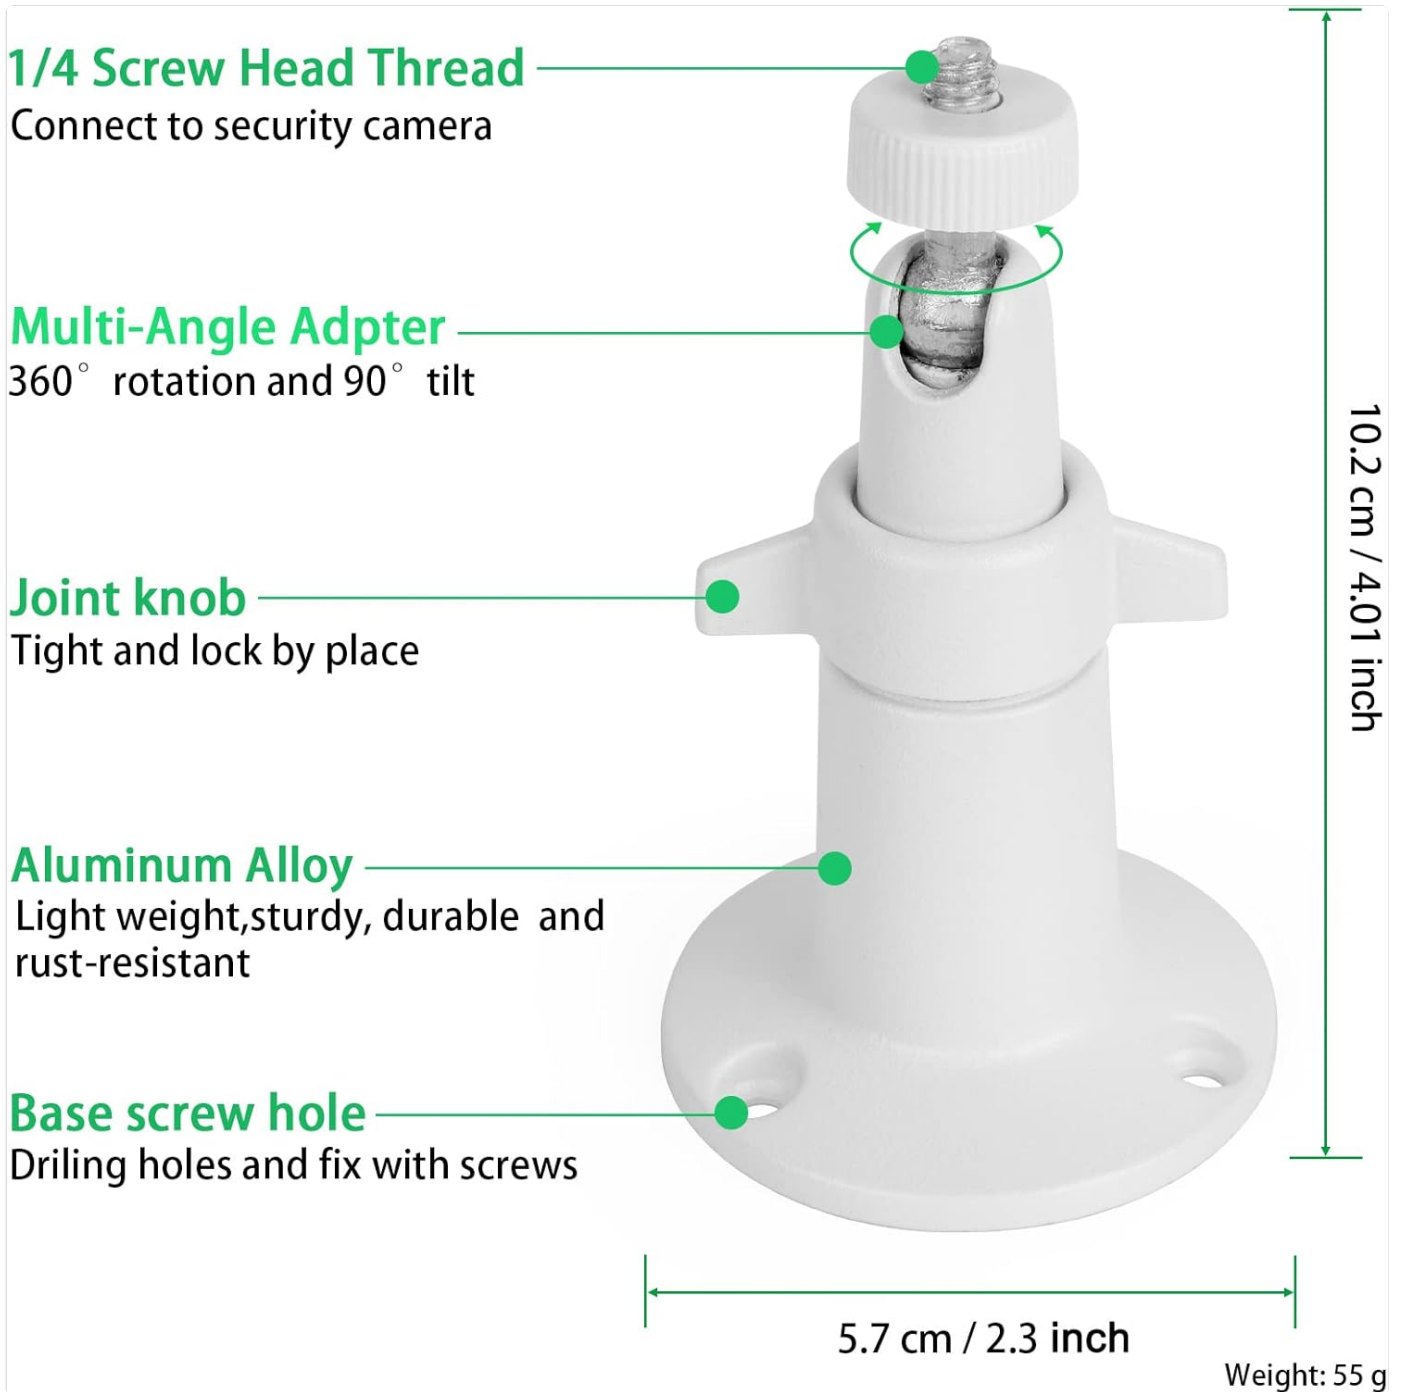


Figure 2: Detailed view of the mount components and dimensions.



Figure 3: Example of the camera mounted on a wall.



Figure 4: Example of the camera mounted on a ceiling.

OPERATING AND ADJUSTMENT

The YJODM Wall Mount Holder features a metal ball head that allows for flexible camera positioning:

- **Angle Adjustment:** The ball joint can be adjusted for 360° rotation and 90° tilt. Loosen the joint knob slightly to adjust the camera to your desired angle.
- **Secure Position:** Once the camera is in the desired position, tighten the joint knob firmly to lock the camera in place. This ensures the camera remains stable and does not shift due to wind or vibrations.



Figure 5: The mount's adjustable ball head allows for precise camera positioning.

MAINTENANCE

To ensure the longevity and optimal performance of your UYODM Wall Mount Holder:

- **Cleaning:** Wipe the mount periodically with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly check the mounting screws and the joint knob to ensure they remain tight and secure. Retighten if necessary.
- **Weather Exposure:** While designed for outdoor use, extreme weather conditions may require more frequent inspection.



Figure 6: The mount is designed to withstand outdoor elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mount feels loose after installation.	Screws are not fully tightened or wall anchors are not properly seated.	Ensure screws are tightened securely. If using wall anchors, verify they are fully expanded in the wall. Consider using larger anchors or mounting to a stud/joist if the surface is weak.
Camera angle shifts after adjustment.	Joint knob is not tightened sufficiently.	Firmly tighten the joint knob after adjusting the camera to the desired angle.

Problem	Possible Cause	Solution
Camera does not fit the mount's screw thread.	Camera uses a different screw thread size.	This mount is designed for cameras with a standard 1/4-inch screw thread. Verify your camera's specifications.

SPECIFICATIONS

Feature	Detail
Brand	UYODM
Model Number	63
Material	Aluminum Alloy, ABS
Color	White
Mounting Type	Wall Mount
Adjustability	360° Rotation, 90° Tilt
Screw Thread	1/4 inch
Item Weight	4.6 ounces (approx. 0.13 kg)
Dimensions (Mount)	4.01 inches (10.2 cm) length, 2.3 inches (5.7 cm) width
Package Quantity	2 mounts per package
UPC	717981318696

WARRANTY AND SUPPORT

For any questions regarding the UYODM Wall Mount Holder, including warranty information or technical support, please contact the manufacturer or seller directly through your purchase platform. Please refer to your purchase receipt or the product packaging for specific contact details.

You can also visit the official UYODM store for more information: [UYODM Store on Amazon](#).