

## AVERA FE02

# AVERA FE02 2.5 Liter Electric Air Fryer Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing the AVERA FE02 2.5 Liter Electric Air Fryer. This appliance is designed to provide a healthier and more convenient way to cook your favorite meals with little to no oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.

The AVERA FE02 utilizes 360° hot air circulation technology to cook food evenly, resulting in crispy and juicy dishes with up to 98% less oil compared to traditional deep frying methods. Its compact design makes it suitable for any kitchen space, and its user-friendly controls simplify meal preparation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING: To prevent electric shock, fire, or injury, always follow basic safety precautions when using electrical appliances.**

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance features an automatic shut-off function for safety.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your AVERA FE02 Air Fryer:

- Main Unit Housing
- Control Panel (Temperature and Timer Knobs)
- Removable Frying Basket
- Cool-Touch Handle
- Air Inlet and Outlet Vents



Figure 3.1: Key components of the AVERA FE02 Air Fryer, showing the timer and temperature control knobs, and the removable frying basket.

## EQUIPA TU COCINA con AVERA



Complementa tu compra con nuestra

### Cafetera para espressos CAF03 y disfruta de tu café favorito.

\*Imagen ilustrativa, la cafetera se vende por separado

Figure 3.2: Dimensions of the AVERA FE02 Air Fryer (Width: 32.6 cm, Depth: 24.5 cm, Height: 28.3 cm).

## 4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Before first use, clean the frying basket and any removable parts with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm / 4 inches) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Your browser does not support the video tag.

Video 4.1: An unboxing video demonstrating the initial setup and components of a similar air fryer. This video provides a visual guide to unpacking and preparing your appliance for first use.

## 5. OPERATING INSTRUCTIONS

The AVERA FE02 Air Fryer is designed for simple and efficient cooking. Follow these steps for optimal results:

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks securely into place.
3. **Set Temperature:** Turn the temperature control knob to your desired cooking temperature, ranging from 80°C to 200°C (176°F to 392°F).
4. **Set Timer:** Turn the timer control knob to the desired cooking time, up to 20 minutes. The appliance will automatically begin heating once the timer is set.
5. **Cooking Process:** The air fryer will heat up and circulate hot air. For even cooking, especially for larger quantities or certain foods like fries, shake the basket halfway through the cooking time. To do this, carefully pull out the basket using the cool-touch handle, shake the contents, and then reinsert the basket. The appliance will resume cooking.
6. **Completion:** Once the timer reaches zero, the appliance will automatically shut off and a bell will sound. Carefully remove the basket and transfer your cooked food.

#### **Cooking Tips:**

- For extra crispiness, lightly brush or spray food with a small amount of oil.
- Smaller pieces of food generally require shorter cooking times.
- The air fryer is versatile and can prepare a variety of dishes including fries, steaks, fish, shrimp, chicken, cakes, and roasted vegetables.



**FREIDORA DE AIRE DE 2.5 L | FE02**

 <p>Con carcasa y mango de taco frío que evita quemaduras</p>	 <p>Cocina con hasta 98% menos aceite</p>	 <p>Certificación oficial de eficiencia energética</p>
 <p>Capacidad de 2 a 3 porciones</p>	 <p>1 año de garantía</p>	 <p>Soportes antideslizantes y revestimientos antiadherentes</p>

Figure 5.1: The AVERA FE02 Air Fryer in operation, showcasing its capacity to cook items like chicken wings to a crispy finish.



# COCINA CON MENOS GRASA

Freidora de aire 2.5 L | FE02

Figure 5.2: Emphasizing the health benefits of the AVERA FE02 Air Fryer, allowing you to cook with significantly less fat.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The frying basket and other removable parts are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Interior:** Clean the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
5. **Storage:** Ensure all parts are dry before storing the air fryer in a cool, dry place.



Piezas aptas para lavavajillas.



Sistema de perillas.



Partes de plástico resistente a altas temperaturas al interior hasta 280 °C.



Circuitos de doble protección para vigilar la fritura en cualquier momento.



Timer de hasta 20 minutos.



## Características

### Freidora de aire 2.5 L | FE02

Figure 6.1: Features of the AVERA FE02 Air Fryer, including dishwasher-safe parts for easy cleaning.

## 7. TROUBLESHOOTING

If you encounter any issues with your AVERA FE02 Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Timer not set; Basket not fully inserted.	Ensure the power cord is securely plugged into a grounded outlet. Set the timer. Push the frying basket completely into the unit.
Food is not cooked evenly.	Basket is overfilled; Food not shaken during cooking.	Do not overfill the basket. Shake the basket halfway through the cooking process.
Food is not crispy.	Not enough oil (if applicable); Temperature too low; Cooking time too short.	Lightly spray or brush food with oil. Increase temperature or cooking time as needed.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; Cooking fatty foods.	Clean the basket and interior thoroughly after each use. This is normal when cooking very fatty foods.

## 8. SPECIFICATIONS

Feature	Detail
Brand	AVERA
Model	FE02
Color	Silver
Capacity	2.5 Liters
Power	1200 Watts
Material	Plastic, Stainless Steel, or Aluminum
Special Features	Timer, Automatic Shut-off
Product Weight	4.7 Kilograms
Product Dimensions (W x D x H)	32.6 cm x 24.5 cm x 28.3 cm (approx.)

## 9. WARRANTY AND SUPPORT

Your AVERA FE02 Electric Air Fryer comes with a **1-year warranty** from the date of purchase, covering manufacturing defects under normal use.

For technical support, warranty claims, or any questions regarding your product, please contact AVERA customer service. Refer to the contact information provided with your purchase documentation or visit the official AVERA website.

AVERA is a Mexican brand committed to providing quality home and kitchen solutions. Your purchase also supports reforestation programs in Chiapas.



Figure 9.1: AVERA's commitment to customer satisfaction and environmental responsibility.

