

[Manuals.plus](#) /

› [ENWShop](#) /

› ENWShop G10 Replacement Voice Remote Control User Manual

ENWShop g10

ENWShop G10 Replacement Voice Remote Control User Manual

Model: g10

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ENWShop G10 Replacement Voice Remote Control. This remote is designed to be compatible with various Google TV streaming devices, including Onn Stick, Onn Streaming Box, and select Mecool models (KM2, KM7, KT1, KM6, KM3, KM9 PRO, KM1, KD2, KD3), as well as NEBULA 4K and EKO 4K Streaming Dongles.

Please read this manual carefully to ensure proper use and to maximize your remote control's functionality.

PRODUCT OVERVIEW

The ENWShop G10 remote is a compact and ergonomic device designed for intuitive control of your compatible streaming media player. It features dedicated buttons for power, navigation, voice commands, volume, and popular streaming applications.

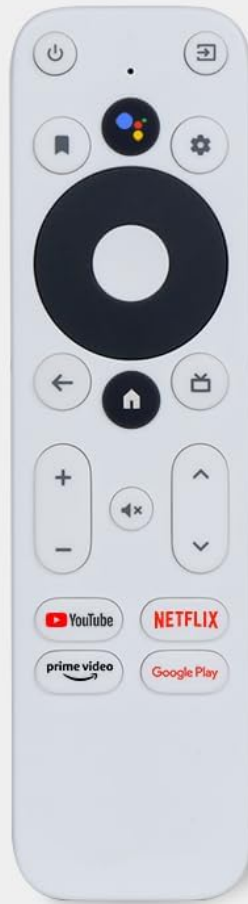


Image 1: Front view of the ENWSShop G10 Replacement Voice Remote Control. The remote is white with black buttons, featuring a circular navigation pad, power button, Google Assistant button, settings button, back button, home button, live TV button, volume controls, mute button, and dedicated app shortcut buttons for YouTube, Netflix, Prime Video, and Google Play.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.

2. Pairing the Remote Control

After inserting batteries, the remote should automatically enter pairing mode. If not, or if you need to re-pair:

1. Ensure your Google TV streaming device is powered on and visible on your screen.
2. On the ENWSShop G10 remote, simultaneously press and hold the **Back button** (left arrow icon) and the **Home button** (house icon) for a few seconds.
3. The remote's indicator light may flash to confirm it is in pairing mode.
4. Navigate to the accessory settings on your Google TV device and select the ENWSShop G10 remote when it appears in the list of available devices.
5. Follow any on-screen prompts to complete the pairing process.

Note: Specific pairing steps may vary slightly depending on your Google TV device model. Refer to your device's manual for detailed instructions if needed.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your ENWSShop G10 remote control:

- **Power Button** (circle with vertical line): Turns your device on or off.
- **Google Assistant Button** (colored dots icon): Activates voice commands for search and control.
- **Navigation Pad** (large black circle): Use the directional arrows to navigate menus and content. The center button acts as "Select" or "OK".
- **Back Button** (left arrow icon): Returns to the previous screen or menu.
- **Home Button** (house icon): Returns to the main home screen of your Google TV device.
- **Live TV Button** (TV screen icon): Accesses live TV content if supported by your device and services.
- **Settings Button** (gear icon): Opens the device settings menu. *Note: On some devices, this button may not function directly. You might need to hold the center select button for a few seconds to access settings.*
- **Volume Up/Down Buttons** (+ / -): Adjusts the audio volume.
- **Mute Button** (speaker with cross icon): Mutes or unmutes the audio.
- **App Shortcut Buttons** (YouTube, Netflix, Prime Video, Google Play): Provides quick access to these specific applications. *Important: These app shortcuts are not compatible with Chromecast and may not function on all Google TV devices or configurations.*

MAINTENANCE

Battery Replacement

When the remote's performance degrades or it stops responding, replace the batteries. Always use new AAA batteries and dispose of old batteries responsibly according to local regulations.

Cleaning

To clean the remote, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and your streaming device.
 - Re-pair the remote with your device (refer to "Pairing the Remote Control" section).

- **Voice control not working:**

- Ensure the remote is properly paired and within range of your device.
- Verify that Google Assistant is enabled and configured on your Google TV device.
- Check your device's internet connection, as voice commands often require online processing.

- **App shortcut buttons (YouTube, Netflix, etc.) not working:**

- These buttons may not be universally compatible with all Google TV devices or specific configurations, especially with Chromecast.
- Ensure the respective apps are installed and updated on your streaming device.

- **Settings button not opening settings:**

- On some devices, the dedicated settings button may not be mapped. Try holding the center "Select" button on the navigation pad for a few seconds to access settings.

SPECIFICATIONS

Model Number	g10
Brand	ENWShop
Compatible Devices	Google TV Streaming Boxes, Stick and TVs, All Onn Stick, All Onn Streaming Box, Mecool (KM2, KM7, KT1, KM6, KM3, KM9 PRO, KM1, KD2, KD3), NEBULA 4K Streaming Dongle, EKO 4K Streaming Dongle
Special Feature	Ergonomic
Color	Black, White
Item Weight	1.76 ounces
Package Dimensions	5.51 x 1.5 x 0.75 inches

© 2023 ENWShop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question