

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [OXO](#) /
- > [OXO Good Grips Stainless Steel Garlic Press Instruction Manual](#)

OXO 11327300

OXO Good Grips Stainless Steel Garlic Press Instruction Manual

Model: 11327300

PRODUCT OVERVIEW

The OXO Good Grips Stainless Steel Garlic Press is designed for efficient and mess-free garlic crushing. It features a large-capacity hopper and comfortable handles for ease of use, along with a stainless steel construction for durability and simple cleaning.





Image: The OXO Good Grips Stainless Steel Garlic Press, showcasing its ergonomic design and stainless steel components.

SETUP AND FIRST USE

The OXO Good Grips Garlic Press requires minimal setup. Follow these steps before first use:

1. **Unpacking:** Carefully remove the garlic press from its packaging.
2. **Initial Cleaning:** Before first use, wash the garlic press thoroughly with warm, soapy water. Rinse completely and dry. The press is also dishwasher safe.

OPERATING INSTRUCTIONS

Using your OXO Good Grips Garlic Press is straightforward:

1. **Prepare Garlic:** Peel the garlic cloves. The large-capacity hopper can accommodate multiple cloves at once.

2. **Insert Garlic:** Open the handles of the garlic press and place the peeled garlic cloves into the stainless steel hopper.
3. **Press Garlic:** Firmly squeeze the soft, comfortable handles together. The efficient hole pattern will press the garlic through, directly into your pot or bowl.



Image: The large-capacity hopper of the garlic press, shown holding multiple garlic cloves ready for pressing.



Image: A hand demonstrating the pressing action, with finely crushed garlic emerging from the press.

CARE AND MAINTENANCE

Proper care ensures the longevity of your OXO Good Grips Garlic Press:

- **Cleaning:** After each use, empty the hopper. The stainless steel swing basket can be easily opened for thorough cleaning. The garlic press is dishwasher safe for convenient cleaning.

Large-capacity hopper



Image: The garlic press with its swing basket opened, illustrating the ease of emptying and cleaning the unit.

- **Storage:** Store the garlic press in a dry place when not in use.
- **Material:** Made from durable stainless steel and plastic.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Garlic not fully pressed.	Too many cloves, or cloves are too large.	Reduce the number of cloves, or cut larger cloves into smaller pieces before pressing. Apply firm, even pressure.
Difficulty cleaning garlic residue.	Garlic residue dried in holes.	Clean immediately after use. Utilize the swing basket for easier access to the holes. Dishwasher cleaning is recommended for thoroughness. A small brush can help dislodge stubborn pieces.

PRODUCT SPECIFICATIONS

Brand: OXO

Model Number: 11327300

Material: Plastic, Stainless Steel

Color: Black

Product Dimensions: 10.5"L x 4.5"W

Item Weight: 6.4 Ounces

Dishwasher Safe: Yes

UPC: 840097701639

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official OXO website or contact their customer service directly. Details are typically provided with the product packaging or on the manufacturer's official website.

Visit the official OXO Store for more information:[OXO Store](#)