

[manuals.plus](#) /

- › [AR Blue Clean](#) /
- › [AR Blue Clean MAXX 3000 Electric Pressure Washer User Manual](#)

AR Blue Clean MAXX3000-BNDLNC

AR Blue Clean MAXX 3000 Electric Pressure Washer User Manual

Model: MAXX3000-BNDLNC

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your AR Blue Clean MAXX 3000 Electric Pressure Washer. The MAXX3000-BNDLNC bundle includes the MAXX 3000 Pressure Washer and a 12-inch Quick Connect Extension Lance, designed for various exterior cleaning tasks. Please read this manual thoroughly before operating the unit.



Image: The AR Blue Clean MAXX 3000 Electric Pressure Washer shown with its complete set of accessories, including the main unit, trigger gun, high-pressure hose, extension lance, foam cannon, and various nozzles.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Pressure washers generate high-pressure water streams that can cause serious injury if not handled properly.

- Always wear appropriate eye protection (safety glasses or goggles) when operating the pressure washer.
- Do not direct the water stream at people, pets, or electrical devices.
- Ensure all connections are secure before starting the unit.
- Operate the pressure washer on a stable, level surface.
- Keep children and bystanders away from the operating area.
- Disconnect the power supply before performing any maintenance or cleaning.
- Do not operate the unit if the power cord or high-pressure hose is damaged.
- Use only manufacturer-approved accessories and replacement parts.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, contact customer support.

- AR Blue Clean MAXX 3000 Pressure Washer Unit
- Trigger Gun
- High-Pressure Hose (25 ft)
- Standard Lance/Wand
- 12-inch Quick Connect Extension Lance
- Quick Connect Nozzles (various degrees)
- High-Pressure Foam Cannon (25 oz)

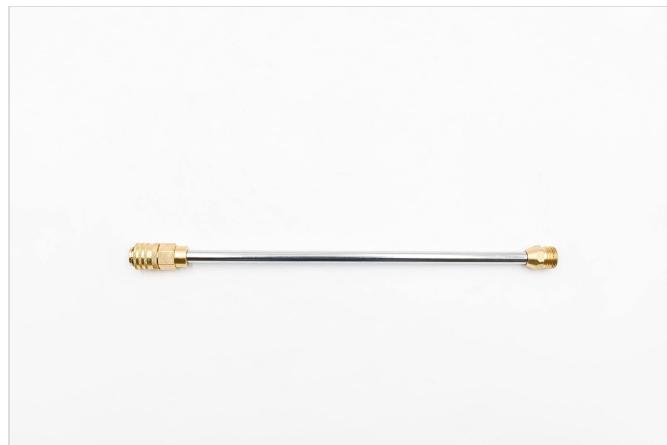


Image: The ergonomic trigger gun for controlling water flow and pressure.



Image: The 25-foot steel-armed high-pressure hose, designed for durability and flexibility.



Image: The standard lance/wand, which connects to the trigger gun.



Image: The 12-inch Quick Connect Extension Lance, providing additional reach for cleaning.



Image: The 25 oz high-pressure foam cannon for applying detergents.

SETUP INSTRUCTIONS

- 1. Unpack the Unit:** Carefully remove all components from the packaging.
- 2. Assemble the Handle:** Attach the handle to the main unit if it is not pre-assembled. Ensure it clicks securely into place.
- 3. Connect the High-Pressure Hose:**
 - Connect one end of the high-pressure hose to the pressure outlet on the main unit. Tighten securely by hand.
 - Connect the other end of the high-pressure hose to the inlet on the trigger gun. Tighten securely.
- 4. Attach the Lance/Wand:** Insert the desired lance (standard or extension) into the quick-connect fitting on the trigger gun until it clicks into place.



Image: Close-up of a quick-connect nozzle being attached to the lance.

- 5. Connect Water Supply:**
 - Attach a garden hose (minimum 5/8 inch diameter) to the water inlet on the pressure washer. Ensure the connection is tight to prevent leaks.
 - Turn on the water supply completely.
 - Squeeze the trigger gun to purge air from the system until a steady stream of water emerges. This prevents air pockets from damaging the pump.
- 6. Connect Power:** Plug the power cord into a grounded 120V AC outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI).



Image: The AR Blue Clean MAXX 3000 Pressure Washer fully assembled with the trigger gun and lance attached, ready for operation.

OPERATING INSTRUCTIONS

- Select a Nozzle:** Choose the appropriate quick-connect nozzle for your cleaning task. Different nozzles provide different spray patterns and pressures.
 - 0° (Red): Pin-point jet for tough spots (use with extreme caution).
 - 15° (Yellow): Narrow fan for intense cleaning.
 - 25° (Green): Medium fan for general cleaning.
 - 40° (White): Wide fan for gentle cleaning.
 - Soap (Black): Low-pressure stream for applying detergent.
- Start the Pressure Washer:** Turn the power switch to the "ON" position. The motor will start when the trigger is squeezed and stop when released (Total Stop System).
- Begin Cleaning:** Hold the trigger gun firmly with both hands. Start spraying a few feet away from the surface and gradually move closer until the desired cleaning effect is achieved. Maintain a consistent distance for even cleaning.
- Applying Detergent (Optional):**
 - Fill the foam cannon with pressure washer safe detergent.
 - Attach the foam cannon to the trigger gun.
 - Ensure the black soap nozzle is installed.
 - Squeeze the trigger to apply detergent at low pressure.
 - Allow detergent to soak according to manufacturer's instructions, then rinse with a high-pressure nozzle.
- Shutting Down:**
 - Turn off the power switch.
 - Turn off the water supply.
 - Squeeze the trigger gun to release any remaining pressure in the system.
 - Disconnect the garden hose and high-pressure hose.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- After Each Use:**
 - Drain all water from the pump, hoses, and accessories to prevent freezing in cold weather.
 - Clean the nozzles and clear any blockages.
 - Wipe down the unit with a damp cloth.
- Water Inlet Filter:** Regularly inspect and clean the water inlet filter to prevent debris from entering the pump.
- Storage:** Store the pressure washer in a dry, frost-free area. Coil the high-pressure hose and power cord neatly.

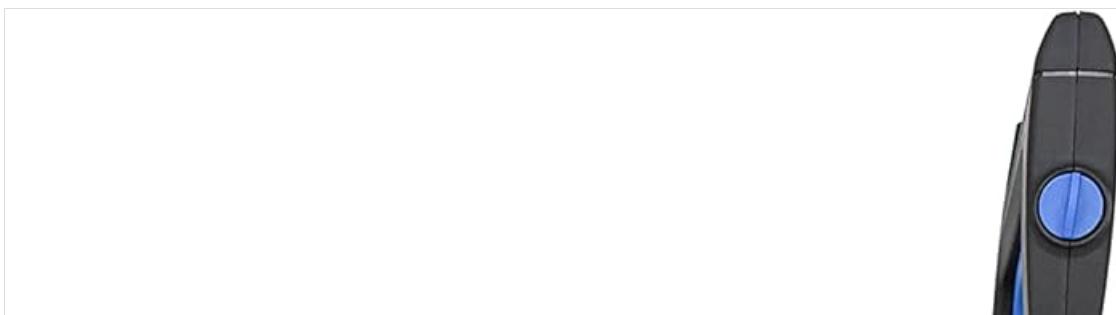




Image: Rear view of the pressure washer demonstrating integrated storage for the high-pressure hose and power cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply; GFCI tripped; Power switch off.	Check power connection; Reset GFCI; Turn power switch ON.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump.	Ensure full water flow; Clean nozzle; Purge air from system.
Water leaks	Loose connections; Damaged O-rings.	Tighten all connections; Replace damaged O-rings.
Motor stops frequently	Overheating; Low voltage.	Allow unit to cool; Use a dedicated circuit.

SPECIFICATIONS

Model: MAXX3000-BNDLNC

Maximum Pressure: 3000 PSI

Maximum Flow Rate: 1.3 GPM

Power Source: Corded Electric

Hose Length: 25 Feet

Product Dimensions: 53.34 x 45.72 x 88.9 cm (20.9 x 18 x 35 inches)

Weight: 27.67 kg (61 lbs)

Manufacturer: AR North America



Max 3000 PSI



Brushless Induction Motor with Wobble Plate Pump

WARRANTY AND SUPPORT

The AR Blue Clean MAXX 3000 Electric Pressure Washer comes with a **2-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact AR North America customer service. Keep your proof of purchase for warranty validation.



Your product is backed by a 2-year warranty.

© 2024 AR Blue Clean. All rights reserved.

Related Documents - MAXX3000-BNDLNC

Cover image of the AR Blue Clean Maxx 2300 Electric Pressure Washer User Manual, showing the product image and '2300 PSI' text.	<p>AR Blue Clean Maxx 2300 Electric Pressure Washer User Manual User manual for the AR Blue Clean Maxx 2300 Electric Pressure Washer, detailing specifications, operation, maintenance, and safety instructions for efficient cleaning.</p>
Cover image of the AR Blue Clean 2300 PSI Electric Pressure Washer Assembly, Care, and Use Instructions, showing the product image and '2300 PSI' text.	<p>AR Blue Clean 2300 PSI Electric Pressure Washer Assembly, Care, and Use Instructions Comprehensive guide for the AR Blue Clean 2300 PSI Electric Pressure Washer (Model BC2N1HSB), covering assembly, operation, maintenance, and safety precautions. Includes product specifications and troubleshooting tips.</p>
Cover image of the AR620 & AR630 Electric Pressure Washer: Assembly, Care, and Use Manual, showing the product image and 'AR620 & AR630' text.	<p>AR620 & AR630 Electric Pressure Washer: Assembly, Care, and Use Manual This manual provides comprehensive instructions for the AR Blue Clean AR620 and AR630 electric pressure washers, covering assembly, safety guidelines, operating procedures, maintenance tips, and troubleshooting solutions. Learn how to safely and effectively use and maintain your pressure washer.</p>
Cover image of the AR620 & AR630 Electric Pressure Washer: Assembly, Care, and Use Instructions, showing the product image and 'AR620 & AR630' text.	<p>AR620 & AR630 Electric Pressure Washer: Assembly, Care, and Use Instructions Comprehensive guide for AR620 and AR630 series electric pressure washers by AR Blue Clean, covering assembly, safety, operation, maintenance, troubleshooting, and detailed parts lists. Includes specifications and customer support information.</p>

 <p>630 SERIES  Electric Pressure Washer</p> <p>ASSEMBLY, CARE AND USE INSTRUCTIONS FOR COLD WATER HIGH PRESSURE WASHERS</p> <p>WARNING This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov</p> <p>ATTENTION This product is not designed for use with hot water.</p> <p>THE PRODUCT IS SUPPLIED WITH A GROUNDING CABLE. USE A GROUNDED OUTLET.</p> <p>ATTENTION Use care! Do not touch the hot water spray.</p> <p>Questions, problems, missing parts? Call 1-800-343-1111 Or visit www.arblueclean.com Or write to: AR Blue Clean, Inc., 1000 10th Street, Suite 100, Santa Barbara, CA 93101</p> <p>97944-NZ</p>	<p>AR Blue Clean 630 Series Electric Pressure Washer: Assembly, Care, and Use Manual</p> <p>Comprehensive guide for the AR Blue Clean 630 Series electric pressure washer, covering assembly, operation, safety, maintenance, troubleshooting, and warranty information for models 630, 630 HW, 632, 635, and 635 HW.</p>
 <p>630 SERIES  Electric Pressure Washer</p> <p>ASSEMBLY, CARE AND USE INSTRUCTIONS</p> <p>WARNING This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov</p> <p>ATTENTION This product is not designed for use with hot water.</p> <p>THE PRODUCT IS SUPPLIED WITH A GROUNDING CABLE. USE A GROUNDED OUTLET.</p> <p>ATTENTION Use care! Do not touch the hot water spray.</p> <p>Questions, problems, missing parts? Call 1-800-343-1111 Or visit www.arblueclean.com Or write to: AR Blue Clean, Inc., 1000 10th Street, Suite 100, Santa Barbara, CA 93101</p> <p>97944-JE</p>	<p>AR Blue Clean 630 Series Electric Pressure Washer: Assembly, Care, and Use Manual</p> <p>Comprehensive guide for the AR Blue Clean 630 Series electric pressure washer, covering assembly, safe operation, maintenance, troubleshooting, and warranty information. Ensure optimal performance and longevity of your pressure washer.</p>