

Cuisinart CBC-7000PCFR

Cuisinart CBC-7000PCFR 14 Cup Programmable Coffee Maker User Manual

Model: CBC-7000PCFR

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against electrical shock, do not place cord, plug, or coffee maker in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by Cuisinart may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always fill the water reservoir first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.

INTRODUCTION

Thank you for purchasing the Cuisinart CBC-7000PCFR 14 Cup Programmable Coffee Maker. This appliance is designed

to provide a convenient and efficient way to brew coffee. Please read this manual thoroughly to ensure proper use, maintenance, and optimal performance of your coffee maker.

COMPONENTS AND FEATURES



Image: Front view of the Cuisinart CBC-7000PCFR 14 Cup Programmable Coffee Maker, showing the control panel, water reservoir, filter basket, and glass carafe.

- **Water Reservoir:** Located at the back, with a hinged lid for easy filling.
- **Showerhead:** Distributes water evenly over coffee grounds.
- **Filter Basket:** Holds the coffee filter and grounds. Removable for cleaning.
- **Control Panel:** Features a digital display and various buttons for programming and operation.
- **Glass Carafe:** 14-cup capacity with an ergonomic handle and drip-free spout.
- **Heating Plate:** Keeps brewed coffee warm.
- **Power Cord:** For connecting to an electrical outlet.

BEFORE FIRST USE

Before using your Cuisinart coffee maker for the first time, it is recommended to run a cleaning cycle to remove any dust or residues from the manufacturing process.

1. Wash the carafe, carafe lid, and filter basket in warm, soapy water. Rinse thoroughly and dry.
2. Fill the water reservoir to the 14-cup mark with clean water.
3. Place the filter basket in its housing. Do not add coffee grounds or a paper filter.
4. Place the carafe on the heating plate.
5. Press the "Brew" button to start a cycle.

6. Once the cycle is complete, discard the water from the carafe. Your coffee maker is now ready for use.

SETUP

1. **Placement:** Place the coffee maker on a flat, stable surface near an electrical outlet.
2. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.
3. **Set Clock:**
 - Press the "Hour" button to set the hour. The display will show "AM" or "PM".
 - Press the "Minute" button to set the minutes.
 - Hold the buttons down to scroll quickly, or press and release to advance one digit at a time.

OPERATING INSTRUCTIONS

Making Coffee

1. **Fill Water Reservoir:** Open the reservoir lid and fill with cold, fresh water to the desired level, indicated by the cup markings. Do not exceed the 14-cup line.
2. **Insert Filter:** Place a standard basket-style paper filter or the permanent filter (if included) into the filter basket.
3. **Add Coffee Grounds:** Add the desired amount of ground coffee. A general guideline is 1 tablespoon of ground coffee per cup, but adjust to your taste.
4. **Position Carafe:** Ensure the glass carafe with its lid is securely placed on the heating plate.
5. **Start Brewing:** Press the "Brew" button. The indicator light will illuminate, and the brewing cycle will begin.
6. **Serve:** Once brewing is complete, the coffee maker will beep, and the heating plate will keep the coffee warm. The unit will automatically shut off after a set period (typically 0-4 hours, adjustable).

Programming Auto-On

The programmable feature allows you to set the coffee maker to start brewing at a specific time.

1. **Prepare Coffee Maker:** Follow steps 1-4 from "Making Coffee" above.
2. **Set Program Time:**
 - Press the "Program" button. The display will flash.
 - Use the "Hour" and "Minute" buttons to set the desired brew time.
 - Press the "Program" button again to confirm the setting. The program indicator light will illuminate.
3. The coffee maker will automatically start brewing at the set time.

Cleaning Cycle

Regular descaling is important for optimal performance and longevity of your coffee maker.

1. **Prepare Solution:** Fill the water reservoir with a mixture of 1/3 white vinegar and 2/3 water.
2. **Start Clean Cycle:** Press the "Clean" button. The indicator light will illuminate.
3. **Complete Cycle:** The coffee maker will run a special cleaning cycle. Once complete, the "Clean" light will turn off.
4. **Rinse:** Run 2-3 cycles with fresh, clean water to flush out any remaining vinegar solution.

MAINTENANCE AND CLEANING

- **Daily Cleaning:** After each use, wash the carafe, carafe lid, and filter basket in warm, soapy water. These parts are also top-rack dishwasher safe.
- **Exterior:** Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Perform the "Cleaning Cycle" (as described above) every 1-3 months, depending on water hardness and frequency of use, to remove mineral deposits.

- **Storage:** Ensure the coffee maker is clean and dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Unit not plugged in. Water reservoir empty. "Brew" button not pressed. Programmed time not set correctly.	Ensure power cord is securely plugged into an outlet. Fill water reservoir with water. Press the "Brew" button. Verify program settings and ensure the program indicator light is on.
Coffee is too weak/strong.	Incorrect coffee-to-water ratio. Coffee grind size.	Adjust the amount of coffee grounds used. Use a medium grind for drip coffee makers.
Water overflows from filter basket.	Too much coffee grounds. Filter basket not seated correctly. Clogged filter.	Reduce coffee grounds. Ensure filter basket is properly inserted. Use a fresh filter or clean the permanent filter.
Coffee tastes bad.	Old or stale coffee. Need for descaling. Dirty carafe or components.	Use fresh coffee beans and grind just before brewing. Perform a cleaning cycle with vinegar solution. Clean all removable parts thoroughly.

SPECIFICATIONS







- **Brand:** Cuisinart
- **Model:** CBC-7000PCFR
- **Capacity:** 14 Cups
- **Special Feature:** Programmable
- **Operation Mode:** Fully Automatic
- **Human Interface Input:** Buttons
- **Item Weight:** 7.48 pounds
- **Package Dimensions:** 16 x 11 x 10.2 inches
- **UPC:** 086279177315

WARRANTY AND SUPPORT

Cuisinart products are manufactured to the highest standards and are designed for home use. For detailed warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Cuisinart website. Do not attempt to repair the appliance yourself; contact authorized service personnel for assistance.

For further assistance, you may visit the Cuisinart Store online: [Cuisinart Official Store](#)

Related Documents - CBC-7000PCFR

 <p>Cuisinart INSTRUCTION BOOKLET</p> <p>Brew Central® 14-Cup Programmable Coffeemaker CBC-7000PC</p>	<p>Cuisinart Brew Central 14-Cup Programmable Coffeemaker Instruction Booklet</p> <p>Comprehensive instruction booklet for the Cuisinart Brew Central 14-Cup Programmable Coffeemaker (Model CBC-7000PC), covering safety, features, operation, cleaning, decalcification, and warranty information.</p>
 <p>Cuisinart INSTRUCTION BOOKLET</p> <p>Brew Central® 14-Cup Programmable Coffeemaker CBC-6400PCC</p>	<p>Cuisinart Brew Central 14-Cup Programmable Coffeemaker CBC-6400PCC Instruction Manual</p> <p>Comprehensive instruction manual for the Cuisinart Brew Central 14-Cup Programmable Coffeemaker (Model CBC-6400PCC), covering setup, operation, features, maintenance, and warranty information.</p>
 <p>Cuisinart INSTRUCTION BOOKLET</p> <p>Brew Central® 14-Cup Programmable Coffeemaker CBC-7200PC</p>	<p>Cuisinart Brew Central 14-Cup Programmable Coffeemaker CBC-7200PC Instruction Manual</p> <p>Official instruction booklet for the Cuisinart Brew Central 14-Cup Programmable Coffeemaker (Model CBC-7200PC). Learn how to set up, program, use, clean, and maintain your coffeemaker for the perfect cup of coffee.</p>
 <p>Cuisinart INSTRUCTION BOOKLET</p> <p>Brew Central® 14-Cup Programmable Coffeemaker CBC-7000PC</p>	<p>Cuisinart Brew Central 14-Cup Programmable Coffeemaker Instruction Booklet</p> <p>This instruction booklet provides detailed information on the Cuisinart Brew Central 14-Cup Programmable Coffeemaker, including important safeguards, features, operation, cleaning, maintenance, and warranty information.</p>
 <p>Cuisinart PerfectTemp® 14-Cup Programmable Coffeemaker DCC-3000 SERIES</p> <p>Instruction & Recipe Booklet</p>	<p>Cuisinart 14-Cup Programmable Coffee Maker (DCC3200 Series) - Owner's Manual</p> <p>Detailed owner's manual for the Cuisinart 14-Cup Programmable Coffee Maker, DCC3200 series. Learn about features, operation, cleaning, and maintenance for your Cuisinart coffee maker.</p>
 <p>Cuisinart INSTRUCTION BOOKLET</p> <p>Coffee On Demand® 12-Cup Programmable Coffeemaker DCC-3000</p>	<p>Cuisinart DCC-3000 Coffee On Demand 12-Cup Programmable Coffeemaker Instruction Manual</p> <p>User manual and instructions for the Cuisinart DCC-3000 Coffee On Demand 12-Cup Programmable Coffeemaker, covering safety, setup, operation, cleaning, and warranty.</p>

