

OXO 11316100

OXO Good Grips Rotary Grater Instruction Manual

Model: 11316100

1. PRODUCT OVERVIEW

The OXO Good Grips Seal & Store Rotary Grater is designed for efficient grating and convenient storage of ingredients. It features a compartment for storing un-grated cheese, equipped with an interior silicone seal to maintain freshness. The grater allows for direct grating onto dishes or collection within the cap before serving.

Key Features:

- **Large barrel and sharp stainless steel blades:** Ensures efficient grating of various ingredients.
- **Medium grating surface:** Ideal for hard cheeses, chocolate, nuts, and similar items.
- **Integrated collection cap:** Collects grated ingredients before serving; features an adjustable window for direct dispensing.
- **Silicone seal:** Keeps stored ingredients fresh when refrigerated.
- **Dishwasher safe:** For easy and convenient cleaning.



Front view of the OXO Good Grips Rotary Grater, showcasing its compact design.



The grater measures 4.5 inches (11.4 cm) in height and 6.2 inches (15.7 cm) in length.

2. SETUP

The OXO Good Grips Rotary Grater comes pre-assembled and is ready for immediate use after unpacking and initial cleaning. No complex assembly is required.

Initial Preparation:

1. Remove all packaging materials and labels from the grater.
2. Before first use, wash all components of the grater thoroughly with warm, soapy water or place them in the dishwasher.
3. Rinse thoroughly and dry completely before reassembling and using.

Large barrel stores and grates cheese



The grater disassembles into several parts for easy cleaning and preparation.

3. OPERATING INSTRUCTIONS

Grating Ingredients:

1. Ensure the grater is clean and dry.
2. Open the grater by separating the two halves.
3. Insert the desired ingredient (e.g., hard cheese, chocolate, nuts) into the large barrel.
4. Close the grater, ensuring the two halves snap securely together.
5. To collect grated ingredients, ensure the collection window on the cap is closed.
6. Hold the grater firmly with one hand and turn the knob with the other hand to begin grating.
7. Once sufficient ingredients are grated, you can either open the collection window to dispense directly onto your dish or remove the cap to serve from the collected amount.



Silicone seal keeps cheese fresh

The grater allows for direct dispensing of grated ingredients onto your meal.



**Also grates
chocolate,
nuts and more**

The silicone seal helps keep ingredients fresh when stored inside the grater.

Comfortable turning knob and handle



The comfortable turning knob and handle are designed for repetitive use.

4. CARE AND MAINTENANCE

Cleaning Instructions:

For optimal hygiene and longevity of your grater, clean it thoroughly after each use.

1. Disassemble the grater by separating the two halves and removing the grating drum.
2. Wash all components with warm, soapy water using a brush to remove any trapped food particles from the blades.
3. Alternatively, all parts of the OXO Good Grips Rotary Grater are dishwasher safe. Place them on the top rack for best results.
4. Ensure all parts are completely dry before reassembling or storing to prevent rust or mildew.

Large barrel stores and grates cheese



The grater easily disassembles for thorough cleaning.

5. TROUBLESHOOTING

Most issues with the OXO Good Grips Rotary Grater are minor and can be resolved with simple checks.

Common Issues and Solutions:

Problem	Possible Cause	Solution
Grater not effective / difficult to turn	Ingredient too soft or too hard; blades clogged; grater not assembled correctly.	Ensure ingredient is of appropriate consistency for grating. Disassemble and clean blades thoroughly. Reassemble the grater, ensuring all parts are securely in place.

Problem	Possible Cause	Solution
Ingredients not staying fresh in storage compartment	Silicone seal not properly seated; cap not fully closed.	Check that the silicone seal is clean and correctly positioned. Ensure the cap is firmly closed and snapped into place.

6. SPECIFICATIONS

Attribute	Detail
Brand	OXO
Model Number	11316100
UPC	840097700519
Color	White
Material	Stainless Steel
Item Weight	8.8 ounces (0.25 Kilograms)
Package Dimensions	8.07 x 6.77 x 4.33 inches
Dishwasher Safe	Yes

7. WARRANTY AND SUPPORT

OXO products are designed for durability and performance. For specific warranty information or product support, please refer to the official OXO website or contact OXO customer service directly.

OXO Customer Service:

Visit www.oxo.com/contact-us for contact details and support resources.