Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- SLOPEHILL /
- > SLOPEHILL Dog Training Collar with Remote (Model 8802) User Manual

SLOPEHILL 8802

SLOPEHILL Dog Training Collar with Remote (Model 8802)

User Instruction Manual

NTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your SLOPEHILL Dog Training Collar with Remote, Model 8802. Please read this manual thoroughly before operating the device to ensure proper training and the well-being of your dog.

IMPORTANT SAFETY INFORMATION

Warning:

- Do not leave the collar on your dog for more than 8 hours per day! Prolonged wear can lead to skin irritation.
- Regularly check your dog's neck for any signs of irritation or sores. If found, discontinue use until the skin heals.
- The remote is not waterproof. Avoid exposing it to water. The receiver collar is IP68 waterproof.
- This training collar is designed for dogs aged 3 months or older, weighing over 8 pounds.
- · Always start training with the lowest stimulation levels and gradually increase if necessary.
- Never use the shock function as punishment. It should be used as a corrective measure during training.

PACKAGE CONTENTS

- Remote Transmitter
- Receiver Collar(s) (Quantity may vary based on purchase)
- · Adjustable Nylon Collar Strap
- USB Charging Cable
- · Test Light Tool
- · Contact Points (Short and Long)
- Silicone Conductive Caps

• User Manual (This document)



Image: Components of the SLOPEHILL Dog Training Collar, including the remote and two receiver collars.

PRODUCT OVERVIEW

Remote Transmitter

- LCD Display: Shows channel, battery level, and stimulation intensity.
- Shock Button: Delivers static stimulation.
- Vibration Button: Delivers vibration stimulation.
- Beep Button: Emits an audible tone.
- Light Button: Activates the anti-lost light on the receiver collar.
- Channel Button (CH): Switches between receiver collars (up to 3).
- Intensity Adjustment Buttons (+/-): Adjusts vibration and shock levels (0-99).
- Keypad Lock Switch: Prevents accidental operation.

Receiver Collar

- Contact Points: Deliver static stimulation.
- **LED Indicator Light:** Shows power status, charging status, and mode activation.
- Charging Port: For recharging the collar.
- Power Button: Turns the receiver on/off.

Anti-lost Light: Helps locate your dog in low light conditions.

SETUP

1. Charging the Devices

Before first use, fully charge both the remote transmitter and the receiver collar(s).

- 1. Connect the USB charging cable to the charging ports on both the remote and receiver.
- 2. Plug the USB cable into a standard USB power adapter (not included).
- 3. The LED indicator on the receiver will be red during charging and turn green when fully charged. The remote's battery icon will show full.
- 4. Charging typically takes about 2 hours. A full charge provides approximately 45 days of standby for the remote and 15-20 days of use for the receiver.
- 5. Ensure the silicone plug of the charging port on the receiver is tightened after charging to maintain IP68 waterproofing.



Image: Remote and receiver collar connected to a USB charging cable, illustrating the long-lasting battery life.

2. Pairing the Remote and Receiver

The devices are typically pre-paired from the factory. If re-pairing is needed or you are adding an additional collar:

- 1. Turn on the remote transmitter.
- 2. Select the desired channel (CH1, CH2, or CH3) using the 'CH' button on the remote.
- 3. With the receiver collar turned off, press and hold the power button on the receiver until the LED indicator flashes rapidly.
- 4. While the receiver LED is flashing, press any stimulation button (Beep, Vibration, or Shock) on the remote.
- 5. If pairing is successful, the receiver's LED will stop flashing and remain solid green for a few seconds, then turn off.

3. Installing Contact Points and Silicone Caps

Choose the appropriate length of contact points based on your dog's coat thickness. For most dogs, the shorter points are sufficient. For dogs with thicker coats, use the longer points to ensure proper contact.

- Screw the chosen contact points into the receiver collar.
- Place the conductive silicone caps over the contact points. These caps make the stimulation softer and more comfortable for your dog while still being effective.



Image: Instructions for installing silicone conductive prongs and ensuring proper collar fit on a dog.

4. Fitting the Collar

Proper fit is crucial for effectiveness and your dog's comfort.

- 1. Center the receiver under your dog's neck, ensuring the contact points touch the skin.
- 2. Adjust the strap so it is snug but not too tight. You should be able to fit one finger comfortably between the strap and your dog's neck.
- 3. The collar strap is adjustable from 8 to 26 inches, suitable for dogs weighing 8 to 140 lbs. Trim any excess strap length if necessary.
- 4. To prevent pressure sores, reposition the receiver on your dog's neck every 1 to 2 hours.

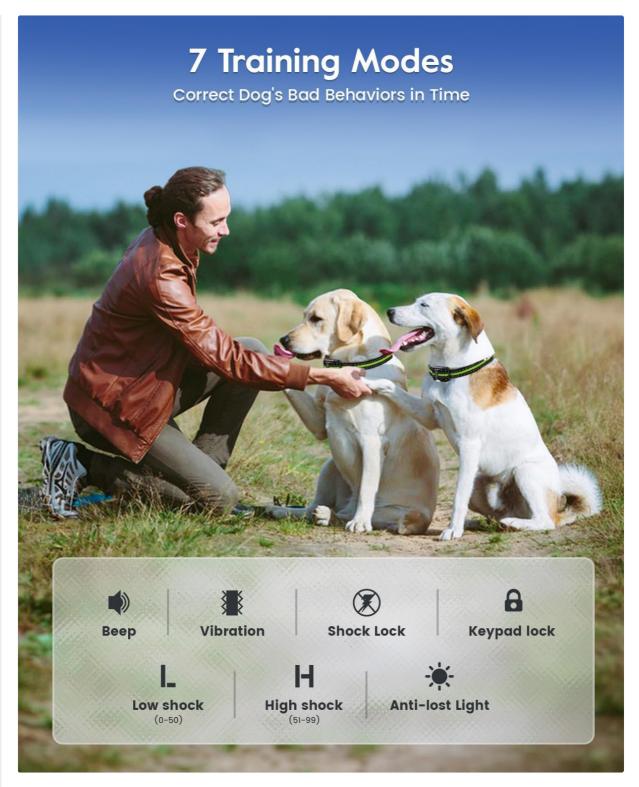


Image: Various dog breeds wearing the adjustable SLOPEHILL training collar, demonstrating its fit for dogs from 8 to 140 lbs with a collar length of 8-26 inches.

OPERATING INSTRUCTIONS

1. Turning On/Off

- **Remote:** Press any button to activate. It will automatically enter sleep mode after a period of inactivity.
- **Receiver:** Press and hold the power button until the LED indicator lights up. Press and hold again to turn off.

2. Training Modes

The SLOPEHILL training collar offers 7 distinct training modes:

- Beep Mode: Delivers an audible tone. Useful for attracting attention or as a warning.
- Vibration Mode: Delivers a gentle vibration. Can be used as a mild correction or attention-getter.
- Low Shock Level (0-50): Provides a static stimulation at lower intensity levels.
- High Shock Level (51-99): Provides a static stimulation at higher intensity levels.
- No Shock Mode: Activates a safety feature that prevents accidental static stimulation.
- Light Mode: Activates the anti-lost light on the receiver collar.
- **Keypad Lock Mode:** Locks the remote's buttons to prevent unintended commands.



Image: Remote control interface showing adjustable shock levels (0-99) and the keypad lock function for safety.

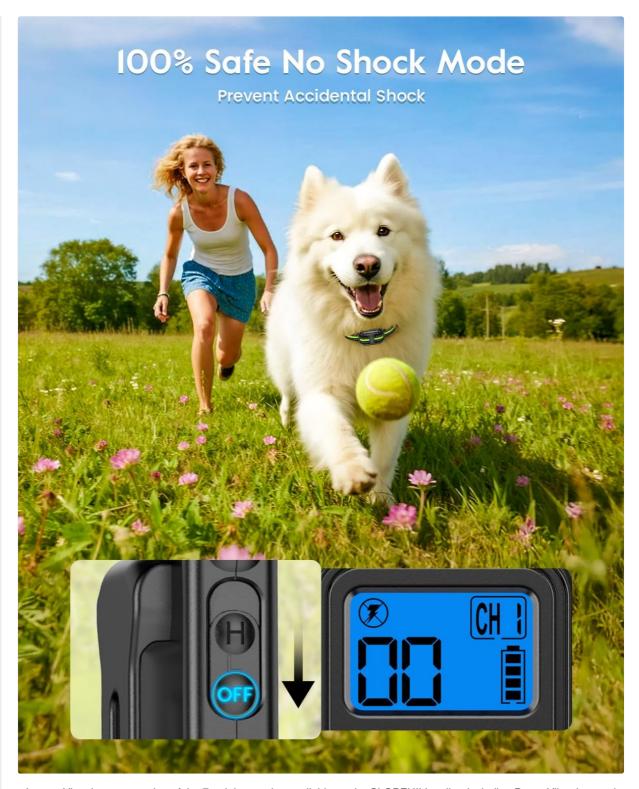


Image: Visual representation of the 7 training modes available on the SLOPEHILL collar, including Beep, Vibration, and various shock levels.

3. Adjusting Intensity Levels

Use the '+' and '-' buttons on the remote to adjust the vibration and static stimulation levels from 0 to 99. Always start at the lowest level and observe your dog's reaction. Increase the level only if your dog does not respond.

4. Using the Anti-Lost Light

Press the 'Light' button on the remote to activate the LED light on the receiver collar. This feature is useful for locating your dog in the dark or for increasing visibility during night walks.



Image: A dog wearing the SLOPEHILL collar with its anti-lost light illuminated in a dark environment, demonstrating its utility for night visibility.

5. Multi-Dog Training

The remote transmitter can control up to 3 receiver collars. Use the 'CH' button to switch between channels (CH1, CH2, CH3) to train multiple dogs individually.

MAINTENANCE

- Cleaning: Wipe the collar and receiver with a damp cloth. Do not use harsh chemicals.
- **Battery Care:** Recharge the devices regularly, even if not in frequent use, to maintain battery health. Avoid overcharging.
- Waterproofing: The receiver collar is IP68 waterproof, suitable for swimming and bathing. However,

ensure the charging port's silicone plug is securely closed. The remote is NOT waterproof.

• **Contact Points:** Periodically check the contact points for cleanliness and ensure they are securely attached.

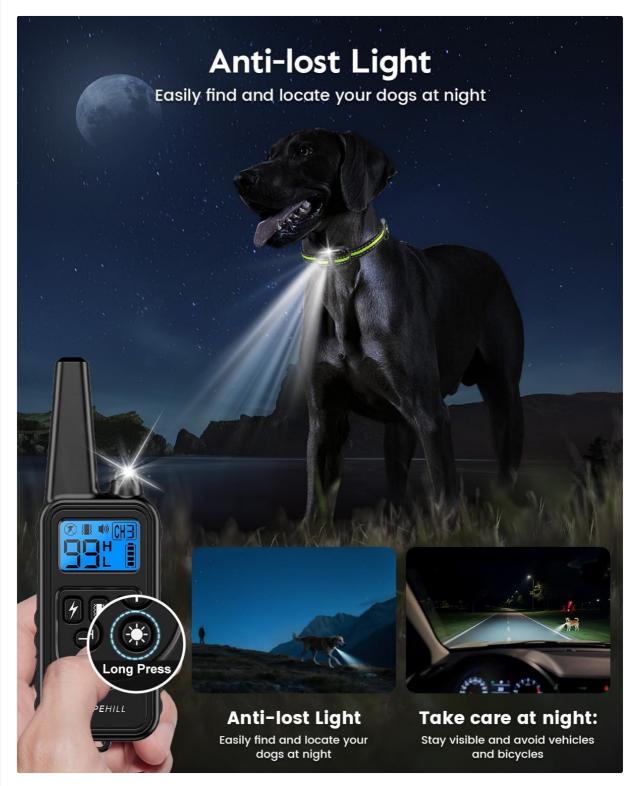


Image: A dog swimming while wearing the IP68 waterproof receiver collar, highlighting its durability in various wet conditions.

TROUBLESHOOTING

|--|--|

Problem	Possible Solution
Collar not responding to remote.	 Ensure both devices are charged and turned on. Check if the remote and receiver are paired to the same channel. Verify the remote's keypad lock is disengaged. Ensure the receiver is within the 4200ft range.
No static stimulation.	 Ensure contact points are making proper skin contact. You may need longer contact points for thick-coated dogs. Check if the "No Shock Mode" is activated on the remote. Use the test light tool to verify the static function. If your dog has very thick fur, consider trimming a small area to improve contact.
Collar LED not lighting up.	 The collar might be off or the battery is depleted. Charge the collar. If fully charged and still no light, contact customer support.
Remote display is blank.	 The remote battery might be low. Charge the remote. Press any button to wake it from sleep mode.

SPECIFICATIONS

• Model: 8802

• Remote Control Range: Up to 4200 feet (1280 meters)

• Receiver Waterproof Rating: IP68 (Submersible up to 1 meter for 30 minutes)

• Remote Waterproof Rating: Not waterproof

• Battery Life (Remote): Up to 45 days (standby)

• Battery Life (Receiver): 15-20 days (active use)

• Charging Time: Approximately 2 hours

• Adjustable Static Levels: 0-99

• Collar Length: 8-26 inches (adjustable)

• Suitable Dog Weight: 8-140 lbs

• Material: Synthetic leather/nylon strap, plastic receiver/remote

• Item Weight: 13.7 ounces (total package)

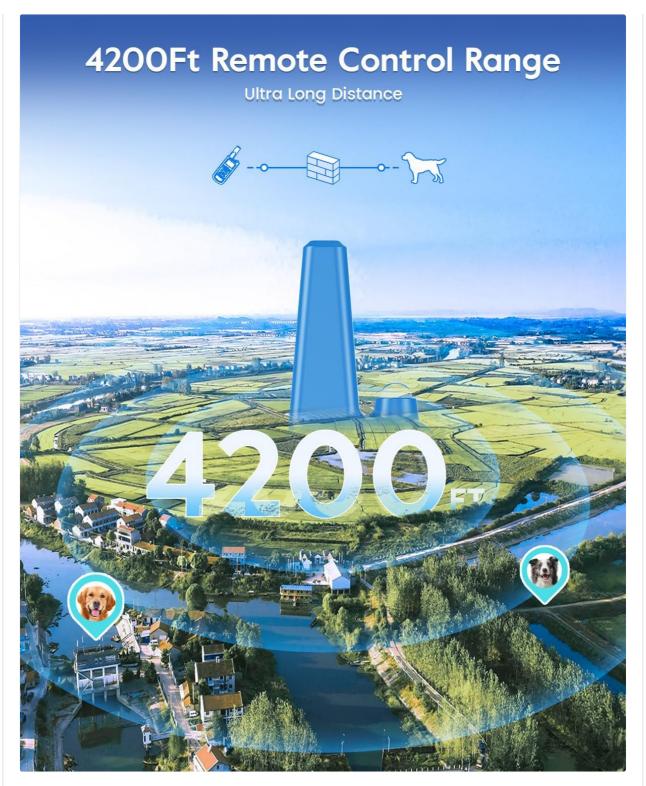


Image: Illustration of the extensive 4200ft remote control range of the training collar.

WARRANTY AND SUPPORT

Your SLOPEHILL Dog Training Collar comes with a **1-year manufacturer's warranty** from the date of purchase

For any questions, concerns, or technical support, please refer to the contact information provided in your product packaging or visit the official SLOPEHILL website. Our customer service team is available to assist you.



Image: Visual representation of available after-sales support, including multi-channel service and 24-hour online customer support.

OFFICIAL PRODUCT VIDEOS

The following video provides additional guidance on using your SLOPEHILL Dog Training Collar.

SLOPEHILL Dog Training Collar Overview

Your browser does not support the video tag.

Video: A brief overview of the SLOPEHILL Dog Training Collar's features and how it can be used for effective dog training.

This video demonstrates the product's design and basic functionalities.

Related Documents - 8802

	SLOPEHILL 880 Dog Training Collar User Manual Comprehensive user manual for the SLOPEHILL 880 Dog Training Collar, detailing features, operation, safety guidelines, and troubleshooting for effective and humane dog training.
Lear Manual Model DTT User Manual Model DTT	Slopehill D17T Dog Training Collar User Manual Comprehensive user manual for the Slopehill D17T Dog Training Collar, covering safety guidelines, operating instructions, training techniques, troubleshooting, and product specifications. Learn how to effectively and safely train your dog.
ी व वित्यूष्ट ः इति	Slopehill Hyper BLDC Professional Hair Dryer User Manual & Warranty Comprehensive user manual and warranty information for the Slopehill Hyper BLDC professional hair dryer, detailing features, safety, operation, and specifications.
п	Slopehill Hyper BLDC Professional Hair Dryer User Manual and Specifications Comprehensive user manual and product specifications for the Slopehill Hyper BLDC professional hair dryer, detailing features, usage, safety warnings, and maintenance.
300Mpbs Wireless Range Extender	Slopehill 300Mbps Wireless Range Extender WF8500 User Manual User manual for the Slopehill 300Mbps Wireless Range Extender (Model WF8500). Learn how to set up and troubleshoot your Wi-Fi extender for improved coverage.

₹

Slopehill Professional Ionic Hair Dryer User Manual

Comprehensive guide to the Slopehill Professional Ionic Hair Dryer, detailing its features, components, operation, safety precautions, and maintenance for optimal use.