

[manuals.plus](#) /› [ALLIMITY](#) /› [ALLIMITY BN59-00685A Replacement Remote Control User Manual](#)

## ALLIMITY BN59-00685A

# ALLIMITY BN59-00685A Replacement Remote Control User Manual

Model: BN59-00685A

## INTRODUCTION

This user manual provides comprehensive instructions for the ALLIMITY BN59-00685A replacement remote control. It covers setup, operation, compatibility, and troubleshooting to ensure optimal use with your compatible Samsung 4K OLED HDTV models. Please read this manual carefully before using the remote control to familiarize yourself with its functions and features.

## PRODUCT OVERVIEW

The ALLIMITY BN59-00685A is a direct replacement remote control designed for various Samsung 4K OLED HDTV models. It offers full functionality without the need for complex programming, providing a seamless user experience identical to your original remote.





**Figure 1:** Front view of the ALLIMITY BN59-00685A replacement remote control. This image displays the front of the remote, highlighting its full array of buttons for various functions including power, channel, volume, menu, and navigation controls.

## SETUP

Setting up your ALLIMITY BN59-00685A remote control is a straightforward process that requires no programming. Simply follow these steps:

- 1. Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch to open it.





**Figure 2:** Back view of the remote control with the battery compartment open. This image shows the location and orientation for inserting two AAA batteries.

2. **Insert Batteries:** Insert two (2) AAA alkaline batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover, sliding it back into place until it clicks securely.
4. **Ready for Use:** The remote control is now ready to operate your compatible Samsung TV. No additional programming or pairing is required.

## OPERATING INSTRUCTIONS

---

The ALLIMITY BN59-00685A remote control functions identically to your original Samsung remote. Below are common button functions:

- **POWER:** Turns the television on or off.
- **SOURCE:** Selects input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly selects channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the television audio.
- **MENU:** Accesses the TV's main menu.
- **TOOLS:** Opens a quick menu with common functions.
- **INFO:** Displays information about the current program or input.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and confirms selections.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback for compatible content.

## COMPATIBILITY

---

This remote control is compatible with a wide range of Samsung 4K OLED HDTV models. If your original remote control was BN59-00685A, this replacement will function correctly with your television. Compatible models include, but are not limited to:

- UN55D6420UF
- UN60D6420UF
- UN40D6420UF
- UN46D6420UF
- LA26A450C1
- LA32A450C1
- LA37A450C1
- LA40A450C1
- LE26A450C2
- LE26A451C1
- LE32A430T1
- LE32A431T2
- LE32A450C2
- LE37A451C1
- LE40A430T1
- LE40A450X2
- LE40A451C1
- PS42A450P2
- PS42A451P1
- PS50A450P2
- PS50A451P1

## TROUBLESHOOTING

---

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the proper polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared (IR) sensor.
  - Ensure you are within the effective range of the TV's IR receiver (typically within 20 feet and direct line of sight).

### • Specific Buttons Not Working:

- This remote is a direct replacement and does not require programming. If a specific button is not working, ensure it is a function supported by your specific TV model.
- Clean the remote control surface, especially around the unresponsive button, to remove any debris that might be interfering with its operation.

## SPECIFICATIONS

<b>Model Number</b>	BN59-00685A (BJKJ-BN59-00685A-JKJB)
<b>Brand</b>	ALLIMITY
<b>Product Dimensions</b>	Approximately 6 x 2 x 0.6 inches
<b>Item Weight</b>	Approximately 2 ounces
<b>Batteries Required</b>	2 x AAA Alkaline Batteries (not included)
<b>Special Feature</b>	No Programming Required

## SUPPORT AND CONTACT INFORMATION

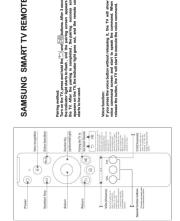
For any questions, concerns, or further assistance regarding your ALLIMITY BN59-00685A replacement remote control, please do not hesitate to contact our customer support. We are committed to ensuring your satisfaction.

Please refer to your purchase platform or product packaging for specific contact details, or visit the ALLIMITY official support page for the most up-to-date contact information.

© 2023 ALLIMITY. All rights reserved.

## Related Documents - BN59-00685A

	<p><a href="#">Samsung BN59-00516A Replacement Remote Control Guide</a></p> <p>This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.</p>
	<p><a href="#">Samsung Remote Control User Guide and Compatibility</a></p> <p>Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.</p>

	<p><a href="#"><b>Samsung Smart-TV Remote Control Function Guide: TM1850A BN59-01259B &amp; Replacement Models</b></a></p> <p>Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.</p>
	<p><a href="#"><b>Samsung Universal Remote Control BN59-01315A User Guide</b></a></p> <p>Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.</p>
	<p><a href="#"><b>Samsung Smart Remote: Connecting and Troubleshooting Guide</b></a></p> <p>A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.</p>
	<p><a href="#"><b>Samsung Smart TV Remote Control Guide</b></a></p> <p>A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.</p>