



[Manuals.plus](#) /

› [FOTOSOK](#) /

› FOTOSOK 4-Drawer Dresser Assembly and Care Manual

## FOTOSOK FTSMD180US

# FOTOSOK 4-Drawer Dresser Assembly and Care Manual

Model: FTSMD180US

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, safe operation, and proper maintenance of your FOTOSOK 4-Drawer Dresser. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: FOTOSOK 4-Drawer Dresser (White)

The FOTOSOK 4-Drawer Dresser is designed for modern living spaces, offering ample storage with a minimalist aesthetic. Its compact size makes it suitable for various rooms, including bedrooms, hallways, living rooms, and home offices.

## SAFETY INFORMATION

---

To prevent serious or fatal injuries from furniture tip-over, this product must be permanently attached to the wall using the provided anti-toppling device. Always follow the assembly instructions carefully.

- Do not allow children to climb on or play with the dresser.

- Do not place heavy objects on top of the dresser that could cause it to become unstable.
- Always open only one drawer at a time to maintain stability.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.



Figure 2: Anti-toppling device for wall mounting.

The anti-toppling device is crucial for safety. Install it as instructed to secure the dresser to a wall.

## PARTS LIST

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact FOTOSOK customer support.

Part	Description	Quantity
A	Top Panel	1
B	Bottom Panel	1
C	Side Panels	2
D	Back Panel	1
E	Drawer Fronts	4
F	Drawer Side Panels	8
G	Drawer Back Panels	4
H	Drawer Bottom Panels	4
I	Drawer Slides (Left)	4
J	Drawer Slides (Right)	4
K	Support Bars	4

## HARDWARE LIST

Item	Description	Quantity
1	Cam Locks	Approx. 16
2	Cam Dowels	Approx. 16
3	Wood Dowels	Approx. 12
4	Screws (various sizes)	Approx. 30

Item	Description	Quantity
5	Anti-toppling bracket	1
6	Wall anchors	2

## TOOLS REQUIRED

---

- Phillips Head Screwdriver
- Hammer (for dowels)
- Drill (optional, for wall mounting)
- Measuring Tape (optional, for placement)

## SETUP & ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully for proper assembly. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches.

- 1. Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and identify each part using the provided Parts List. Separate hardware into labeled bags if applicable.
- 2. Assemble the Main Frame:**
  - Attach the drawer slides (I, J) to the side panels (C) and support bars (K) using the appropriate screws. Ensure they are oriented correctly.
  - Connect the side panels (C) to the top (A) and bottom (B) panels using cam locks and dowels. Ensure all connections are secure.
  - Slide the back panel (D) into the grooves of the assembled frame and secure it with small screws.
- 3. Assemble the Drawers (Repeat 4 times):**
  - Attach the drawer side panels (F) and drawer back panel (G) to the drawer front (E) using cam locks and dowels.
  - Slide the drawer bottom panel (H) into the grooves of the assembled drawer frame.
  - Attach the remaining drawer slides to the sides of the assembled drawer box.
- 4. Insert Drawers:** Carefully slide each assembled drawer into its corresponding slot in the main dresser frame. Ensure they glide smoothly.
- 5. Install Anti-Toppling Device:**
  - Locate a suitable wall stud or use appropriate wall anchors.
  - Attach the anti-toppling bracket (Hardware Item 5) to the top rear edge of the dresser using screws.
  - Secure the other end of the strap or bracket to the wall using screws and wall anchors (Hardware Item 6). Ensure the dresser is stable and cannot tip over.

## OPERATING INSTRUCTIONS

---

Your FOTOSOK 4-Drawer Dresser is designed for convenient storage.

- **Drawer Use:** The dresser features a handleless design for a sleek, minimalist look. To open a drawer, gently pull from the bottom edge of the drawer front.
- **Storage Capacity:** Each of the four drawers provides ample space for organizing clothing, accessories, documents, or other household items. Distribute weight evenly within drawers to ensure smooth operation and prevent strain on the slides.



## Handless Design

Figure 3: Handless drawer design for easy opening.

The handless design allows for a clean, modern aesthetic while providing easy access to your stored items.

## 4 drawers for sufficient storage



Figure 4: Example of drawer storage capacity.

Utilize the spacious drawers to keep your belongings organized and your living space tidy.

## MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe with a dry cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Spills:** Immediately wipe up any spills with a soft, dry cloth to prevent water damage or staining.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.



Figure 5: Cleaning the dresser with a dry cloth.

Regular dusting with a dry cloth is sufficient for daily maintenance.

## TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common problems and solutions:

- **Wobbly Dresser:**

- Ensure all cam locks and screws are fully tightened.
- Verify that the dresser is placed on a level surface. Adjust furniture glides if necessary.
- Confirm the back panel is correctly seated in its grooves and secured.

- **Drawers Not Sliding Smoothly:**

- Check that the drawer slides are correctly installed and aligned on both the drawer and the dresser frame.
- Ensure no objects are obstructing the drawer's path or overfilling the drawer.
- Verify that all screws securing the drawer slides are tight.

- **Missing Parts:**

- Double-check all packaging materials. Small parts can sometimes be overlooked.
- Contact FOTOSOK customer support with the specific part number(s) needed.

## SPECIFICATIONS

Feature	Detail
Brand	FOTOSOK
Model Name	White dresser
Item Model Number	FTSMD180US
Product Dimensions	23.6"D x 15.7"W x 31.5"H (60cm L x 40cm W x 80cm H)
Color	White
Mounting Type	Freestanding (with optional wall anchor)
Room Type	Hallway, Home, Living Room, Office
Special Feature	Durability, Handleless Design
Furniture Finish	Wood Finish
Item Weight	22 Pounds (Approx. 10 kg)

Feature	Detail
Assembly Required	Yes

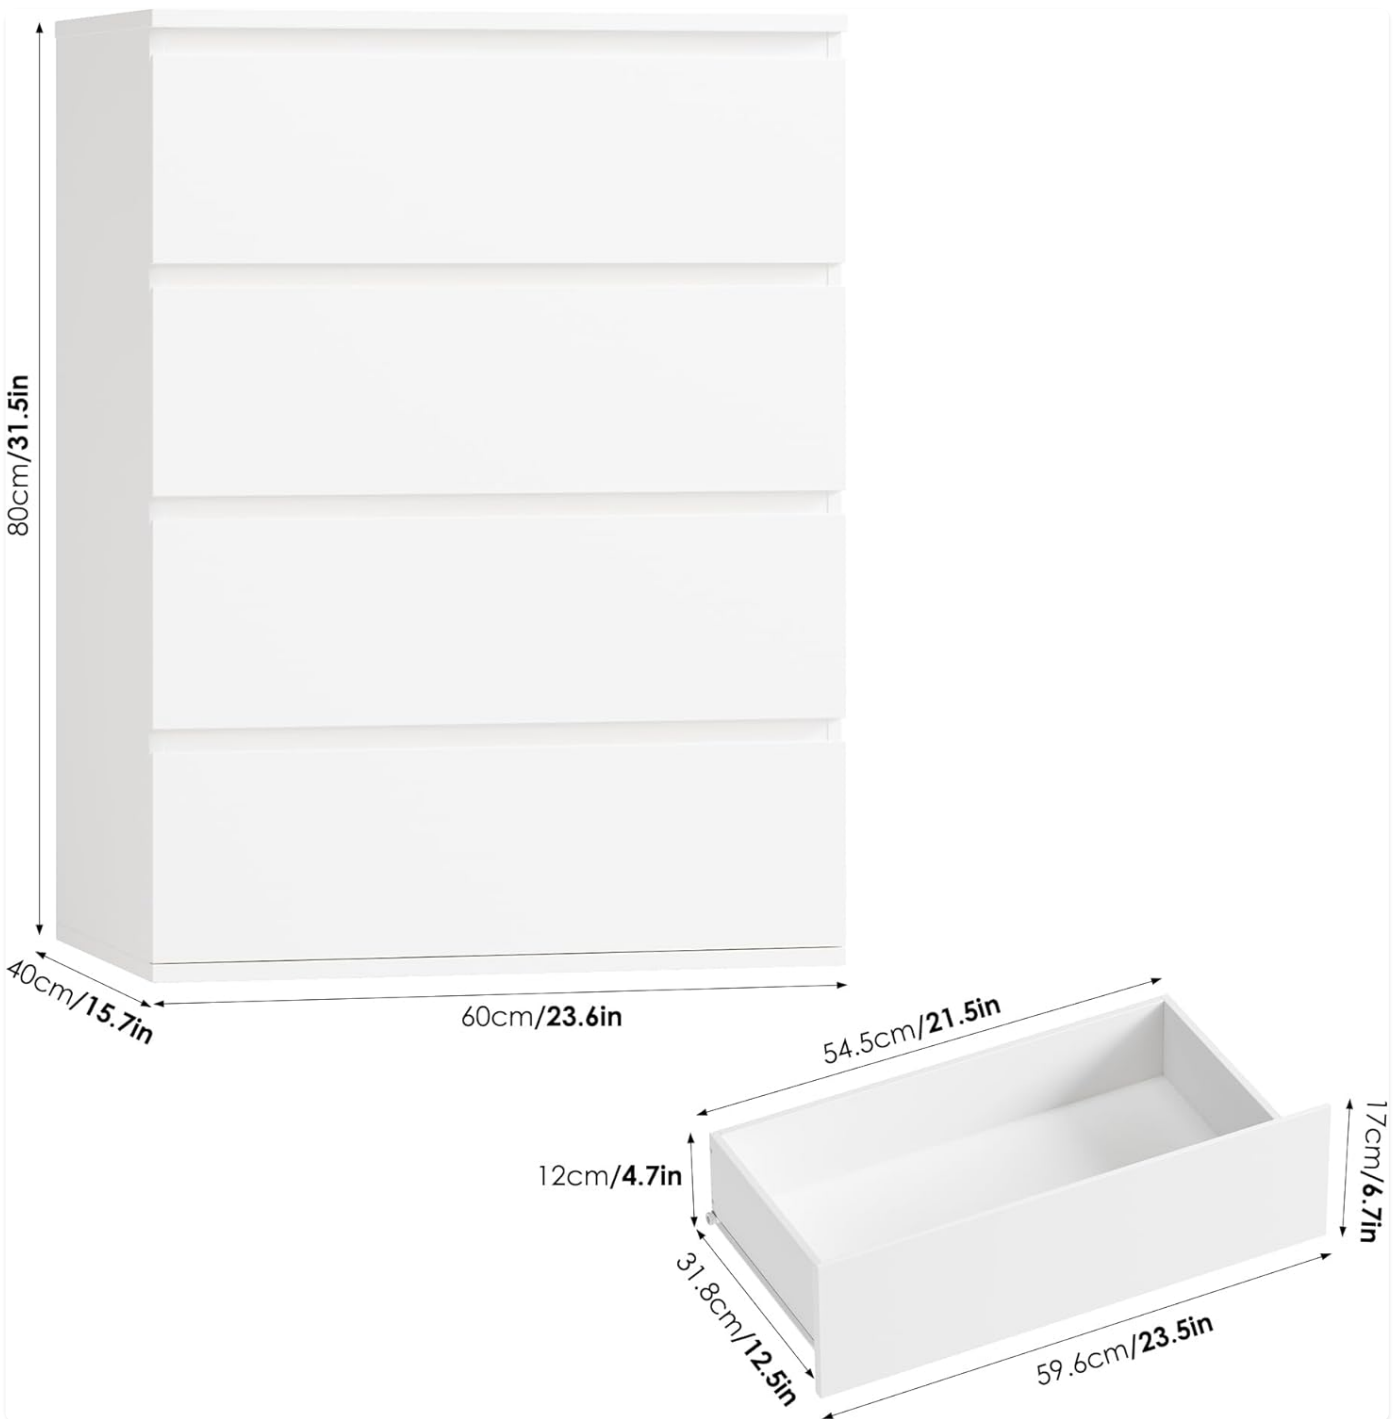


Figure 6: Detailed dimensions of the FOTOSOK 4-Drawer Dresser.

Refer to the diagram for precise measurements of the dresser and its drawers.

## WARRANTY AND SUPPORT

FOTOSOK is committed to providing quality products. For any warranty claims, missing parts, or technical support, please contact FOTOSOK customer service through the retailer where the product was purchased. Please have your model number (FTSMD180US) and purchase information ready.

For more information, visit the official FOTOSOK store: [FOTOSOK Store on Amazon](#)

