

KODAK T455 PRO

Kodak T455 Tripod with H4444 Head Instruction Manual

Model: T455 PRO

INTRODUCTION

Thank you for choosing the Kodak T455 Tripod with H4444 Head. This heavy-duty aluminum tripod is designed for professional photo and video applications, offering stability, smooth operation, and versatility. This manual provides essential information for the proper setup, operation, and maintenance of your tripod to ensure optimal performance and longevity.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Kodak T455 Tripod with H4444 Head
- 1 x Carry Case (for travel)

SETUP

Follow these steps to set up your Kodak T455 Tripod:

1. **Unpack the Tripod:** Carefully remove the tripod from its carry case and packaging.
2. **Extend the Legs:** Unlock the flip locks on each of the four leg sections. Extend the legs to the desired height. Ensure all flip locks are securely closed after adjusting to prevent accidental collapse.
3. **Adjust Leg Angles:** The tripod legs can be independently adjusted to different angles for stability on uneven surfaces. Press the leg angle release tab at the top of each leg to adjust.
4. **Level the Tripod:** Use the built-in bubble level on the tripod head to ensure the base is level before mounting your camera.
5. **Attach the Camera:**



UNIVERSAL SCREW

The quick release plate with 1/4 inch universal screw let you fast loading and unloading your camera, very flexible to use.



Image: The quick release plate with a 1/4 inch universal screw for camera attachment.

- Locate the quick release plate on the H4444 head.
- Press the release lever to detach the quick release plate from the head.
- Attach the quick release plate to the bottom of your camera using the 1/4-inch universal screw. Ensure it is tightened securely.
- Slide the camera with the attached quick release plate back into the tripod head until it clicks into place. Verify that it is firmly locked.

OPERATING INSTRUCTIONS

The Kodak T455 Tripod is designed for flexible and smooth camera movements.

Height Adjustment



61.95 cm



168.45 cm



Image: The tripod extended to its maximum height of 168.45 cm and collapsed to its minimum height of 61.95 cm.

- The tripod can be adjusted from a minimum height of 61.95 cm to a maximum height of 168.45 cm.
- To adjust, open the flip locks on the leg sections, extend or retract the legs to the desired height, and then firmly close the flip locks.

Using the H4444 Fluid Head



360 DEGREE Panorama Shooting



Image: The H4444 fluid head with a 360-degree rotation indicator for panoramic shooting.

- The H4444 head features hydraulic damping for smooth panning and tilting movements.
- **Pan Movement:** Loosen the pan lock knob to rotate the head horizontally (360 degrees) for panoramic shots. Tighten to secure.
- **Tilt Movement:** Loosen the tilt lock knob to adjust the camera's vertical angle. Tighten to secure.
- The long handle provides precise control over movements.

Weight Capacity



Image: An illustration showing the tripod's ability to support up to 20 kg of equipment.

- The tripod supports equipment up to 20 kg, making it suitable for DSLRs, cinema cameras, and other professional gear.
- Always ensure your equipment's weight does not exceed the maximum load capacity.

Bearing Hook

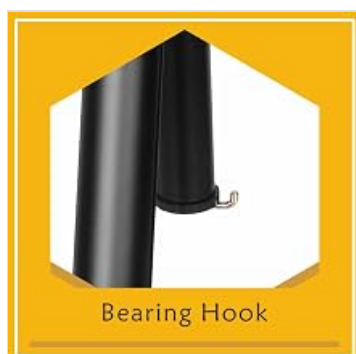


Image: A close-up view of the bearing hook located at the bottom of the center column.

- A bearing hook is located at the bottom of the center column. This can be used to hang additional weight (e.g., a camera bag) to increase the tripod's stability, especially in windy conditions.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your tripod:

- **Cleaning:** Wipe down the aluminum tubes and head with a soft, dry cloth after each use. If necessary, use a slightly damp cloth with mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Lubrication:** The hydraulic head is factory-lubricated. Do not attempt to lubricate internal components unless specifically instructed by Kodak support.
- **Storage:** Store the tripod in its carry case in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, knobs, and flip locks for tightness. Ensure the anti-slip rubber bases are intact.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Tripod is unstable	Legs not fully extended or locked; uneven surface; excessive load.	Ensure all leg sections are fully extended and flip locks are securely closed. Adjust leg angles for stability on uneven ground. Verify equipment weight is within the 20 kg limit.
Head movements are not smooth	Pan/tilt lock knobs are too tight; dirt in mechanism.	Loosen the pan/tilt lock knobs slightly. Clean the head exterior. If the issue persists, contact customer support.
Quick release plate not locking	Plate not inserted correctly; release lever obstructed.	Ensure the quick release plate is aligned properly and fully inserted until it clicks. Check for any obstructions around the release lever.

SPECIFICATIONS

Key technical specifications for the Kodak T455 Tripod with H4444 Head:

- **Brand:** KODAK
- **Model Name:** T455 Pro
- **Model Number:** T455 PRO
- **Material:** Aluminium
- **Item Weight:** 2064 Grams
- **Maximum Height:** 168.5 Centimetres
- **Minimum Height:** 62 Centimetres
- **Folded Size:** 61.95 cm (H)
- **Leg Diameter:** 34.6 mm

- **Number of Leg Sections:** 4
- **Maximum Weight Capacity:** 20 Kilograms
- **Head Type:** Video heads (H4444 Professional Hydraulic Head)
- **Special Features:** Flexible Professional Hydraulic Head, Quick Release Metal Plate, Anti-Slip Rubber Base, Flip Lock Design
- **Compatible Devices:** Camera
- **Colour:** Black
- **Water Resistance Level:** Not Water Resistant

WARRANTY INFORMATION

The Kodak T455 Tripod with H4444 Head comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For technical assistance, warranty claims, or any other inquiries regarding your Kodak T455 Tripod, please contact:

- **Manufacturer:** Eastman Kodak Company, 343 State Street, Rochester NY 14650-0205
- **Importer (India):** BHATIA PHOTO INDUSTRIES PVT LTD, Number- 204-205, Madhuban Building 55, Opposite Sona Sweets, Nehru Place, New Delhi-110019, Delhi, India

Please have your model number (T455 PRO) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question