

Sunbeam Dial Control

Sunbeam Twin Electric Heated Fleece Blanket User Manual

Model: Dial Control

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Sunbeam Electric Heated Fleece Blanket. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use with infants, children, incapacitated persons, or anyone insensitive to heat.
- Do not use with a damaged cord or plug.
- Do not use with other heating devices.
- Do not dry clean. Dry cleaning solvents may damage the insulation of the heating element.
- Do not use if wet.
- Do not use if folded, bunched, or tucked in.
- Do not insert pins or other metallic objects into the blanket.
- Always unplug the blanket when not in use.
- Keep the control unit away from drafts or open windows to prevent it from turning off automatically.

PRODUCT OVERVIEW

The Sunbeam Twin Electric Heated Fleece Blanket provides warmth and comfort with its soft fleece material and advanced heating system. It features an EasySet Pro Controller for precise temperature management.



The Sunbeam Twin Electric Heated Fleece Blanket, unfolded, showing the soft blue fleece material and the EasySet Pro Dial Control unit.



The heated blanket draped over a bed, illustrating its use as a top layer for warmth.



A stack of folded Sunbeam heated blankets, showcasing the quilted design and fleece texture.



84"

62"

Illustration only - product shape might vary.

An illustration detailing the dimensions of the Twin size blanket: 62 inches wide by 84 inches long.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the blanket and controller from the packaging.
2. **Placement:** Lay the blanket flat on your bed, ensuring it is not folded, bunched, or tucked under the mattress. The blanket should be placed directly on top of your fitted sheet.
3. **Connect Controller:** Locate the connector on the blanket. Firmly push the controller cord connector into the blanket connector until it clicks securely into place.
4. **Power Connection:** Plug the power cord into a 120V AC electrical outlet. Ensure the cord is not pinched or routed in a way that could cause damage.
5. **Position Controller:** Place the controller in a convenient location where it will not be covered by other bedding or fall off the bed.

OPERATING INSTRUCTIONS

The EasySet Pro Controller allows you to customize your warmth experience.

- **Turning On:** Press the power button on the controller to turn the blanket on.
- **Adjusting Heat:** Rotate the dial to select your desired heat setting from 1 to 10. Setting 1 is the lowest heat, and 10 is the highest.
- **Auto-Off Feature:** The blanket is equipped with a 10-hour auto-off feature for safety and energy conservation. After 10 hours of continuous operation, the blanket will automatically turn off.
- **Turning Off:** Press the power button again to turn the blanket off manually. Unplug the blanket from the wall outlet when not in use for extended periods.

Note: The ThermoFine warming system continuously monitors and adjusts the temperature to maintain consistent warmth throughout the night.

CARE AND MAINTENANCE

Proper care will extend the life of your heated blanket.

- **Before Washing:** Always disconnect the controller from the blanket and unplug the power cord from the wall outlet.
- **Washing:** Machine wash on a gentle cycle in cold water (30°C / 86°F) using a mild detergent. Do not bleach.
- **Rinsing:** Rinse on a normal cycle.
- **Drying:** Tumble dry on low heat. Remove promptly when dry. Do not iron. Do not dry clean.
- **Storage:** When not in use, store the blanket loosely folded in a cool, dry place. Avoid tightly folding or creasing the heating wires.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blanket not heating.	Controller not properly connected.	Ensure controller cord is firmly clicked into the blanket connector. Verify power cord is securely plugged into a working outlet. Turn the blanket off and then on again. Lay the blanket flat and smooth on the bed.
	Power cord not plugged in.	
	Auto-off feature activated.	
	Blanket is folded or bunched.	
Controller light blinking.	Internal error or blanket malfunction.	Unplug the blanket from the wall outlet for 30 seconds, then plug it back in. If the issue persists, contact customer support.
Blanket feels too hot or too cold.	Heat setting needs adjustment.	Adjust the dial on the controller to a higher or lower setting as desired. Allow a few minutes for the temperature to stabilize.

SPECIFICATIONS

- **Model:** Dial Control (Model Number: 2152482)
- **Size:** Twin (62"L x 84"W)
- **Material:** 100% Fleece (Polyester)
- **Color:** Blue
- **Heat Settings:** 10
- **Auto-Off Timer:** 10 Hours
- **Cable/Cord Length:** 13.5 Feet
- **Item Weight:** 4.84 pounds
- **UPC:** 053891158893

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Sunbeam website. Keep your purchase receipt as proof of purchase.

Manufacturer: Sunbeam

For further assistance, you may contact Sunbeam customer service through their official channels.

