

Manuals.plus /

› Disney /

› Disney Lilo and Stitch 9.5-inch Wall Clock Instruction Manual

## Disney 9.5-inch Lilo and Stitch Wall Clock

# Disney Lilo and Stitch 9.5-inch Wall Clock Instruction Manual

Model: 9.5-inch Lilo and Stitch Wall Clock

## INTRODUCTION

---

Thank you for purchasing the Disney Lilo and Stitch 9.5-inch Wall Clock. This analog wall clock features a beloved Disney character and is designed to provide accurate timekeeping with a silent operation. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

## SAFETY INFORMATION

---

- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly to prevent leakage and damage.
- Dispose of batteries according to local regulations.
- Ensure the clock is securely mounted to prevent it from falling and causing injury or damage.
- This product is not a toy. Adult supervision is recommended when children are near the clock.

## PACKAGE CONTENTS

---

Please check the package to ensure all items are present:

- 1 x Disney Lilo and Stitch 9.5-inch Wall Clock
- Mounting hardware (e.g., screw, wall anchor)



Image: Disney Lilo and Stitch 9.5-inch Wall Clock in its blue retail packaging.



Image: Disney Lilo and Stitch 9.5-inch Wall Clock in its pink retail packaging.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one (1) AA battery (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover securely.

### 2. Setting the Time

1. Locate the time setting knob on the back of the clock, usually a small wheel or dial.
2. Gently turn the knob in either direction until the hour and minute hands display the correct time.
3. Avoid forcing the hands directly, as this may damage the clock mechanism.

### 3. Mounting the Clock

1. Choose a suitable location on a wall where the clock will be visible and securely supported.
2. Using the provided mounting hardware (or appropriate hardware for your wall type), install a screw or hook into the wall. Ensure it is strong enough to hold the clock's weight (approximately 0.94 pounds).

3. Hang the clock onto the installed screw or hook using the hanging slot on the back of the clock.
4. Verify that the clock is stable and level.

## OPERATING INSTRUCTIONS

---

Once the battery is installed and the time is set, your Disney Lilo and Stitch Wall Clock will begin operating automatically. The clock features a silent movement, meaning there is no audible ticking sound, providing a peaceful environment.

- The hour hand indicates the hour.
- The minute hand indicates the minute.
- The second hand (if present) indicates the seconds.

## MAINTENANCE

---

### Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or the clock face.

### Battery Replacement

When the clock hands begin to slow down or stop, it is time to replace the battery. Follow the battery installation steps outlined in the Setup section.

## TROUBLESHOOTING

---

- **Clock not working:** Ensure the battery is inserted correctly with the correct polarity. Replace with a fresh AA battery.
- **Clock running slow or fast:** This usually indicates a low battery. Replace the battery with a new one.
- **Hands are stuck:** Check if the hands are bent or obstructed. If they are, gently try to straighten them without applying excessive force. If the issue persists, the internal mechanism may be damaged.
- **Clock falls off the wall:** Ensure the mounting hardware is appropriate for your wall type and securely installed. The clock should be hung properly on the hook.

## SPECIFICATIONS

---

Feature	Specification
Brand	Disney
Model	Lilo and Stitch Wall Clock
Display Type	Analog
Special Feature	Silent Clock
Product Dimensions	9.5"W x 9.5"H
Power Source	Battery Powered (1 x AA battery, not included)
Mounting Type	Wall Mount
Item Weight	0.94 Pounds

## WARRANTY AND SUPPORT

---

This Disney Lilo and Stitch Wall Clock is manufactured to high-quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For product support or inquiries, please contact the retailer or the official Disney consumer products support channels.