

CHiQ L40H7SX

CHiQ L40H7SX 40-inch Full HD Android Smart TV User Manual

Model: L40H7SX

1. SETUP

1.1 Unpacking

Carefully remove the TV from its packaging. Ensure all components are present:

- CHiQ L40H7SX Smart TV
- Remote Control
- Power Cable
- TV Stand Components (if applicable)
- User Manual (this document)

Inspect the TV for any damage. If damage is found, contact your retailer immediately.

1.2 Attaching the Stand

Place the TV screen-down on a soft, flat surface to prevent scratches. Align the stand components with the designated slots on the bottom of the TV. Secure the stand using the provided screws.



Image: The CHI Q L40H7SX television securely placed on its two-leg stand, ready for use on a flat surface.

1.3 Wall Mounting

The CHI Q L40H7SX supports VESA wall mounts. Refer to your wall mount's instructions for installation. Ensure the wall mount is compatible with the TV's weight and VESA pattern. Professional installation is recommended for wall mounting.



Image: The CHIQ L40H7SX television mounted flush against a wall, showcasing its slim profile and suitability for wall installation.

1.4 Connecting Peripherals

Connect your power cable, antenna, and any external devices (e.g., set-top box, gaming console, soundbar) to the appropriate ports on the TV. The TV features multiple HDMI and USB ports for connectivity.

2. OPERATING INSTRUCTIONS

2.1 Initial Power On and Android TV Interface

After connecting the power cable, press the power button on the remote control or the TV. Follow the on-screen instructions to complete the initial setup, including language selection, network connection, and Google account login. The Android TV interface provides access to apps, settings, and content.



Image: A screen capture showing the Android 9 Pie interface with various application icons such as YouTube, Spotify, Google Play Games, and other streaming services.

2.2 Google Assistant

Your CHiQ L40H7SX TV integrates Google Assistant. Press the Google Assistant button on your remote and speak into the microphone to control your TV, search for content, get information, and manage smart home devices.



What's the weather today ?

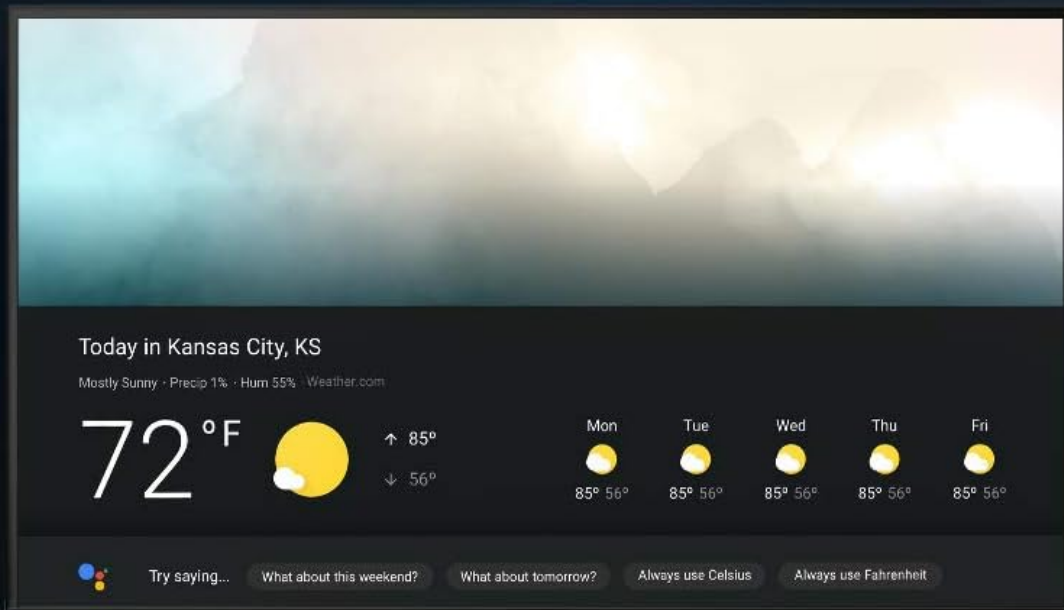 


Image: The Google Assistant interface displayed on the TV screen, showing a weather forecast for Kansas City, KS, in response to the query "What's the weather today?".

2.3 Connectivity

- **Wi-Fi:** Connect to your home wireless network via the settings menu to access online content and smart features.
- **Bluetooth:** Pair Bluetooth-enabled devices such as headphones or game controllers for enhanced audio or gaming experiences.
- **Chromecast Built-in:** Cast content from your compatible smartphone, tablet, or computer directly to your TV screen.



Image: A smartphone displaying a football match, with a wireless casting icon indicating that the content is being mirrored to a larger television screen, also showing the same match.

2.4 Smart Features

Access popular streaming services and applications directly from your TV:

- **Netflix:** Stream movies and TV shows.
- **YouTube:** Watch videos and subscribe to channels.
- **Amazon Prime Video:** Access a wide library of content.

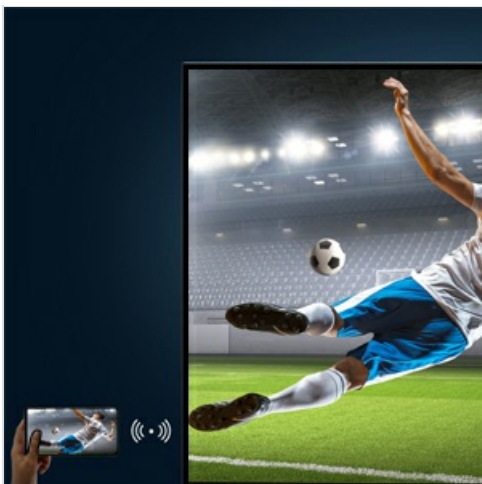


Image: A dark background displaying the prominent logos for Netflix, YouTube, and Amazon Prime Video, indicating their availability on the device.

2.5 HDR10 and Dolby Audio

Experience enhanced picture quality with HDR10 support, offering greater contrast and a wider range of colors. Dolby Audio provides rich, clear, and powerful sound for an immersive viewing experience.

HDR10

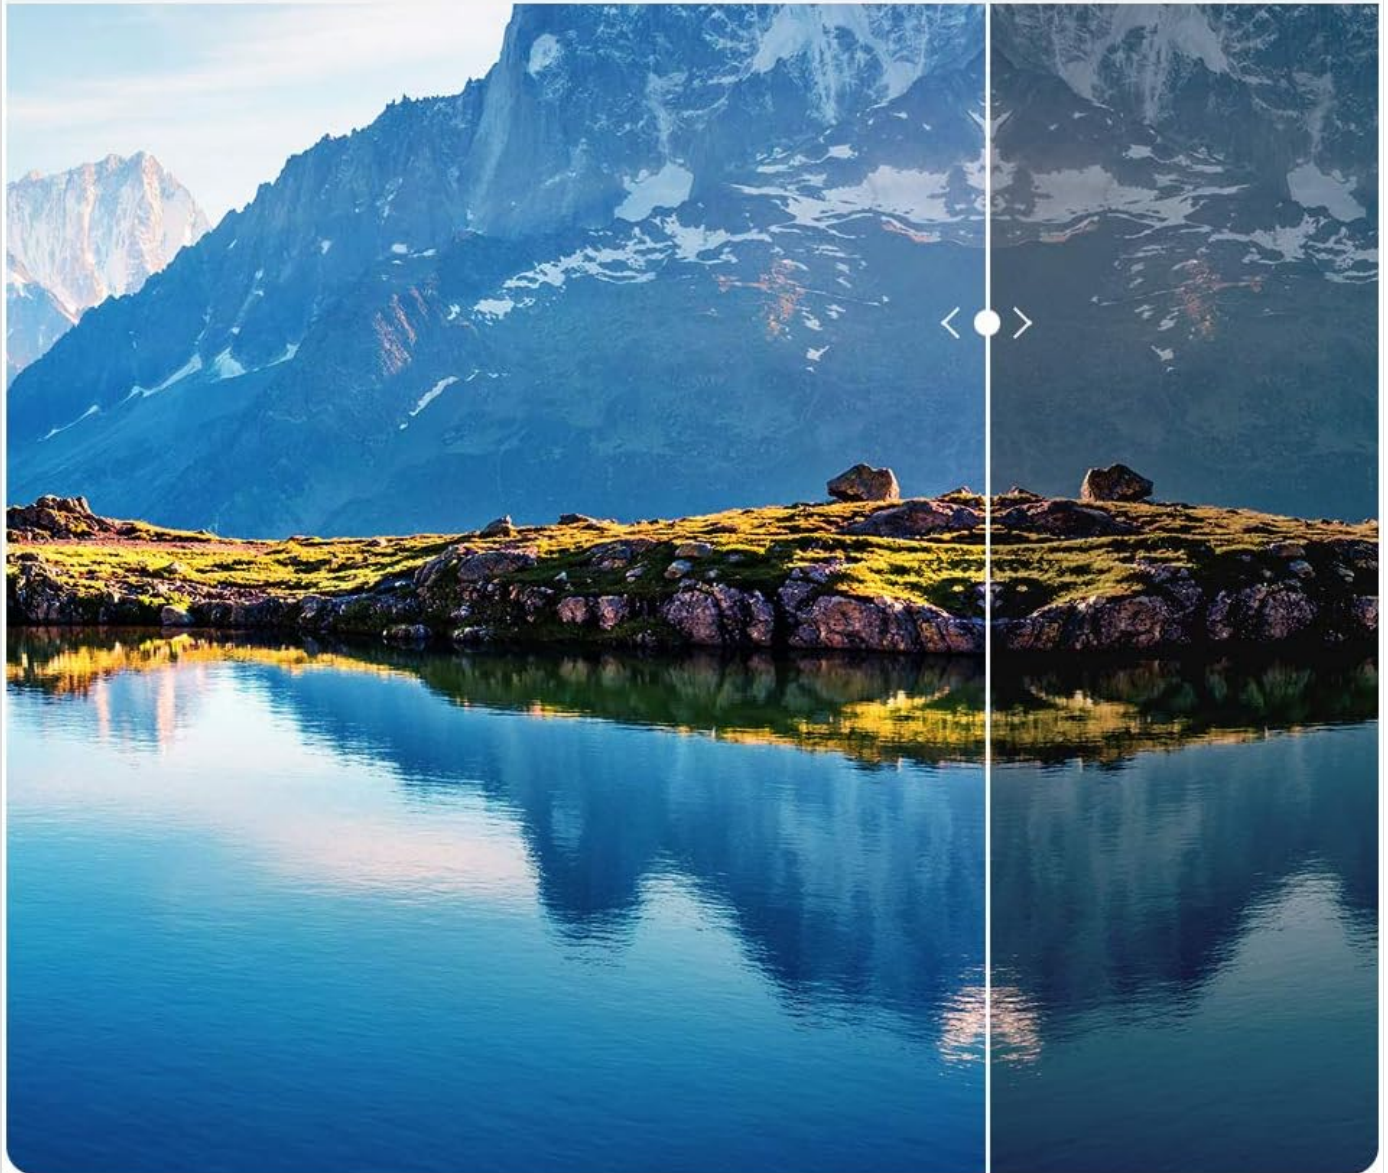


Image: A split screen comparison showing the visual difference between HDR10 and non-HDR content, with the HDR10 side displaying more vibrant colors and deeper contrast in a landscape scene.

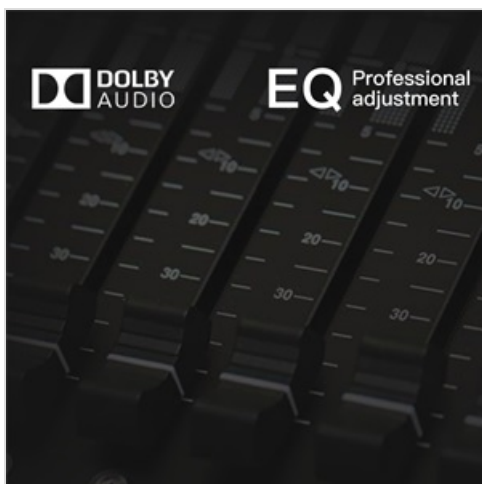


Image: A close-up of an audio equalizer interface, labeled with "Dolby Audio" and "Professional adjustment EQ," indicating advanced sound customization features.

3. MAINTENANCE

3.1 Cleaning the Screen

Before cleaning, unplug the TV from the power outlet. Use a soft, lint-free cloth, slightly dampened with water or a specialized screen cleaner. Do not spray liquid directly onto the screen. Avoid using abrasive cleaners or solvents.

3.2 General Care

Keep the TV away from direct sunlight, heat sources, and excessive dust. Ensure proper ventilation around the TV to prevent overheating. Do not block the ventilation openings.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your CHiQ L40H7SX TV.

Problem	Possible Cause / Solution
No Power	Ensure the power cable is securely connected to both the TV and a working power outlet. Try a different outlet.
No Picture / No Sound	Check input source. Ensure external devices are powered on and connected correctly. Check volume settings.
Remote Control Not Working	Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor.
Wi-Fi Connection Issues	Restart your router and modem. Re-enter Wi-Fi password. Ensure the TV is within range of your Wi-Fi network.
Slow Performance / Unresponsive Interface	Close unused applications. Clear cache in settings. Perform a factory reset if issues persist (note: this will erase all personal data and settings). Ensure the TV's software is up to date.
No Signal (Terrestrial/Cable)	Check antenna/cable connection. Perform a channel scan in the TV settings. Ensure your antenna is properly positioned.
Settings Resetting / Deconfiguring	Ensure the TV's software is up to date. If the issue persists, a factory reset might be necessary, followed by careful re-configuration.

5. SPECIFICATIONS

Key technical specifications for the CHiQ L40H7SX Smart TV:

Feature	Detail
Brand	CHiQ
Model	L40H7SX
Screen Size	40 Inches

Feature	Detail
Display Technology	LED
Resolution	1080p Full HD (1920 x 1080)
Refresh Rate	60 Hz
Operating System	Android
Connectivity	Bluetooth, Wi-Fi
Special Features	DLNA, Internet, HDR10, Dolby Audio, Chromecast, Google Assistant
Mounting Compatibility	Wall Mount, Table Stand
Product Dimensions (L x W x H)	89.79 x 22.91 x 56.84 cm
Product Weight	7.88 kg

5.1 Energy Efficiency

The CHiQ L40H7SX TV has an energy efficiency rating of G, consuming 47 kWh/1000h.

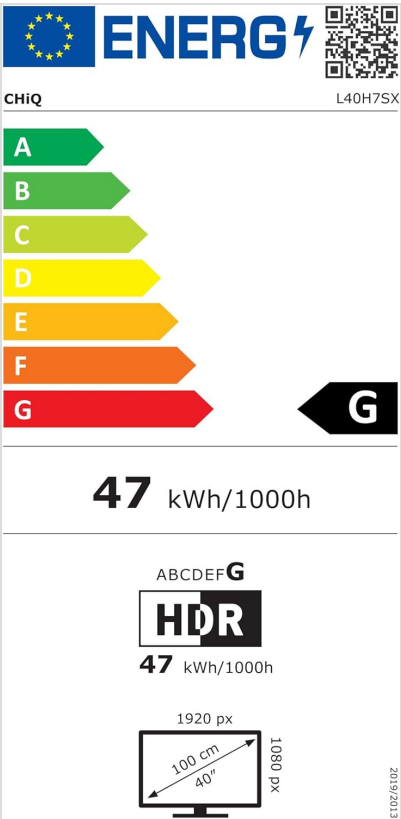 








Image: The EU Energy Label for the CHiQ L40H7SX television, indicating an energy efficiency class of G and an energy consumption of 47 kWh per 1000 hours. For more details, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/453711>

6. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your retailer. For technical support and further assistance, please visit the official CHiQ website or contact their customer service department.

You can also visit the CHiQ store on Amazon for additional product information:[CHiQ Amazon Store](#)

Related Documents - L40H7SX

	<p>CHiQ U65QM8V User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the CHiQ U65QM8V TV, covering safety instructions, setup, features like Smart TV, PVR, Bluetooth, Google Assistant, Chromecast, dbx-tv sound, and troubleshooting tips.</p>
	<p>CHiQ 32\"</p> <p>Explore the CHiQ 32" HD Google TV (L32M9P), a portable TV featuring Google Assistant, Google TV, Netflix, YouTube, and Amazon Prime Video. Learn about its specifications, features, and powering options, including an optional 5000mAh power bank.</p>
	<p>CHiQ U43G7H User Manual</p> <p>This user manual provides comprehensive instructions for the CHiQ U43G7H television, covering setup, operation, safety precautions, and troubleshooting.</p>
	<p>CHiQ L40G7H User Manual: Setup, Operation, and Troubleshooting</p> <p>Comprehensive user manual for the CHiQ L40G7H television, covering initial setup, operation, connections, smart features, troubleshooting, and safety instructions.</p>
	<p>CHiQ L32G7P User Manual: Setup, Operation, and Troubleshooting</p> <p>Comprehensive user manual for the CHiQ L32G7P television, covering setup, connections, basic operations, smart TV features, troubleshooting, and safety instructions.</p>
	<p>CHiQ U55G7H Smart TV User Manual</p> <p>Comprehensive user manual for the CHiQ U55G7H Smart TV, covering setup, operation, safety instructions, connecting devices, troubleshooting, and advanced features like Google Assistant and Chromecast.</p>