

[Manuals.plus](#) /

› [Tixpc](#) /

› Tixpc Kids Smart Watch S16 Instruction Manual

## Tixpc S16

# Tixpc Kids Smart Watch S16 Instruction Manual

Model: S16

## 1. INTRODUCTION

Welcome to the Tixpc Kids Smart Watch S16. This device is designed to provide children aged 4-12 with a fun and interactive experience, featuring a camera, music player, pedometer, alarm clock, games, calculator, and flashlight. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your new smartwatch.

## 2. WHAT'S IN THE BOX

Upon opening the package, please verify that all items are present:

- Tixpc Kids Smart Watch S16 (with Watch Band)
- USB Charging Cable
- User Manual (this document)

## 3. PRODUCT OVERVIEW

The Tixpc Kids Smart Watch S16 is equipped with various features to engage and assist children.

# Multi-function kids Smartwatch



Image: Overview of the Tixpc Kids Smart Watch S16 interface displaying its multi-function capabilities.

## Key Features:

- **Camera & Video Recording:** Capture photos and videos directly from the watch.
- **Music Player:** Enjoy pre-loaded music or add your own via USB.
- **39 Puzzle Games:** Engage in educational and entertaining games.
- **Pedometer:** Track steps and activity levels.
- **Alarm Clock:** Set multiple alarms for daily routines.
- **Calculator:** Perform basic arithmetic operations.
- **Flashlight:** A convenient built-in light.
- **Customizable Themes & Wallpapers:** Personalize the watch interface.
- **Recorder:** Record voice notes.



- **To Power Off:** Press and hold the Power/Home button until a power-off option appears on the screen, then confirm.

### 4.3 Initial Settings

Upon first power-on or after a reset, you may need to set the date and time. Navigate to the "Settings" menu to adjust these options. The watch supports both 12-hour and 24-hour formats.

## 5. OPERATING INSTRUCTIONS

---

The Tixpc Kids Smart Watch S16 features a touchscreen interface for easy navigation. Swipe left or right to browse through applications. Tap an icon to open an application.

### 5.1 Camera and Video

1. From the main screen, tap the **Camera** icon to open the camera application.
2. Tap the screen to take a photo.
3. To switch to video mode, look for a video camera icon within the camera app. Tap it to start recording, and tap again to stop.
4. Photos and videos are saved to the watch's internal memory.
5. You can apply "Magic Pop Stickers" to photos for added fun.

## Custom wallpaper



## Photos



## Video Recording



Video  
Player



Fashion  
Sticker

POP



Image: A child interacting with the watch's camera feature, demonstrating the "Magic Head Sticker" option.

## 5.2 Music Player

1. Tap the **Music** icon to open the music player.
2. Use the on-screen controls to play, pause, skip tracks, and adjust volume.
3. To add music: Connect the watch to a computer using the USB cable. The watch will appear as a removable drive. Drag and drop MP3 files into the "My Music" folder on the watch.



Image: Music player icon.

## 5.3 Games

1. Tap the **Games** icon to access the 39 built-in puzzle games.

2. Select a game from the list and follow the on-screen instructions to play.



Image: A child interacting with the watch's game feature, highlighting the variety of 39 puzzle games.

#### 5.4 Pedometer

1. Tap the **Pedometer** icon to view your daily step count and estimated calories burned.
2. The pedometer automatically tracks activity when the watch is worn.



Image: Pedometer icon.

#### 5.5 Alarm Clock

1. Tap the **Alarm** icon.

2. You can set up to 3 alarms. Tap an empty slot or an existing alarm to edit.
3. Set the time, repeat days, and alarm tone.

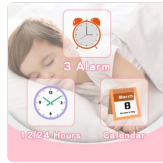


Image: Alarm clock icon.



Image: Multiple alarm modes for habit tracking and routine management.

## 5.6 Calculator

1. Tap the **Calculator** icon to open the calculator.
2. Use the on-screen number pad and operators to perform basic calculations.



Image: Calculator icon.

## 5.7 Flashlight

1. Tap the **Torch** icon to turn the flashlight on or off.



Image: Flashlight icon.

## 5.8 Other Functions

- **Recorder:** Record voice memos.
- **Calendar:** View the current date.
- **Timer/Stopwatch:** Access these tools from the "Tools" menu.
- **Themes/Wallpapers:** Customize the watch's appearance via the "Theme" or "Settings" menu.

## 6. MAINTENANCE

### 6.1 Cleaning

Wipe the watch screen and band with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the charging port or speaker.

### 6.2 Water Resistance

The Tixpc Kids Smart Watch S16 has an IP67 waterproof rating, meaning it is resistant to splashes and brief immersion in shallow water (up to 1 meter for 30 minutes). It is **not recommended** for swimming, showering, or prolonged water exposure. Ensure the charging port cover is securely closed when near water.

### 6.3 Storage

Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

| Problem                                  | Possible Cause                                                                    | Solution                                                                                                                              |
|------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Watch does not turn on.                  | Low battery.                                                                      | Charge the watch for at least 30 minutes.                                                                                             |
| Screen is unresponsive.                  | Software glitch or temporary freeze.                                              | Perform a soft reset by pressing and holding the Power/Home button for 10-15 seconds until the watch restarts.                        |
| Cannot add music files.                  | Incorrect file format or location.                                                | Ensure files are in MP3 format and placed in the "My Music" folder when connected to a computer.                                      |
| Pedometer not tracking steps accurately. | Watch not worn correctly or sensor obstruction.                                   | Ensure the watch is worn snugly on the wrist. Avoid excessive arm movements that are not steps.                                       |
| Short battery life.                      | Frequent use of power-intensive features (games, camera) or background processes. | Reduce screen brightness, close unused applications, and limit continuous use of games or video recording. Ensure full charge cycles. |

## 8. SPECIFICATIONS

| Feature          | Detail      |
|------------------|-------------|
| Model Name       | S16         |
| Operating System | Watch OS    |
| Screen Size      | 1.54 inches |

| Feature                 | Detail                                    |
|-------------------------|-------------------------------------------|
| Display Type            | LCD                                       |
| Resolution              | 240 x 240                                 |
| Memory Storage Capacity | 512 MB                                    |
| Battery Capacity        | 400 mAh                                   |
| Battery Charge Time     | 3 hours                                   |
| Battery Average Life    | Up to 20 days (standby)                   |
| Connectivity Technology | USB                                       |
| Water Resistance Level  | IP67 (Splash resistant, not for swimming) |
| Band Material Type      | Silicone                                  |
| Case Material Type      | Aluminum                                  |
| Target Audience         | Kids                                      |

## 9. WARRANTY AND SUPPORT

### 9.1 Return Policy

This product is subject to a 30-day return/replacement policy from the date of purchase. Please refer to your retailer's specific return guidelines for detailed information.

### 9.2 Technical Support

For any technical assistance or inquiries regarding your Tixpc Kids Smart Watch S16, please contact Tixpc customer support. Tixpc is committed to providing 365-day quality assurance and lifetime technical support.



Image: Tixpc brand logo.

## 10. PRODUCT VIDEO

Watch this official product video for a visual guide to the Tixpc Kids Smart Watch S16 features and operation.

Your browser does not support the video tag.

Video: An overview of the Tixpc S16 Kids Smart Watch features and user interface.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

<https://manuals.plus/asin/B09QFS12G2>

More documents and user manuals: <https://manuals.plus/>