

DECAKILA KUTT009R

DECAKILA Hot Air Popcorn Popper (Model KUTT009R) Instruction Manual

Your guide to safe and efficient operation.

1. INTRODUCTION

Thank you for choosing the DECAKILA Hot Air Popcorn Popper. This appliance is designed to quickly and easily prepare delicious, oil-free popcorn using hot air circulation. Please read this manual thoroughly before first use to ensure proper operation and to maximize the lifespan of your product. Keep this manual for future reference.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Do not add oil, butter, or other liquids to the popping chamber. This appliance operates with hot air only.

3. PRODUCT OVERVIEW

The DECAKILA Hot Air Popcorn Popper consists of several key components designed for ease of use and efficient popcorn preparation.

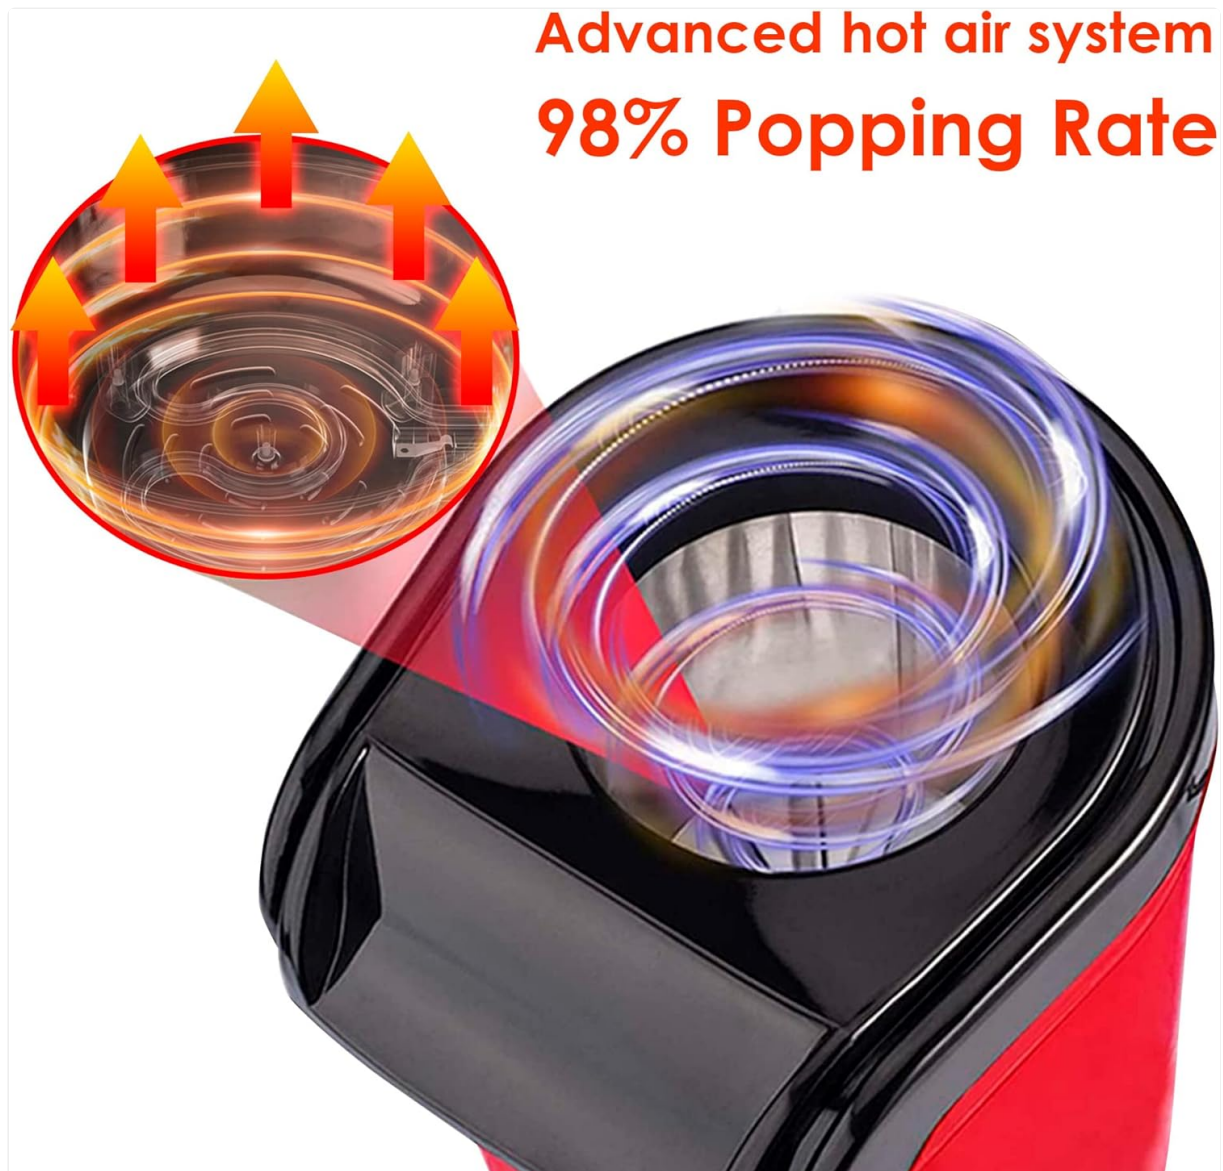


Image: The DECAKILA Hot Air Popcorn Popper showing its main unit, clear top cover, and measuring cup.

Components:

- **Main Unit:** Contains the heating element and air circulation system.
- **Clear Top Cover:** Directs popped corn into a bowl and prevents unpopped kernels from escaping.
- **Measuring Cup:** Used to measure the correct amount of popcorn kernels and can also be used to melt butter or chocolate.
- **On/Off Switch:** Located on the side of the main unit for easy operation.

4. SETUP

Before using your popcorn popper for the first time, follow these steps:

1. Unpack the appliance and remove all packaging materials.
2. Wipe the exterior of the main unit with a damp cloth.
3. Wash the clear top cover and measuring cup in warm, soapy water. Rinse thoroughly and dry.

4. Place the popcorn popper on a stable, flat, heat-resistant surface.
5. Ensure the On/Off switch is in the 'Off' position before plugging into a power outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to make popcorn with your DECAKILA Hot Air Popcorn Popper:

1. **Measure Kernels:** Use the provided measuring cup to add one level scoop of popcorn kernels (approximately 8 cups capacity) into the popping chamber. Do not overfill or add less than the recommended amount. Do not add oil or butter directly into the popping chamber.



Image: Adding popcorn kernels to the popping chamber.

2. **Place Cover and Bowl:** Securely place the clear top cover onto the main unit. Position a large, heat-resistant bowl directly under the popcorn chute to collect the popped corn.
3. **Optional Butter/Chocolate Melting:** If desired, place butter or chocolate in the measuring cup on top of the clear cover. The heat from the popper will melt it while the popcorn is popping.

Advanced hot air system
98% Popping Rate

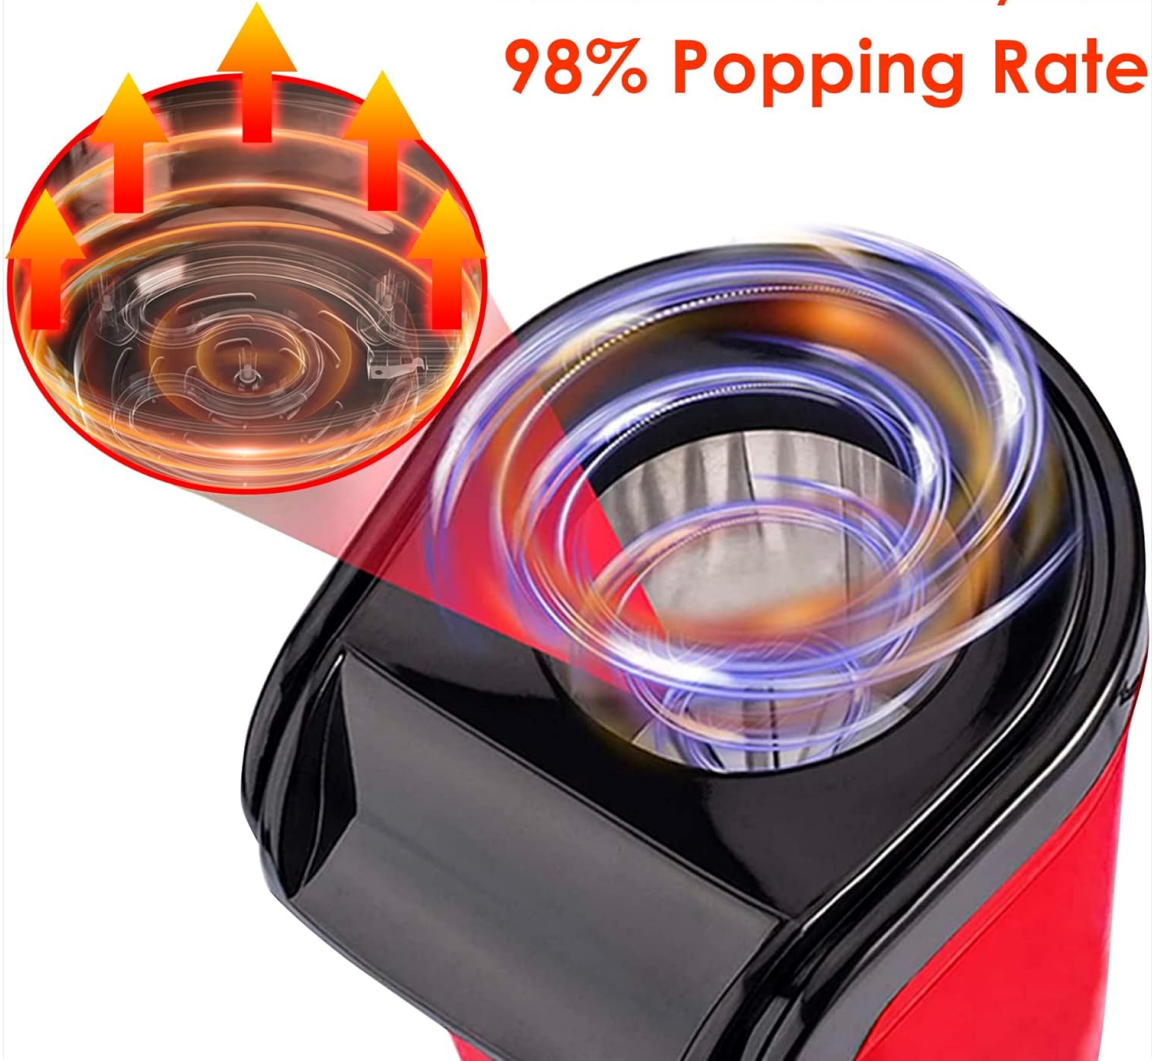


Image: Placing the measuring cup with butter on the lid.

4. **Start Popping:** Plug the appliance into a standard electrical outlet. Press the On/Off switch to the 'On' position. The popping process will begin almost immediately.

MAKE A VARIETY OF FLAVORS OF POPCORN



Image: Turning on the popcorn popper.

5. **Collect Popcorn:** Popcorn will begin to emerge from the chute within 2-3 minutes. Allow all kernels to pop before turning off the machine.
6. **Turn Off and Unplug:** Once popping stops, switch the On/Off button to 'Off' and unplug the appliance from the wall outlet.
7. **Serve:** Carefully remove the clear top cover and measuring cup (they may be hot). Pour the melted butter or chocolate over the freshly popped corn, if desired. Season to taste.



Image: Freshly popped corn being seasoned with melted chocolate.

Operational Video:

Your browser does not support the video tag.

Video: This video demonstrates the simple steps to operate the DECAKILA Hot Air Popcorn Popper, from adding kernels to collecting the popped corn and adding toppings.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene.

1. **Always Unplug:** Ensure the appliance is unplugged and completely cool before cleaning.
2. **Clean Popping Chamber:** Wipe the inside of the popping chamber with a dry cloth to remove any unpopped kernels or residue. Do not use abrasive cleaners or immerse the main unit in water.
3. **Wash Removable Parts:** The clear top cover and measuring cup can be washed in warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.
4. **Exterior Cleaning:** Wipe the exterior of the main unit with a damp cloth.
5. **Storage:** Store the appliance in a dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your popcorn popper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Popcorn does not pop.	Appliance not plugged in; power switch off; old/dry kernels.	Ensure unit is plugged in and switched on. Use fresh popcorn kernels.
Many unpopped kernels remain.	Old kernels; insufficient kernel amount; unit not fully heated.	Use fresh kernels. Ensure correct measurement. Allow unit to run until popping stops.
Popcorn flies out of the chute.	Bowl not positioned correctly; overfilling the popping chamber.	Ensure a large bowl is directly under the chute. Do not exceed the recommended kernel amount.
Burning smell during operation.	Residue in popping chamber; foreign object.	Unplug and allow to cool. Clean the popping chamber thoroughly. Ensure no foreign objects are present.

8. SPECIFICATIONS

Feature	Detail
Brand	DECAKILA
Model Number	KUTT009R
Power	1200W
Capacity	8 Cups
Material	PP (Polypropylene)
Product Dimensions	7.28 x 4.53 x 10.43 inches
Item Weight	1.83 pounds
Special Feature	Manual Operation



Image: Product dimensions for the DECAKILA Hot Air Popcorn Popper.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or contact DECAKILA customer service directly. Keep your purchase receipt as proof of purchase.